

MOX Systems - ტექნიკური დოკუმენტაცია

assembly-manual-visio-en.pdf

ტექნიკური თარგმანი: განზომილებისთვის გაეცანით ორიგინალურ ნახატებს და საცნობარო გვერდებს.


წყაროს გვერდი 1

Visio ASSEMBLY GUIDE


- 1 შეარჩიეთ სწორი პროფილი იატაკის სისქის მიხედვით.
- 2 დაიტანეთ სახსარი და შესაბამისად მოათავსეთ პროფილების სამაგრი.
- 3 დააჭირეთ პროფილს სახსარზე დამაგრებამდე.
- 4 მოათავსეთ ხაღია პროფილზე.
- 5 გაჭერით პროფილები 45 გრადუსით გარე კუთხეებისთვის.
- 6 გაასწორეთ პროფილები გარე კუთხეებში და მოათავსეთ ისინი სახსარში.
- 7 მოათავსეთ ხაღია პროფილზე.
- 8 შიდა კუთხეებისთვის პროფილების გაჭრა 45 გრადუსით.
- 9 გაასწორეთ პროფილები შიდა კუთხეებში და მოათავსეთ ისინი სახსარში.
- 10 მოათავსეთ ხაღია პროფილზე. 6 8

გვერდი 1/1


ორიგინალური ნახატები და საცნობარო გვერდები

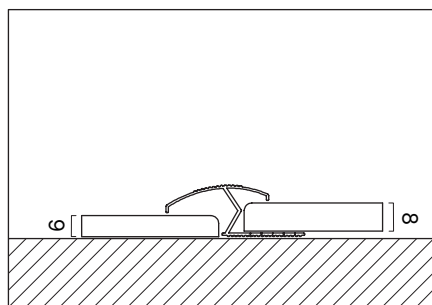


1 Pick the correct profile according to the flooring thickness.

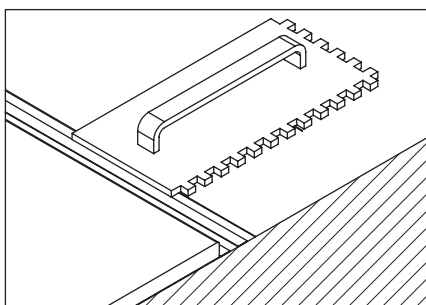


2 Apply joint and place the profiles anchor accordingly.

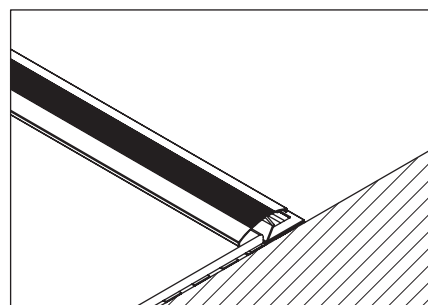


3 Press the profile until it is fixed to the joint.

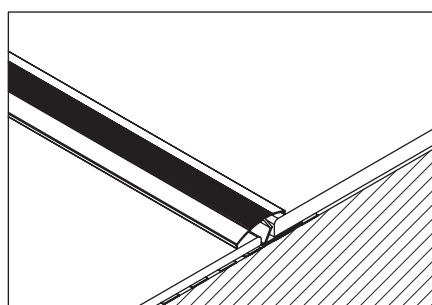


4 Place the carpet to the profile.

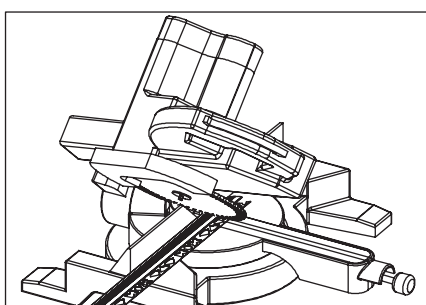


5 Cut profiles 45 degrees for external corners.

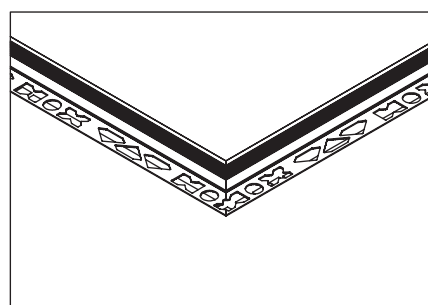


6 Align the profiles at the external corners and place them into the joint.

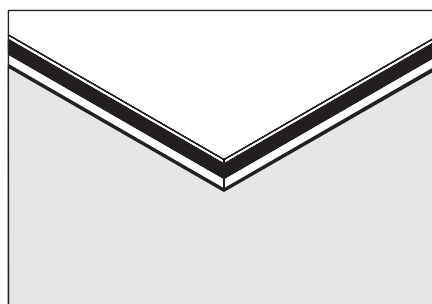


7 Place the carpet to the profile.

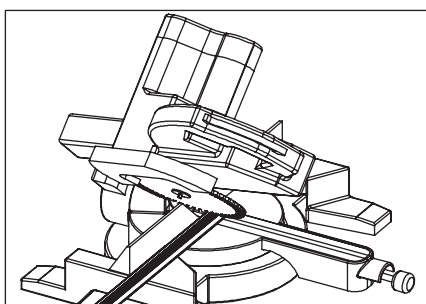

8 Cut profiles 45 degrees for internal corners.

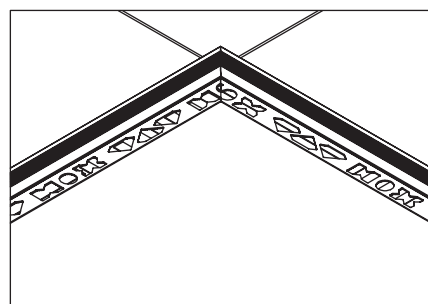

9 Align the profiles at the internal corners and place them into the joint.

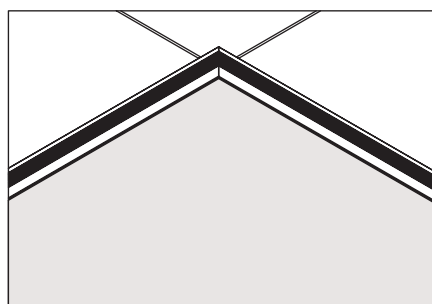

10 Place the carpet to the profile.