

MOX Systems - техникалық құжаттама

assembly-manual-crispo-en.pdf

Техникалық аударма: өлшемдер үшін түпнұсқа сызбаларды және анықтамалық беттерді қараңыз.


Бастапқы бет 1

Crispo ЖИНАУ НҰСҚАУЛЫҒЫ


- 1 Қабырғаға бекіту құралдарын 50 см аралықпен орналастырып, қабырғаны бұранда тесіктерінен белгілеңіз.
- 2 Белгіленген нүктелерді бұрғылаңыз.
- 3 Бұрғыланған тесіктерге қабырға материалына сәйкес дұрыс дюбельдерді салыңыз.
- 4 Қабырғаға бекіту құралдарын 50 см аралықпен бұрғыланған жерлерге бұрап бекітіңіз.
- 5 Профильді суреттегідей қабырғаға бекіту құралдарына жинаңыз.
- 6 Профиль шегелері мен бекіту құралының шегелері бір-бірімен толық жалғанғанын және профиль табанының еденге бекітілгеніне көз жеткізіңіз.
- 7 Сыртқы бұрыштар үшін профильдерді 45 градусқа кесіңіз.
- 8 Қабырғаға бекіту құралдарын бұрыштарға жабылатындай етіп бекітіңіз және оған 45 градусқа кесілген профильдерді жинаңыз.
- 9 45 градусқа кесілген профильдердің сыртқы бұрыштарда бір-біріне толығымен бекітілгеніне көз жеткізіңіз.
- 10 Ішкі бұрыштар үшін профильдерді 45 градусқа кесіңіз.
- 11 Қабырғаға бекіту құралдарын бұрыштарға жабылатындай етіп бекітіңіз және оған 45 градусқа кесілген профильдерді жинаңыз.
- 12 45 градусқа кесілген профильдердің ішкі бұрыштарда бір-біріне толығымен бекітілгеніне көз жеткізіңіз.

1/1 бет


Түпнұсқа сызбалар мен анықтамалық беттер

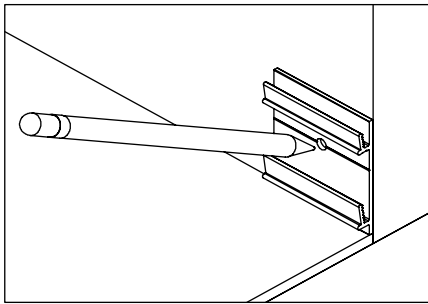


1 Place the wall fixation tools at 50cm intervals and mark the wall from the screw holes.

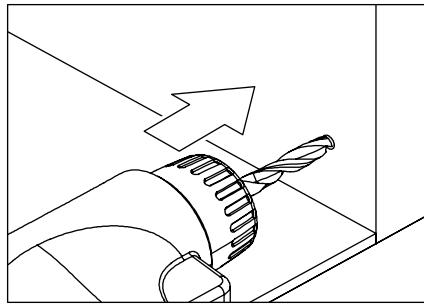


2 Drill the points that you have already marked.

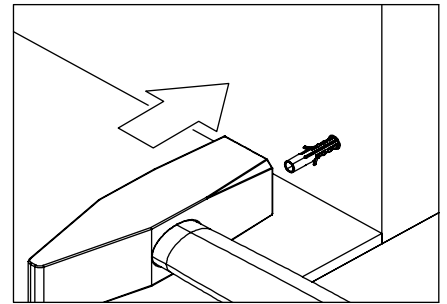


3 Place the correct dowels according to the wall material into the drilled holes.

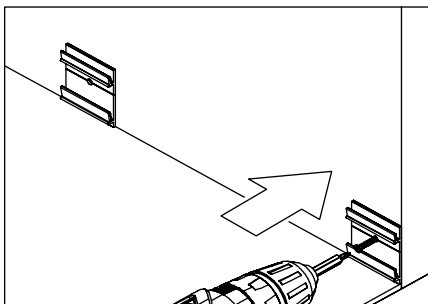


4 Screw the wall fixation tools to the places that are drilled at 50cm intervals.

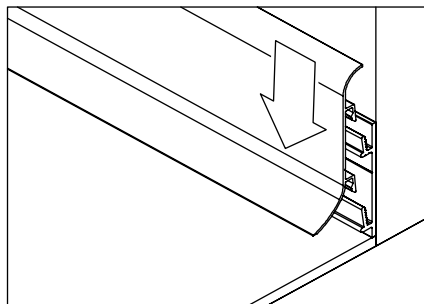


5 Assemble the profile on the wall fixation tools just like in the picture.

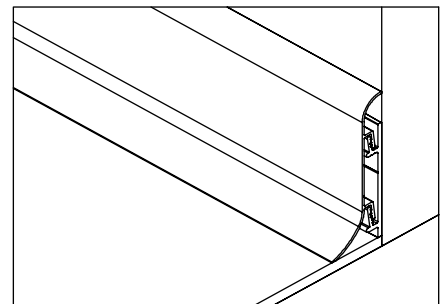


6 Make sure that the profile nails and the fixation tool's nails are completely connected to each other and be sure that the profile sole is fixed to the floor.

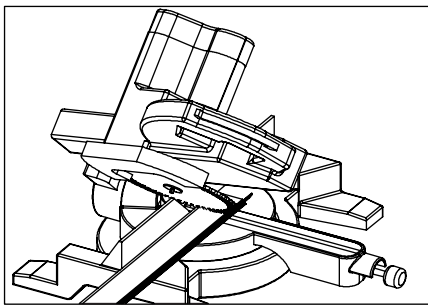


7 Cut profiles 45 degrees for external corners.

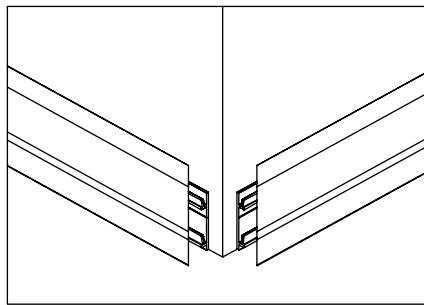


8 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

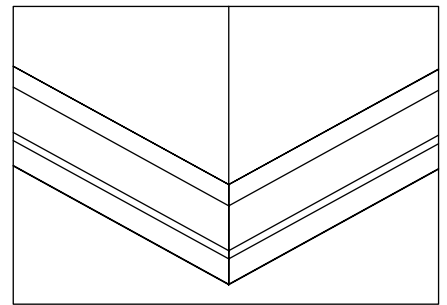


9 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

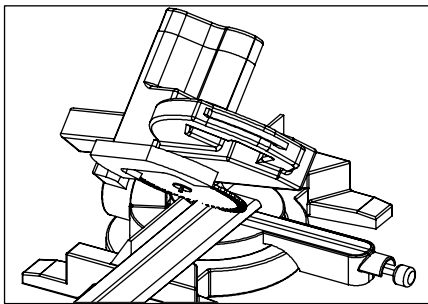

10 Cut profiles 45 degrees for internal corners.

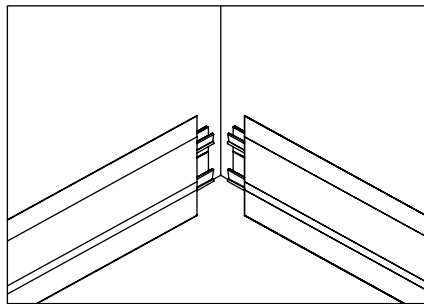

11 Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

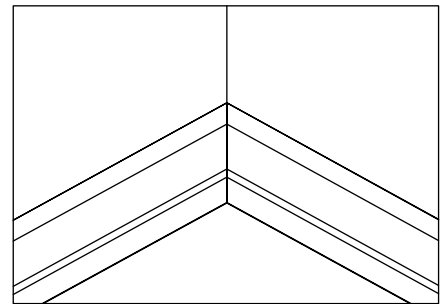

12 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.