

MOX Systems - техникалық құжаттама

assembly-manual-mps-e-en.pdf

Техникалық аударма: өлшемдер үшін түпнұсқа сызбаларды және анықтамалық беттерді қараңыз.


Бастапқы бет 1

Mps-E ЖИНАУ НҰСҚАУЛЫҒЫ


- 1 Еден қалыңдығына сәйкес дұрыс профильді таңдаңыз.
 - 2 Біріктіріңіз және профильдер анкерін сәйкесінше орналастырыңыз.
 - 3 Профильді түйінге бекітілгенше басыңыз.
 - 4 Еден төселетін жерлерге түйіспелерді жағыңыз.
 - 5 Еденді профильге қойып, туралаңыз.
 - 6 Сыртқы бұрыштар үшін профильдерді 45 градусқа кесіңіз.
- Профильдерді сыртқы бұрыштарда туралаңыз және оларды біріктіруге басыңыз.
- 8 Еденді профильге қойып, туралаңыз.
 - 9 Ішкі бұрыштар үшін профильдерді 45 градусқа кесіңіз.
 - 10 Профильдерді ішкі бұрыштарда туралаңыз және оларды түйіспеге басыңыз.
 - 11 Еденді профильге қойып, туралаңыз.

1/1 бет


Түпнұсқа сызбалар мен анықтамалық беттер

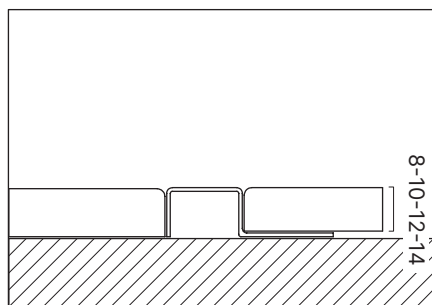


- 1 Pick the correct profile according to the flooring thickness.

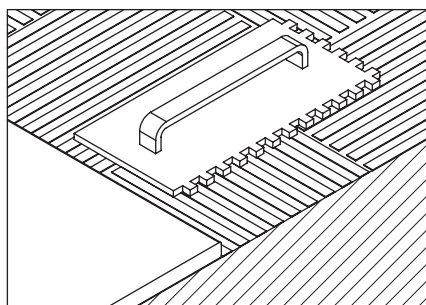


- 2 Apply joint and place the profiles anchor accordingly.

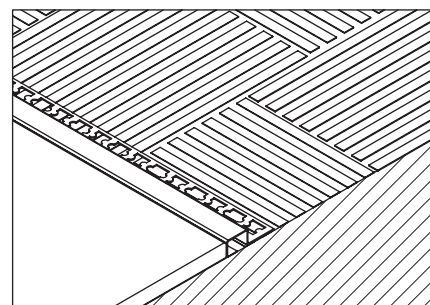


- 3 Press the profile until it is fixed to the joint.

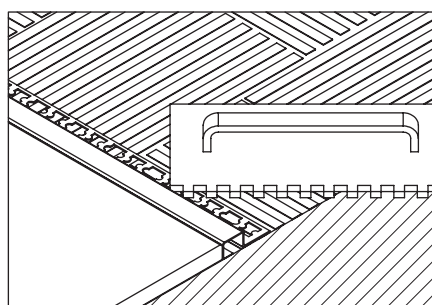


- 4 Apply joint to the places where the flooring will be placed.

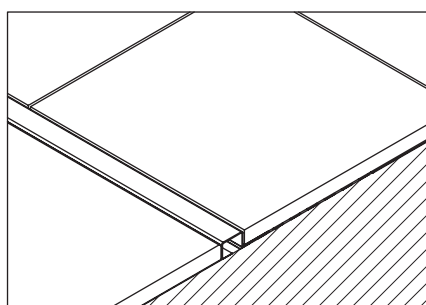


- 5 Place and align the flooring to the profile.

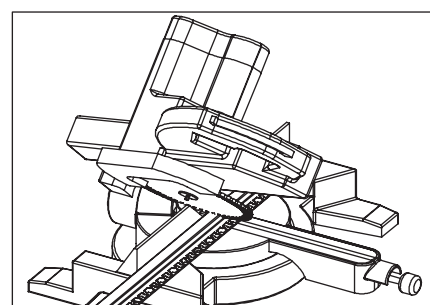


- 6 Cut profiles 45 degrees for external corners.

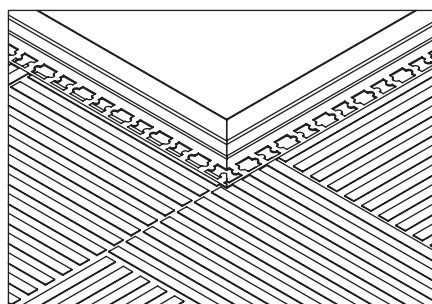


- 7 Align the profiles at the external corners and press them into the joint.

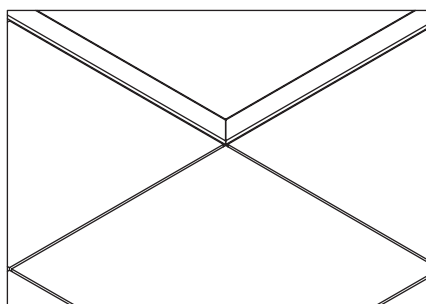


- 8 Place and align the flooring to the profile.

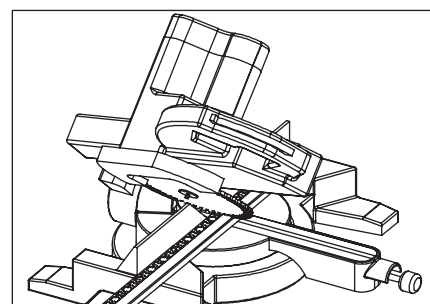

- 9 Cut profiles 45 degrees for internal corners.

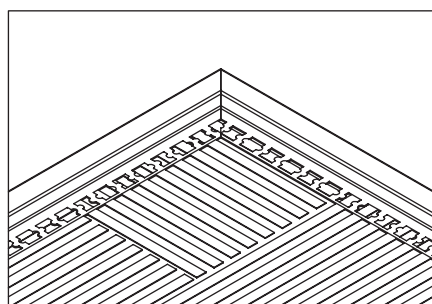

- 10 Align the profiles at the internal corners and press them into the joint.

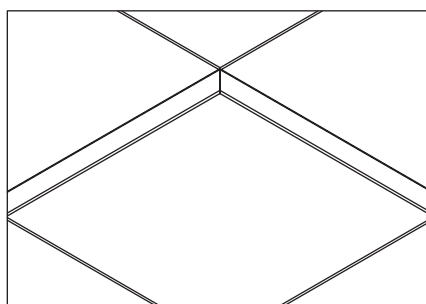

- 11 Place and align the flooring to the profile.