

MOX Systems - техникалық құжаттама

assembly-manual-mps-tb-en.pdf

Техникалық аударма: өлшемдер үшін түпнұсқа сызбаларды және анықтамалық беттерді қараңыз.

Бастапқы бет 1

Mps-Tb ЖИНАУ НҰСҚАУЛЫҒЫ

Еденнің қалыңдығына сәйкес дұрыс профильді таңдаңыз.

2 Біріктіріңіз және профильдер анкерін сәйкесінше орналастырыңыз.

3 Профильді түйінге бекітілгенше басыңыз.

4 Еден төселетін жерлерге түйіспелерді жағыңыз.

5 Еденді профильге қойып, туралаңыз.

6 Сыртқы бұрыштар үшін профильдерді 45 градусқа кесіңіз.

Профильдерді сыртқы бұрыштарда туралаңыз және оларды біріктіруге басыңыз.

8 Еденді профильге қойып, туралаңыз.


9 Ішкі бұрыштар үшін профильдерді 45 градусқа кесіңіз.

10 Профильдерді ішкі бұрыштарда туралаңыз және оларды түйіспеге басыңыз.


11 Еденді профильге қойып, туралаңыз.

1/1 бет


Түпнұсқа сызбалар мен анықтамалық беттер

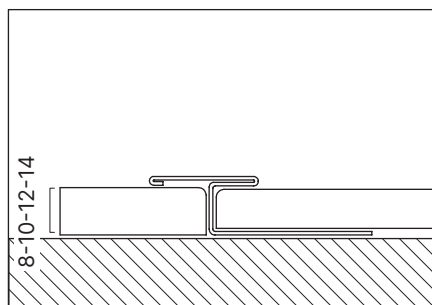


1 Pick the correct profile according to the flooring thickness.

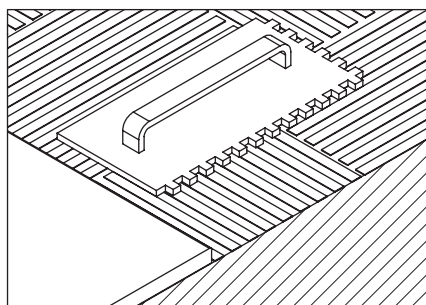


2 Apply joint and place the profiles anchor accordingly.

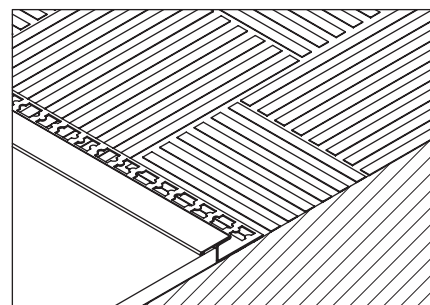


3 Press the profile until it is fixed to the joint.

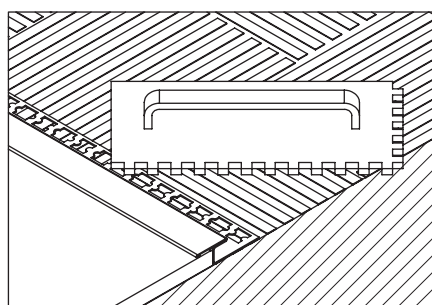


4 Apply joint to the places where the flooring will be placed.

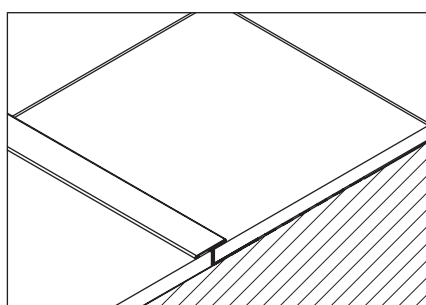


5 Place and align the flooring to the profile.

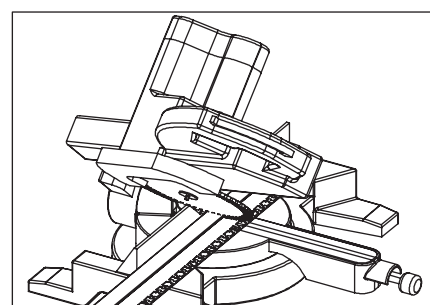


6 Cut profiles 45 degrees for external corners.

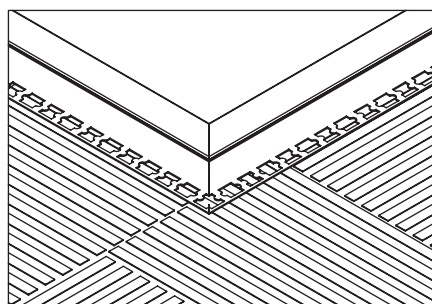


7 Align the profiles at the external corners and press them into the joint.

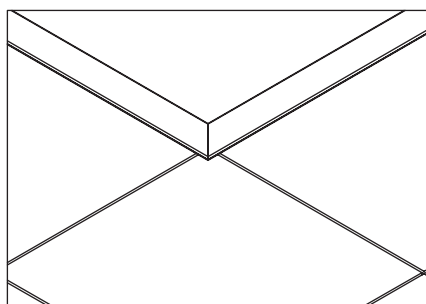


8 Place and align the flooring to the profile.

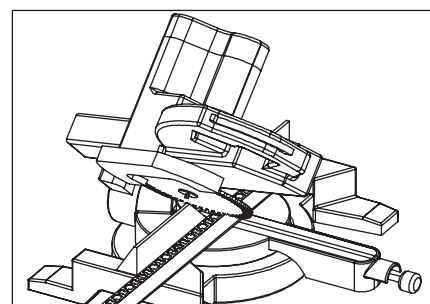

9 Cut profiles 45 degrees for internal corners.

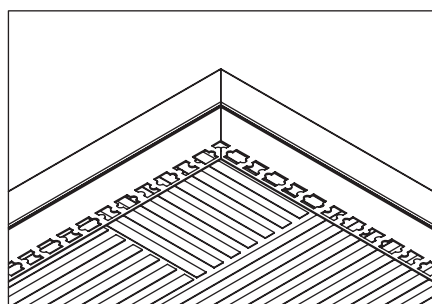

10 Align the profiles at the internal corners and press them into the joint.

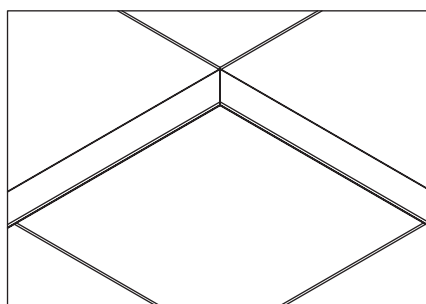

11 Place and align the flooring to the profile.