

MOX Systems - техникалық құжаттама

assembly-manual-revio-en.pdf

Техникалық аударма: өлшемдер үшін түпнұсқа сызбаларды және анықтамалық беттерді қараңыз.

Бастапқы бет 1

Revio ЖИНАУ НҰСҚАУЛЫҒЫ

Желіммен қолдану

1 Профильге силиконды немесе қосқышты жағыңыз.

2 Профильді еденге бекітіп, оны басыңыз.

3 Кілемді профильге қойыңыз.

Бұрандалы қолдану

11 Профильді бұрандалармен бекітіңіз.

2 Кілемді профильге қойыңыз.

Köşe Birleşimleri

1 Ішкі бұрыштар үшін профильдерді 45 градусқа кесіңіз.

2 Профильдерді ішкі бұрыштарда туралаңыз және оларды біріктіруге орналастырыңыз.

3 Кілемді профильге қойыңыз.


4 Сыртқы бұрыштар үшін профильдерді 45 градусқа кесіңіз.

5 Профильдерді сыртқы бұрыштарда туралаңыз және оларды біріктіруге орналастырыңыз.


6 Кілемді профильге қойыңыз.

Түпнұсқа сызбалар мен анықтамалық беттер


Application with Adhesive

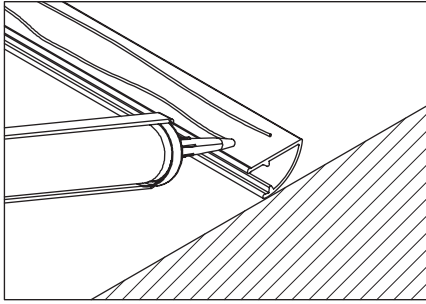

1 Apply silicone or joint to the profile.

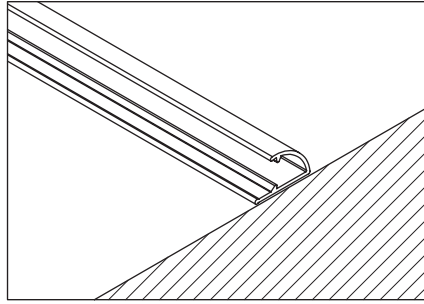


2 Fix the profile to the floor and press it.

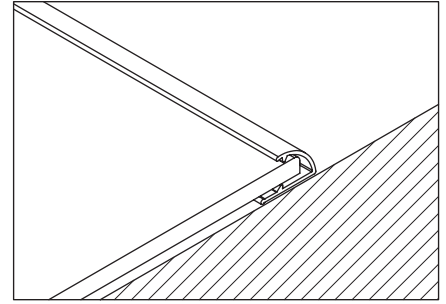


3 Place the carpet to the profile.

Application with Screw

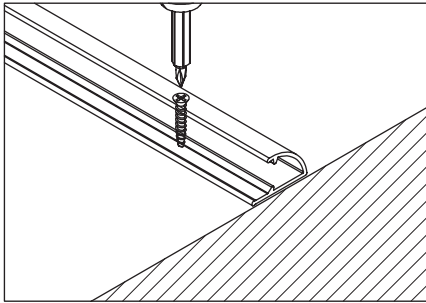


1 Fix the profile with screws.

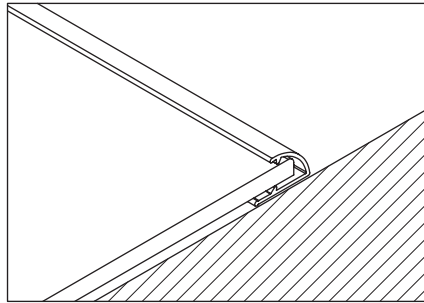


2 Place the carpet to the profile.


Köşe Birleşimleri

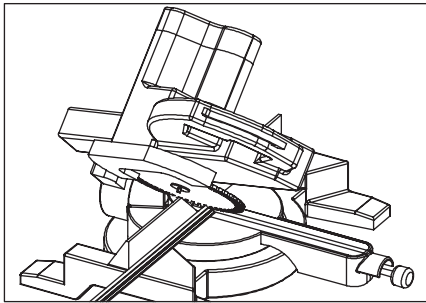


1 Cut profiles 45 degrees for internal corners.

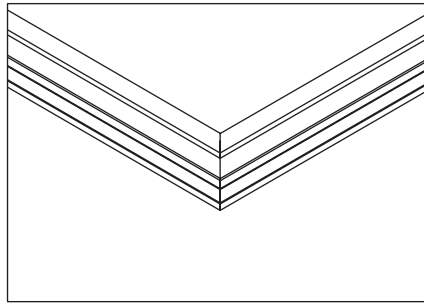


2 Align the profiles at the internal corners and place them into the joint.

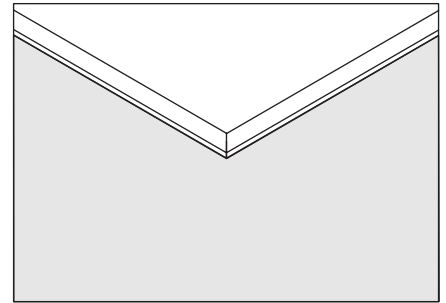


3 Place the carpet to the profile.

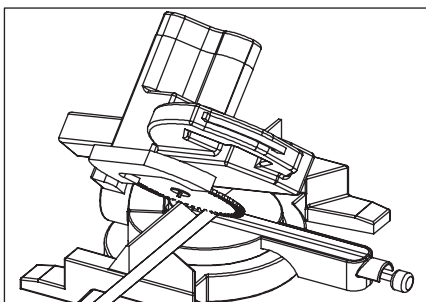

4 Cut profiles 45 degrees for external corners.

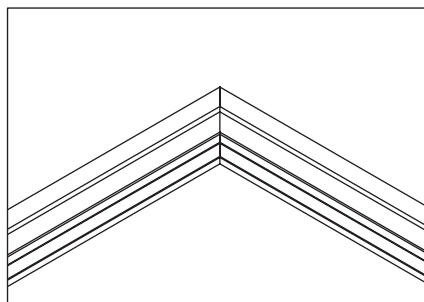

5 Align the profiles at the external corners and place them into the joint.

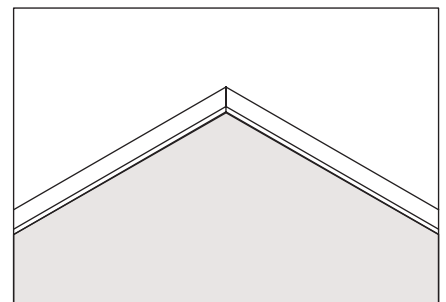

6 Place the carpet to the profile.