

MOX Systems - техникалық құжаттама

assembly-manual-square-fix-en.pdf

Техникалық аударма: өлшемдер үшін түпнұсқа сызбаларды және анықтамалық беттерді қараңыз.


Бастапқы бет 1

MOX QUARE-FIX ЖИНАУ НҰСҚАУЛЫҒЫ


- 1 Плитка қалыңдығына сәйкес дұрыс профильді таңдаңыз.
- 2 Біріктіріңіз және профильдер анкерін сәйкесінше орналастырыңыз.
- 3 Профильді түйінге бекітілгенше басыңыз.
- 4 Керамика салынатын жерлерге түйіспелерді жағыңыз.
- 5 Плиткаларды профильге қойыңыз, олардың жиектері профильге сәйкес келетініне және біркелкі болатынына көз жеткізіңіз.
- 6 Бұрыштық қосылыстар үшін екі профильді 45 градусқа кесіңіз.
- 7 Профильдерді бұрыштарда туралаңыз және оларды біріктіруге басыңыз. 10
- 8 Плиткаларды профильге қойыңыз, олардың жиектері профильге сәйкес келетініне және біркелкі болатынына көз жеткізіңіз.

1/1 бет


Түпнұсқа сызбалар мен анықтамалық беттер

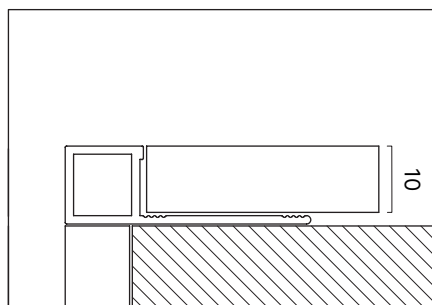


1 Pick the correct profile according to the tile thickness.

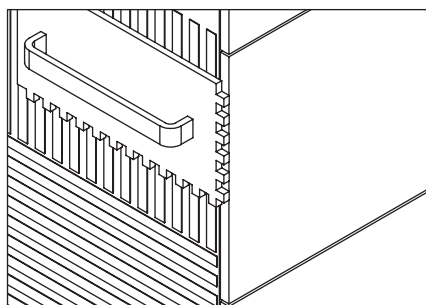


2 Apply joint and place the profiles anchor accordingly.

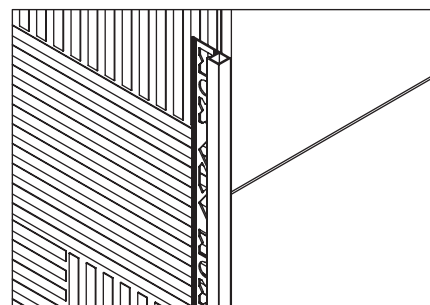


3 Press the profile until it is fixed to the joint.

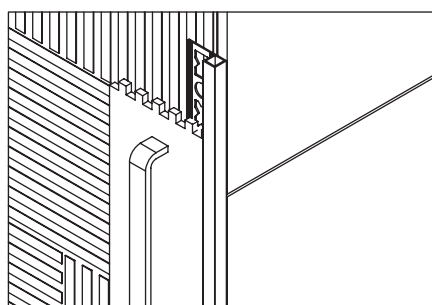


4 Apply joint to the places where the ceramics will be placed.

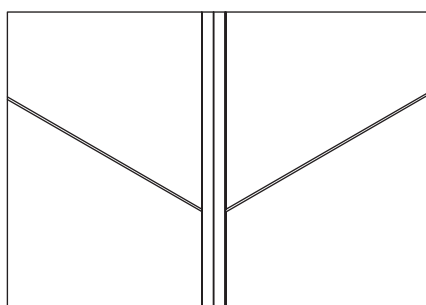


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

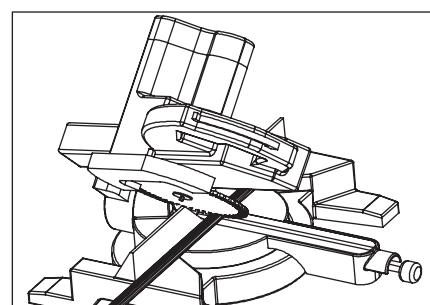

6 Cut two profiles at 45 degrees for corner joints.

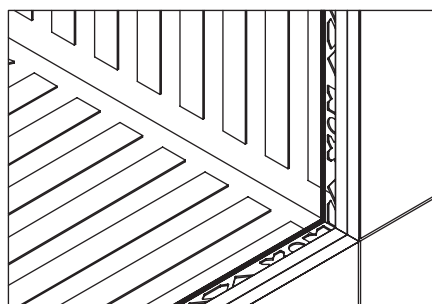

7 Align the profiles at the corners and press them into the joint.

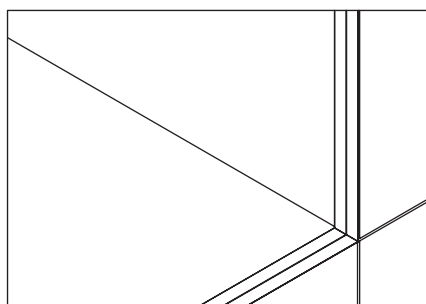

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.