

MOX Systems - техникалық құжаттама

assembly-manual-visio-en.pdf

Техникалық аударма: өлшемдер үшін түпнұсқа сызбаларды және анықтамалық беттерді қараңыз.


Бастапқы бет 1

Visio ЖИНАУ НҰСҚАУЛЫҒЫ


- 1 Еден қалыңдығына сәйкес дұрыс профильді таңдаңыз.
- 2 Біріктіріңіз және профильдер анкерін сәйкесінше орналастырыңыз.
- 3 Профильді түйінге бекітілгенше басыңыз.
- 4 Кілемді профильге қойыңыз.
- 5 Сыртқы бұрыштар үшін профильдерді 45 градусқа кесіңіз.
- 6 Профильдерді сыртқы бұрыштарда туралаңыз және оларды біріктіруге орналастырыңыз.
- 7 Кілемді профильге қойыңыз.
- 8 Ішкі бұрыштар үшін профильдерді 45 градусқа кесіңіз.
- 9 Профильдерді ішкі бұрыштарда туралаңыз және оларды біріктіруге орналастырыңыз.
- 10 Кілемді профильге қойыңыз. 6 8

1/1 бет


Түпнұсқа сызбалар мен анықтамалық беттер

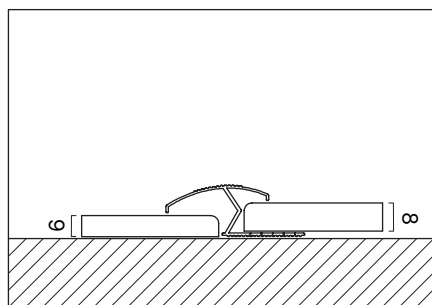


1 Pick the correct profile according to the flooring thickness.

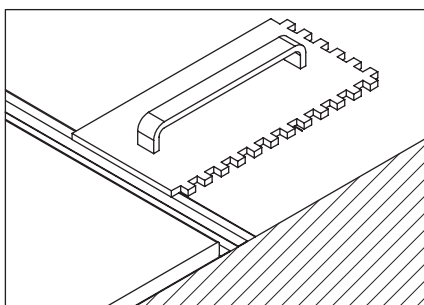


2 Apply joint and place the profiles anchor accordingly.

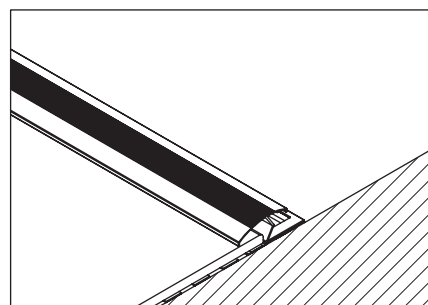


3 Press the profile until it is fixed to the joint.

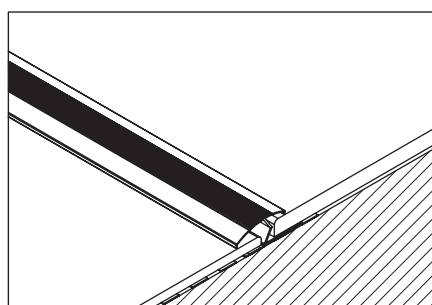


4 Place the carpet to the profile.

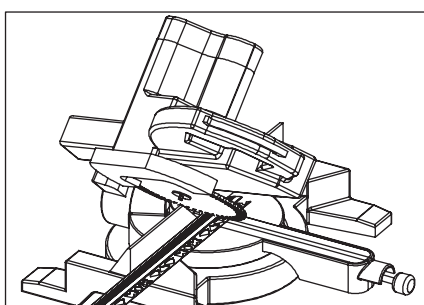


5 Cut profiles 45 degrees for external corners.

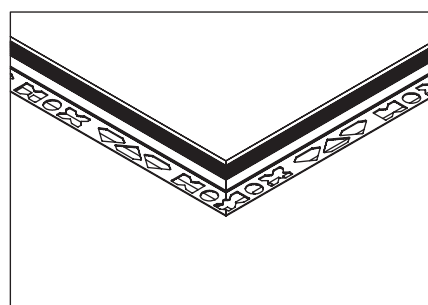


6 Align the profiles at the external corners and place them into the joint.

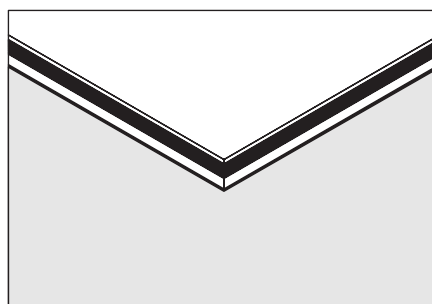


7 Place the carpet to the profile.

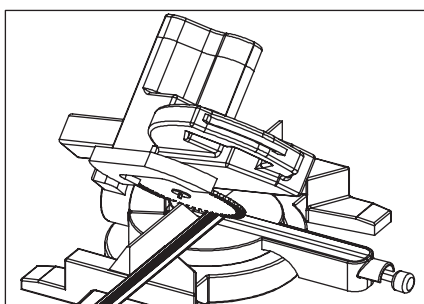

8 Cut profiles 45 degrees for internal corners.

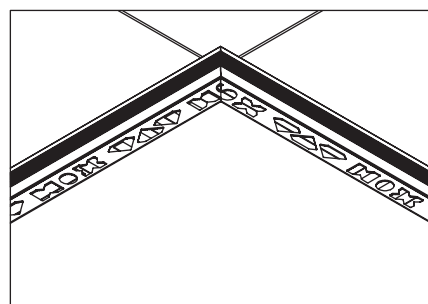

9 Align the profiles at the internal corners and place them into the joint.

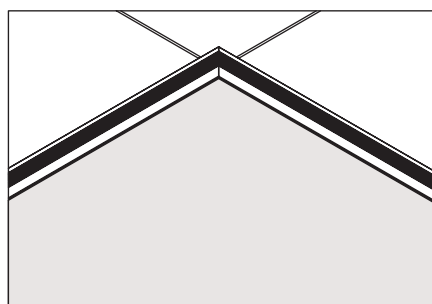

10 Place the carpet to the profile.