

MOX Systems - technesch Dokumentatioun

assembly-manual-mono-fix-en.pdf

Technesch Iwwersetzung: kuckt d'Original Zeechnungen an Referenz Säiten fir Dimensiounen.


Quell Säit 1

Mono-Fix ASSEMBLY GUIDE

- 1 Wielt de richtege Profil no der Fliesdicke.
- 2 Fëllt d'Gelenk op a setzt d'Profiler entspriechend ankeren.
- 3 Dréckt de Profil bis et op d'Gelenk fixéiert ass.
- 4 Fëllt Gelenk op d'Plazen, wou d'Keramik plazéiert gëtt.
- 5 D'Fliesen op de Profil setzen, sécherstellen datt hir Kanten de Profil passen a flaach sinn.
- 6 Schnëttprofile 45 Grad fir extern Ecker.
- 7 Stellt d'Profiler op den externen Ecker aus a dréckt se an d'Gelenk.
- 8 D'Fliesen op de Profil setzen, sécherstellen datt hir Kanten de Profil passen a flaach sinn.
- 9 Schnëtt Profiler 45 Grad fir intern Ecker.
- 10 Stellt d'Profiler an den internen Ecker aus a dréckt se an d'Gelenk. 01
- 11 D'Fliesen op de Profil setzen, sécherstellen datt hir Kanten de Profil passen a flaach sinn.

Säit 1/1


Original Zeechnungen an Referenz Säiten

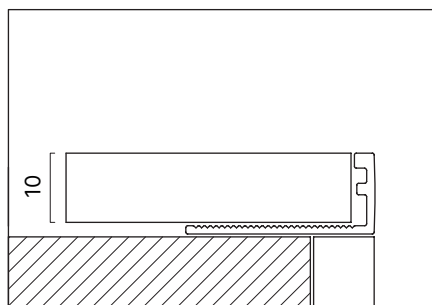


1 Pick the correct profile according to the tile thickness.




2 Apply joint and place the profiles anchor accordingly.

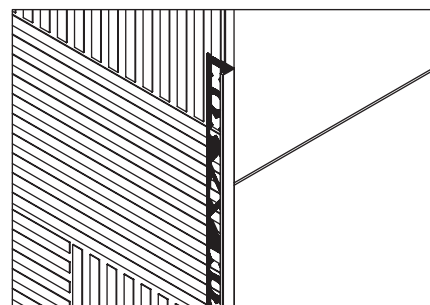

3 Press the profile until it is fixed to the joint.

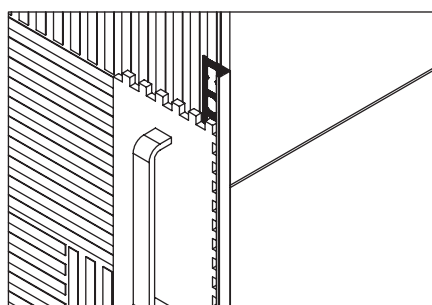


4 Apply joint to the places where the ceramics will be placed.

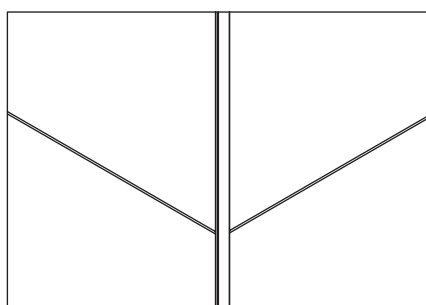


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.




6 Cut profiles 45 degrees for external corners.

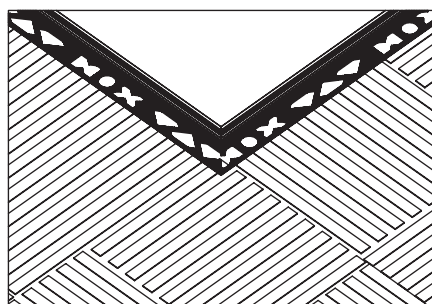


7 Align the profiles at the external corners and press them into the joint.

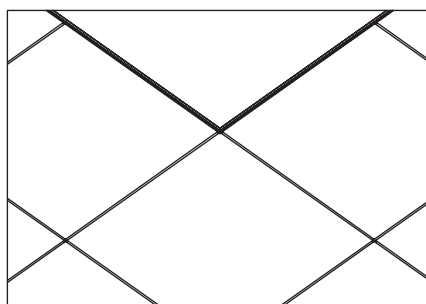


8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

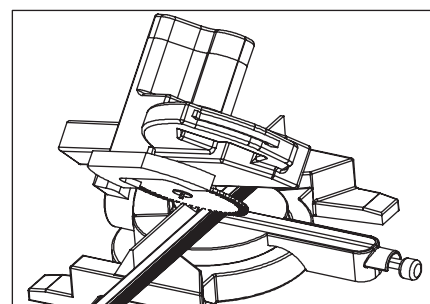

9 Cut profiles 45 degrees for internal corners.

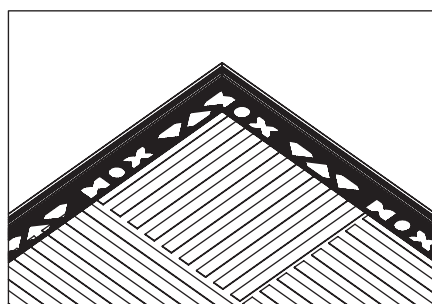

10 Align the profiles at the internal corners and press them into the joint.

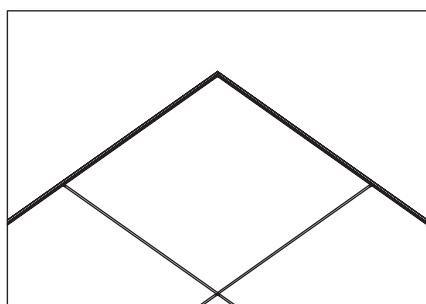

11 Place the tiles on the profile, making sure that their edges fit the profile and are flush.