

MOX Systems - technesch Dokumentatioun

assembly-manual-mps-ag-en.pdf

Technesch Iwwersetzung: kuckt d'Original Zeechnungen an Referenz Säiten fir Dimensiounen.

Quell Säit 1

Mps-Ag ASSEMBLY GUIDE

Wielt de richtege Profil no der Fliesdicke.

2 Fëllt d'Gelenk op a setzt d'Profiler entspriechend ankeren.

3 Dréckt de Profil bis et op d'Gelenk fixéiert ass.

Gëlle gemeinsame op d'Plazen wou d'Keramik gesat gëtt.

5 D'Fliesen op de Profil setzen, sécherstellen datt hir Kanten de Profil passen a flaach sinn.

6 Schnëttprofile 45 Grad fir extern Ecker.

Alignéiert d'Profiler op den externen Ecker a dréckt se an d'Gelenk.

8 D'Fliesen op de Profil setzen, sécherstellen datt hir Kanten de Profil passen a flaach sinn.


9 Schnëtt Profiler 45 Grad fir intern Ecker.

10 Stellt d'Profiler an den internen Ecker aus a dréckt se an d'Gelenk.


11 D'Fliesen op de Profil setzen, sécherstellen datt hir Kanten de Profil passen a flaach sinn.

Säit 1/1


Original Zeechnungen an Referenz Säiten

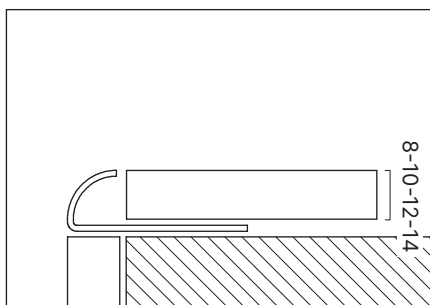


- 1 Pick the correct profile according to the tile thickness.

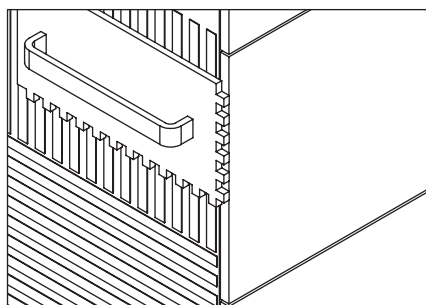


- 2 Apply joint and place the profiles anchor accordingly.

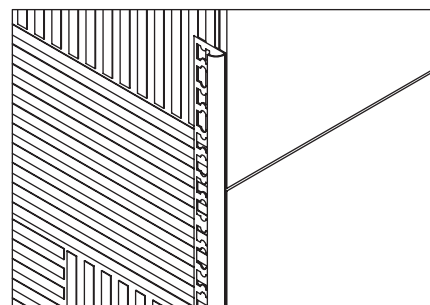


- 3 Press the profile until it is fixed to the joint.

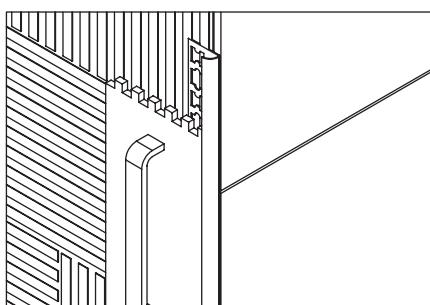


- 4 Apply joint to the places where the ceramics will be placed.

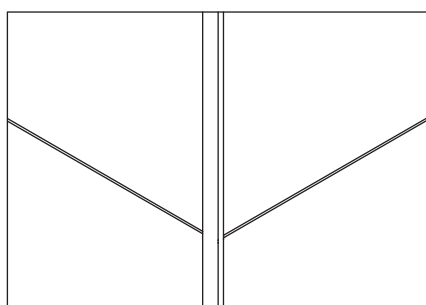


- 5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

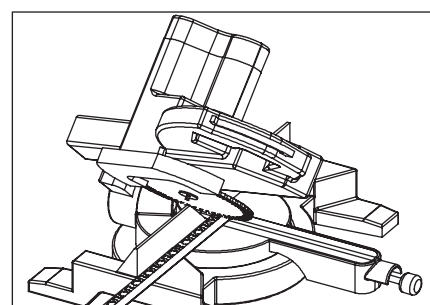


- 6 Cut profiles 45 degrees for external corners.

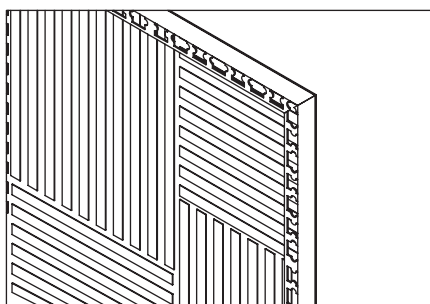


- 7 Align the profiles at the external corners and press them into the joint.

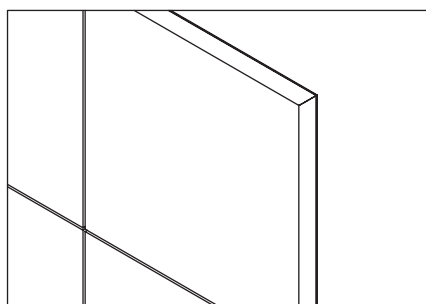


- 8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

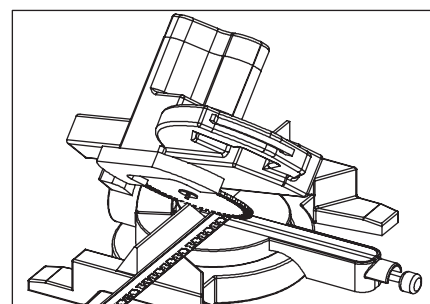

- 9 Cut profiles 45 degrees for internal corners.

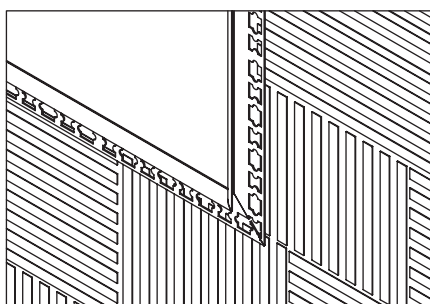

- 10 Align the profiles at the internal corners and press them into the joint.

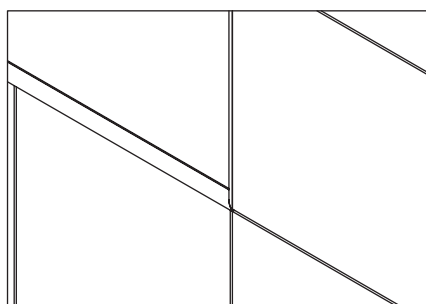

- 11 Place the tiles on the profile, making sure that their edges fit the profile and are flush.