

MOX Systems - technesch Dokumentatioun

assembly-manual-mps-e-en.pdf

Technesch Iwwersetzung: kuckt d'Original Zeechnungen an Referenz Säiten fir Dimensiounen.


Quell Säit 1

Mps-E ASSEMBLY GUIDE


- 1 Wielt de richtege Profil no der Buedemdicke.
- 2 Fëllt d'Gelenk op a setzt d'Profiler entspriechend ankeren.
- 3 Dréckt de Profil bis et op d'Gelenk fixéiert ass.
- 4 Fëllt Gelenk op d'Plazen, wou de Buedem geluecht gëtt.
- 5 Plaz an alignéiert de Buedem op de Profil.
- 6 Schnëttprofile 45 Grad fir extern Ecker.
- Alignéiert d'Profiler op den externen Ecker a dréckt se an d'Gelenk.
- 8 Plaz an alignéiert de Buedem op de Profil.
- 9 Schnëtt Profiler 45 Grad fir intern Ecker.
- 10 Stellt d'Profiler an den internen Ecker aus a dréckt se an d'Gelenk.
- 11 Plaz an alignéiert de Buedem op de Profil.

Säit 1/1


Original Zeechnungen an Referenz Säiten

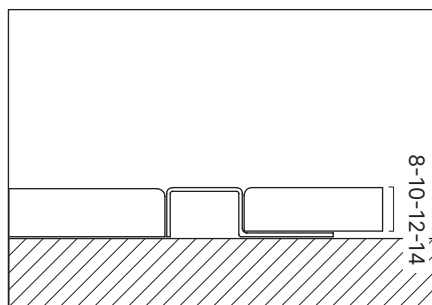


1 Pick the correct profile according to the flooring thickness.

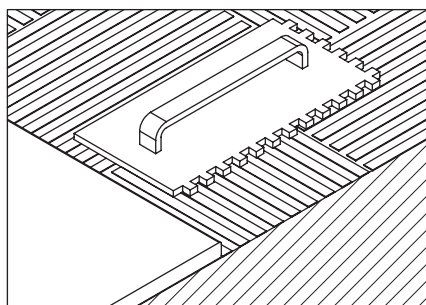


2 Apply joint and place the profiles accordingly.

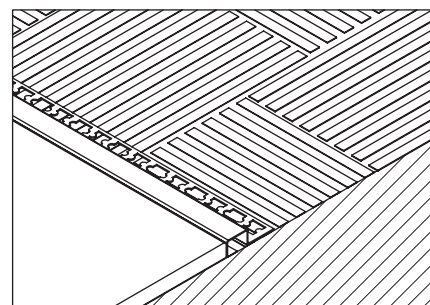


3 Press the profile until it is fixed to the joint.

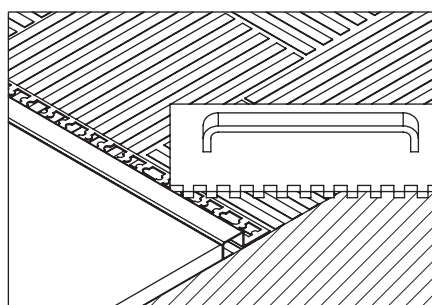


4 Apply joint to the places where the flooring will be placed.

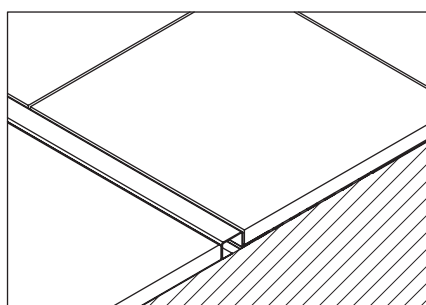


5 Place and align the flooring to the profile.

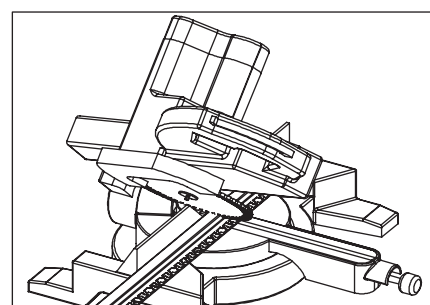


6 Cut profiles 45 degrees for external corners.

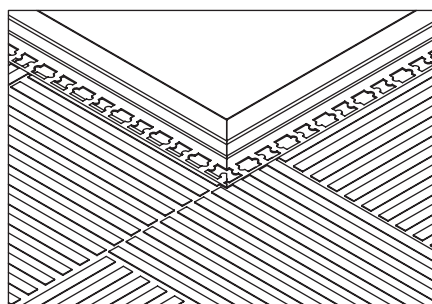


7 Align the profiles at the external corners and press them into the joint.

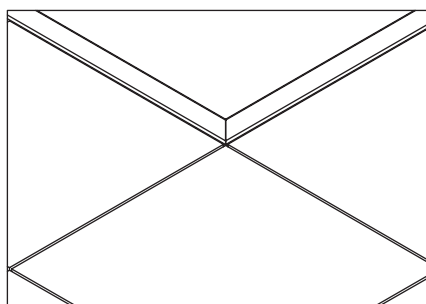


8 Place and align the flooring to the profile.

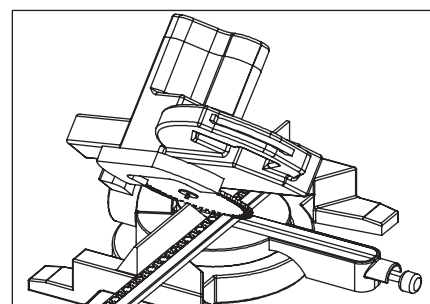

9 Cut profiles 45 degrees for internal corners.

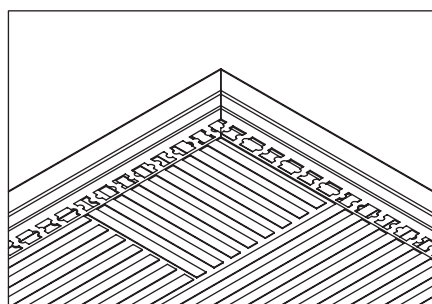

10 Align the profiles at the internal corners and press them into the joint.

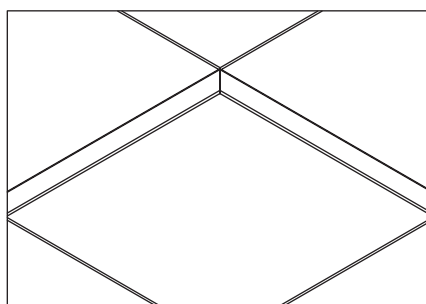

11 Place and align the flooring to the profile.