

MOX Systems - technesch Dokumentatioun

assembly-manual-revio-en.pdf

Technesch Iwwersetzung: kuckt d'Original Zeechnungen an Referenz Säiten fir Dimensiounen.

Quell Säit 1

Revio Assemblée GUIDE

Applikatioun mat Klebstoff

- 1 Silikon oder Gelenk op de Profil opdroen.
- 2 Fixéiert de Profil op de Buedem an dréckt et.
- 3 Plaz den Teppech op de Profil.

Applikatioun mat Schrauwen


- 11 Fixéiert de Profil mat Schrauwen.
- 2 Plaz den Teppech op de Profil.

Köşe Birleşimleri


- 1 Schnëtt Profiler 45 Grad fir intern Ecker.
- 2 Stellt d'Profiler an den internen Ecker aus a setzt se an d'Gelenk.
- 3 Plaz den Teppech op de Profil.
- 4 Schnëttprofile 45 Grad fir extern Ecker.
- 5 Stellt d'Profiler op den externen Ecker aus a setzt se an d'Gelenk.
- 6 Plaz den Teppech op de Profil.

Original Zeechnungen an Referenz Säiten


Application with Adhesive

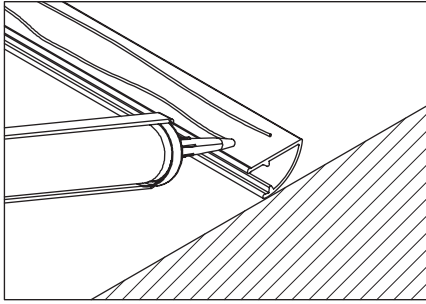

1 Apply silicone or joint to the profile.

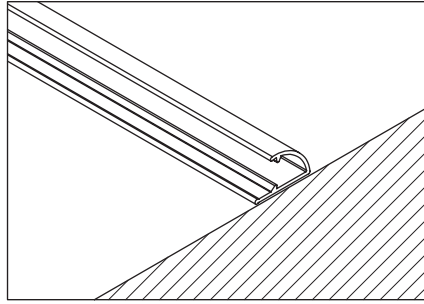


2 Fix the profile to the floor and press it.

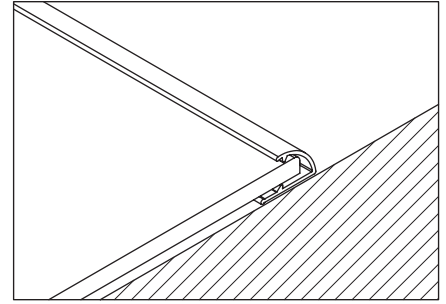


3 Place the carpet to the profile.

Application with Screw

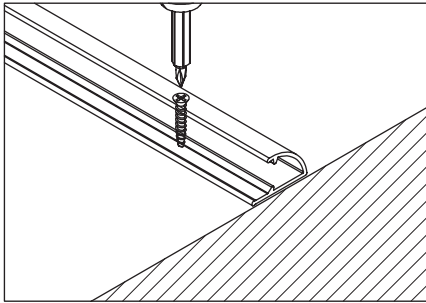


1 Fix the profile with screws.

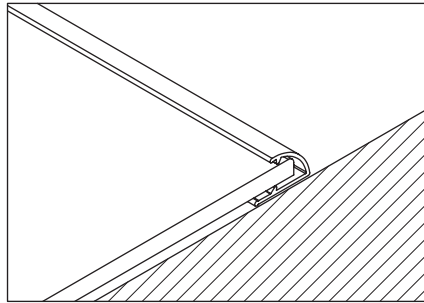


2 Place the carpet to the profile.


Köşe Birleşimleri

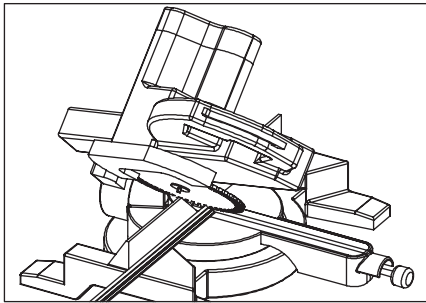


1 Cut profiles 45 degrees for internal corners.

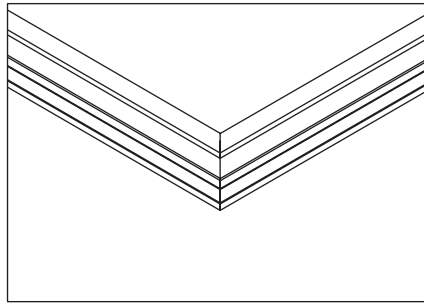


2 Align the profiles at the internal corners and place them into the joint.

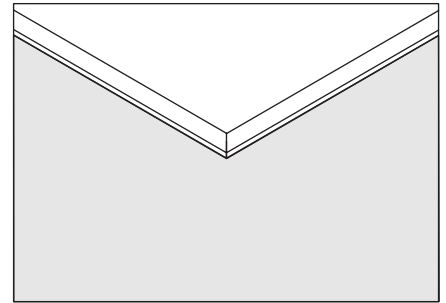


3 Place the carpet to the profile.

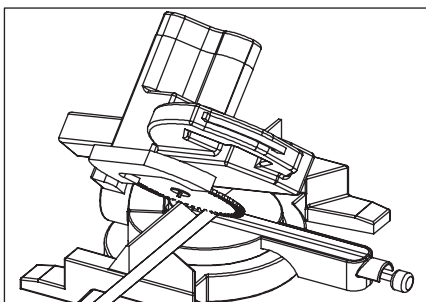

4 Cut profiles 45 degrees for external corners.

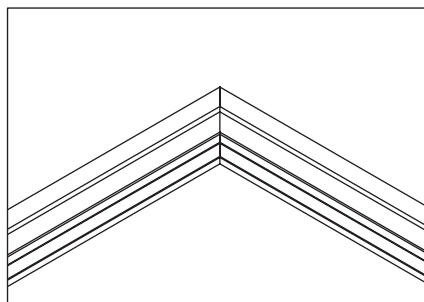

5 Align the profiles at the external corners and place them into the joint.

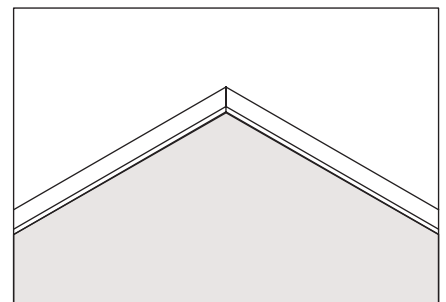

6 Place the carpet to the profile.