

MOX Systems - technesch Dokumentatioun

assembly-manual-round-fix-en.pdf

Technesch Iwwersetzung: kuckt d'Original Zeechnungen an Referenz Säiten fir Dimensiounen.

Quell Säit 1

Round-Fix ASSEMBLY GUIDE

1 Wielt de richtege Profil no der Fliesdicke.

2 Fëllt d'Gelenk op a setzt d'Profiler entspriechend ankeren.

3 Dréckt de Profil bis et op d'Gelenk fixéiert ass.

4 Fëllt Gelenk op d'Plazen, wou d'Keramik plazéiert gëtt.

5 D'Fliesen op de Profil setzen, sécherstellen datt hir Kanten de Profil passen a flaach sinn.


6 Zweek Profiler op 45 Grad fir Eckgelenk schneiden.

7 Riicht d'Profiler an den internen Ecker aus a dréckt se an d'Gelenk. 10

8 D'Fliesen op de Profil setzen, sécherstellen datt hir Kanten de Profil passen a flaach sinn.

Säit 1/1


Original Zeechnungen an Referenz Säiten

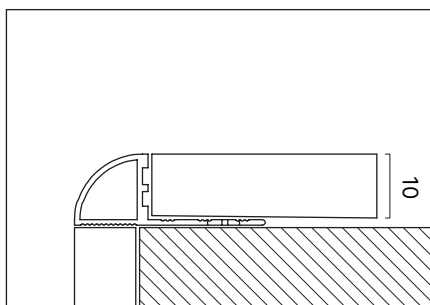


1 Pick the correct profile according to the tile thickness.




2 Apply joint and place the profiles anchor accordingly.

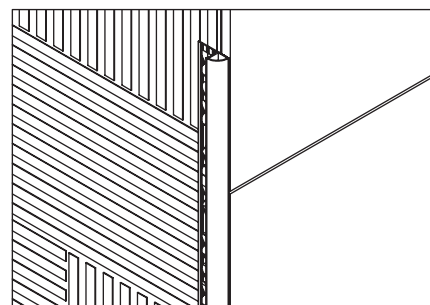


3 Press the profile until it is fixed to the joint.

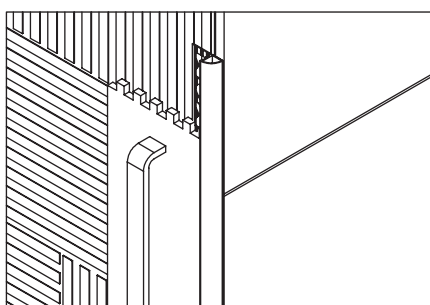


4 Apply joint to the places where the ceramics will be placed.

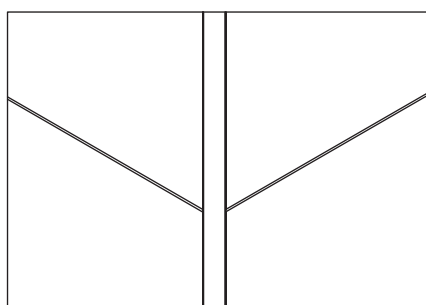


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

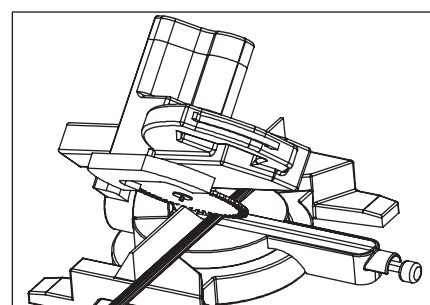

6 Cut two profiles at 45 degrees for corner joints.

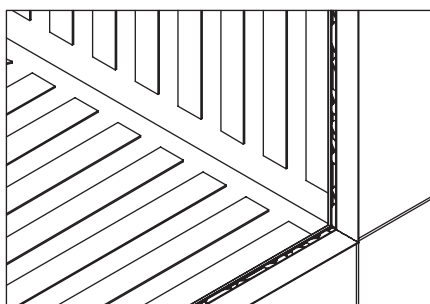

7 Align the profiles at the internal corners and press them into the joint.

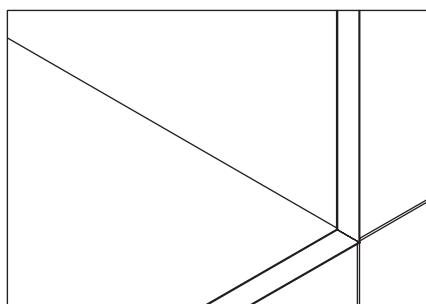

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.