

MOX Systems - technesch Dokumentatioun

assembly-manual-velo-en.pdf

Technesch Iwwersetzung: kuckt d'Original Zeechnungen an Referenz Säiten fir Dimensiounen.


Quell Säit 1

Velo ASSEMBLY GUIDE


- 1 Dréckt de Silizium op d'Manéier vun zwou Linnen op der Récksäit vum Profil.
- 2 Paste de Profil deem Dir de Silizium op d'Mauer gedréckt hutt a dréckt.
- 3 Tape de Profil deem Dir op d'Mauer gepecht hutt mat 50cm Intervalle.
- 4 Ewechzehuelen der Bands, datt op de Profil heedfully den Dag duerno.
- 5 Vergewëssert Iech datt de Profil fest un d'Mauer gepecht ass.
- 6 Schnëttprofile 45 Grad fir extern Ecker.
- 7 Paste d'Profiler, déi Dir 45-Grad op d'Mauer geschnidden hutt, sou datt et matenee zougemaach gëtt.
- 8 Vergewëssert Iech datt d'Profiler, déi 45-Grad geschnidden sinn, ganz an de baussenzegen Ecker matenee fixéiert sinn.
- 9 Schnëtt Profiler 45 Grad fir intern Ecker.
- 10 Paste d'Profiler, déi Dir 45-Grad op d'Mauer geschnidden hutt, sou datt et matenee zougemaach gëtt.
- 11 Vergewëssert Iech datt d'Profiler, déi 45-Grad geschnidden sinn, ganz an den internen Ecker matenee fixéiert sinn.

Säit 1/1


Original Zeechnungen an Referenz Säiten

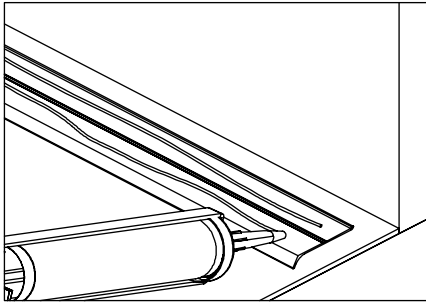


1 Squeeze the silicon in the manner of two lines to the back side of the profile.

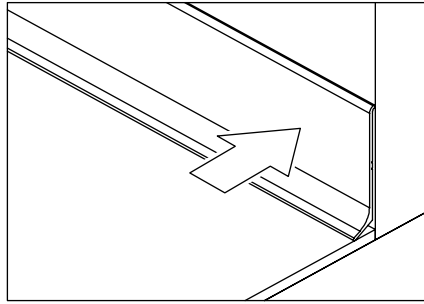


2 Paste the profile that you squeezed the silicon to the wall and press.

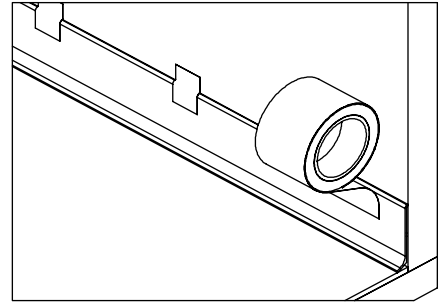


3 Tape the profile that you pasted to the wall at 50cm intervals.

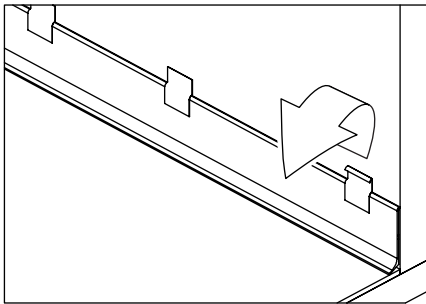


4 Remove the bands that on the profile heedfully the day after.

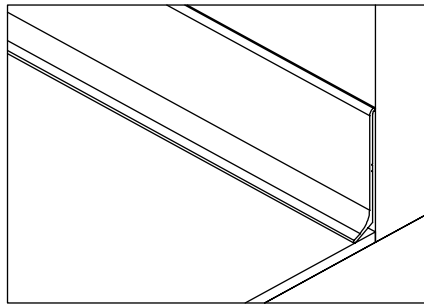


5 Make sure that the profile is stuck to the wall firmly.

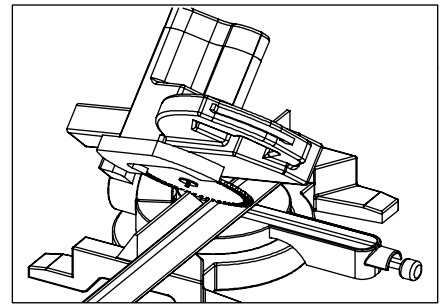


6 Cut profiles 45 degrees for external corners.

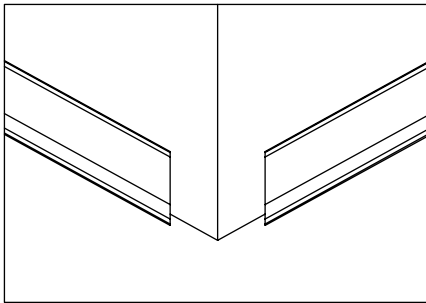


7 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

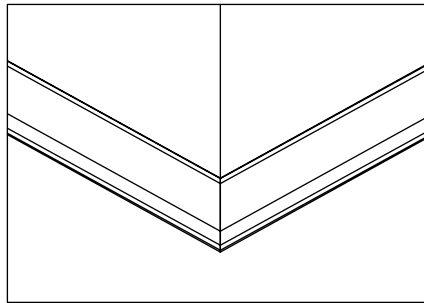


8 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

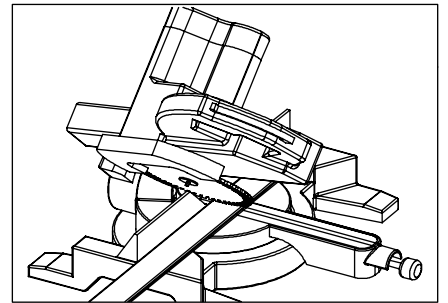

9 Cut profiles 45 degrees for internal corners.

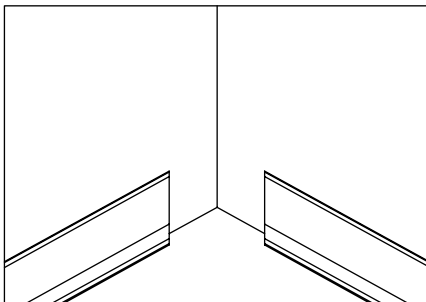

10 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

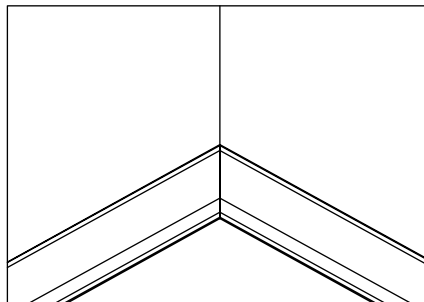

11 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.