

MOX Systems - technesch Dokumentatioun

assembly-manual-visio-en.pdf

Technesch Iwwersetzung: kuckt d'Original Zeechnungen an Referenz Säiten fir Dimensiounen.


Quell Säit 1

Visio ASSEMBLY GUIDE


- 1 Wielt de richtege Profil no der Buedemdicke.
- 2 Fëllt d'Gelenk op a setzt d'Profiler entspriechend ankeren.
- 3 Dréckt de Profil bis et op d'Gelenk fixéiert ass.
- 4 Plaz den Teppech op de Profil.
- 5 Schnëttprofile 45 Grad fir extern Ecker.
- 6 Stellt d'Profiler op den externen Ecker aus a setzt se an d'Gelenk.
- 7 Plaz den Teppech op de Profil.
- 8 Schnëttprofile 45 Grad fir intern Ecker.
- 9 Stellt d'Profiler an den internen Ecker aus a setzt se an d'Gelenk.
- 10 Plaz den Teppech op de Profil. 6 8

Säit 1/1


Original Zeechnungen an Referenz Säiten

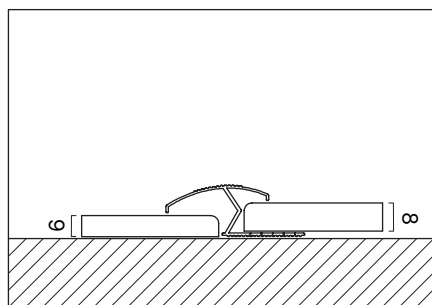


1 Pick the correct profile according to the flooring thickness.

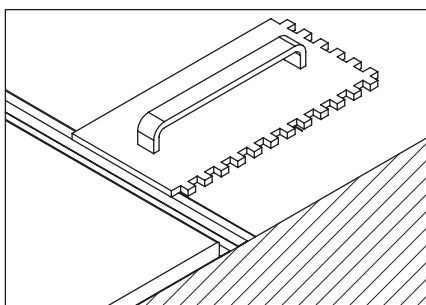


2 Apply joint and place the profiles anchor accordingly.

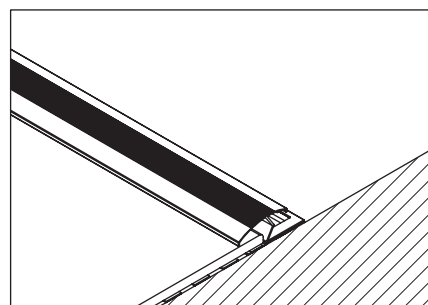


3 Press the profile until it is fixed to the joint.

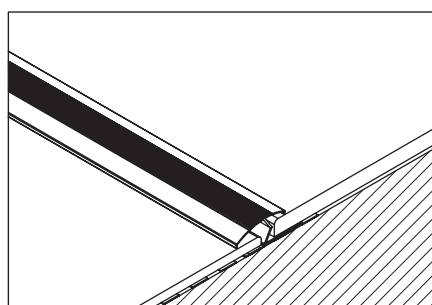


4 Place the carpet to the profile.

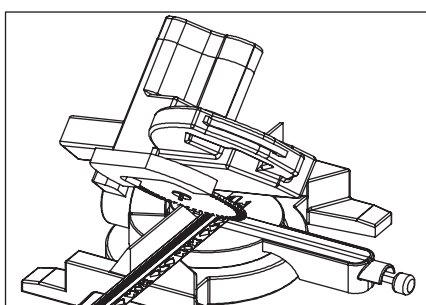


5 Cut profiles 45 degrees for external corners.

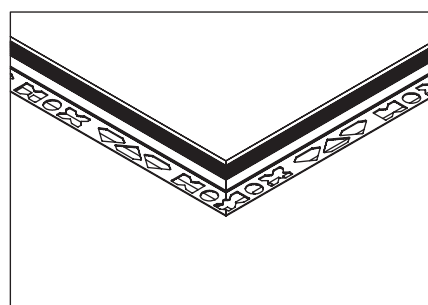


6 Align the profiles at the external corners and place them into the joint.

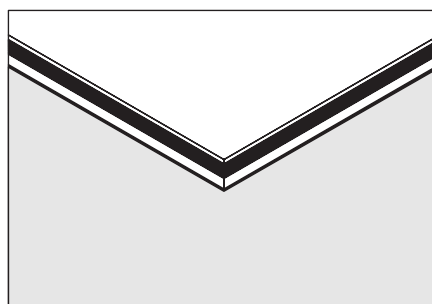


7 Place the carpet to the profile.

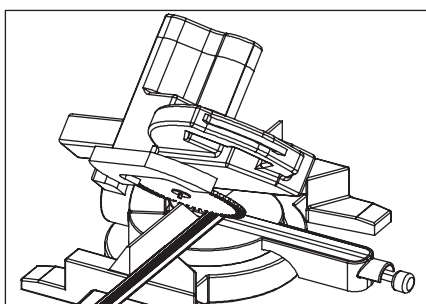

8 Cut profiles 45 degrees for internal corners.

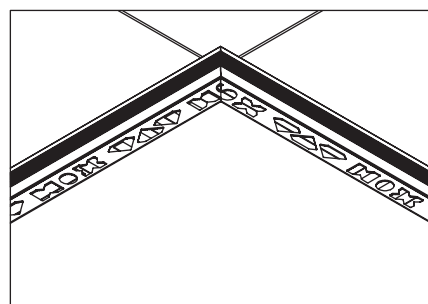

9 Align the profiles at the internal corners and place them into the joint.

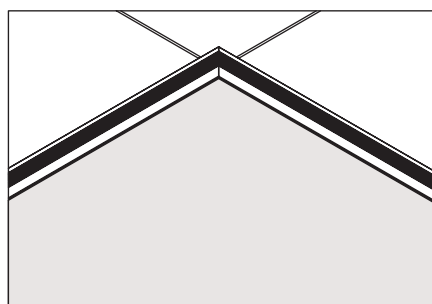

10 Place the carpet to the profile.