

MOX Systems - techninė dokumentacija

assembly-manual-revio-en.pdf

Techninis vertimas: matmenis rasite originaliuose brėžiniuose ir nuorodų puslapiuose.

Šaltinio puslapis 1

Revio MONTAVIMO VADOVAS

Taikymas su klėjais

- 1 Ant profilio užtepkite silikoną arba siūlę.
- 2 Pritvirtinkite profilį prie grindų ir paspauskite.
- 3 Padėkite kilimą prie profilio.

Taikymas su varžtu


- 11 Pritvirtinkite profilį varžtais.
- 2 Padėkite kilimą prie profilio.

Köşe Birleşimleri


- 1 Vidiniams kampams nupjaukite profilius 45 laipsnių kampu.
- 2 Sulygiuokite profilius vidiniuose kampuose ir įdėkite juos į jungtį.
- 3 Padėkite kilimą prie profilio.
- 4 Iškirpkite profilius 45 laipsnių kampu išoriniams kampams.
- 5 Išlygiuokite profilius išoriniuose kampuose ir įdėkite juos į jungtį.
- 6 Padėkite kilimą prie profilio.

Originalūs brēžiniai ir informaciniai puslapiai


Application with Adhesive

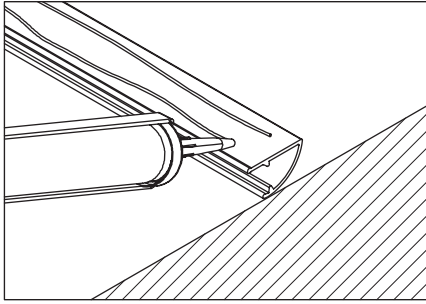

1 Apply silicone or joint to the profile.

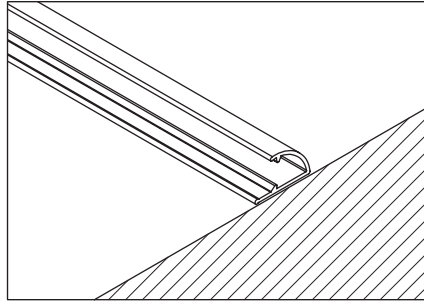


2 Fix the profile to the floor and press it.

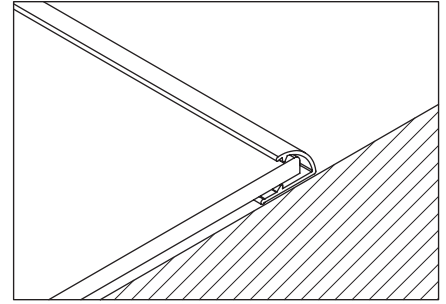


3 Place the carpet to the profile.

Application with Screw

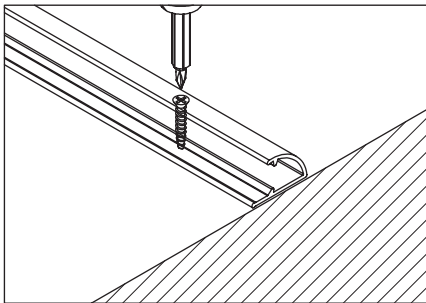


1 Fix the profile with screws.

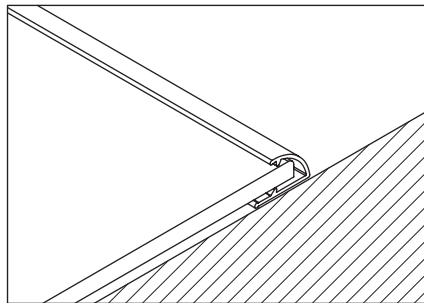


2 Place the carpet to the profile.


Köşe Birleşimleri

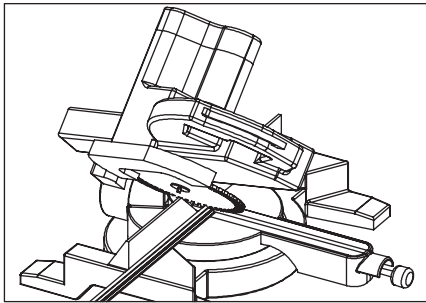


1 Cut profiles 45 degrees for internal corners.

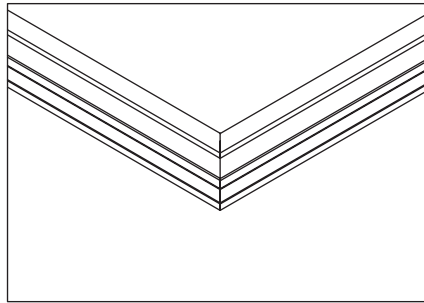


2 Align the profiles at the internal corners and place them into the joint.

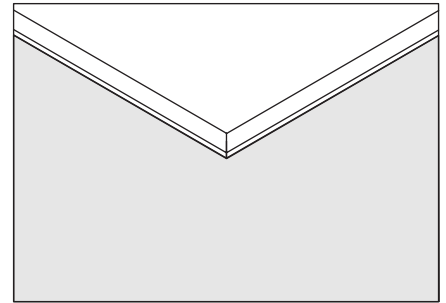


3 Place the carpet to the profile.

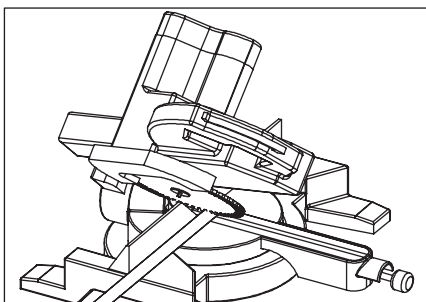

4 Cut profiles 45 degrees for external corners.

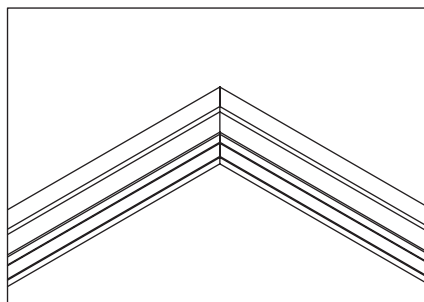

5 Align the profiles at the external corners and place them into the joint.

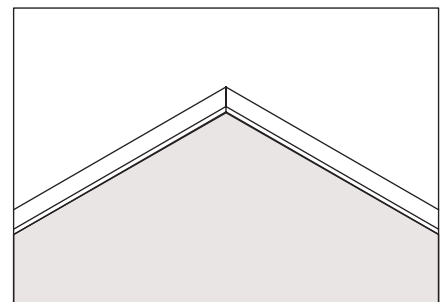

6 Place the carpet to the profile.