

MOX Systems - techninė dokumentacija

assembly-manual-round-fix-en.pdf

Techninis vertimas: matmenis rasite originaliuose brėžiniuose ir nuorodų puslapiuose.


Šaltinio puslapis 1

Round-Fix MONTAVIMO VADOVAS

- 1 Pasirinkite tinkamą profilį pagal plytelių storį.
- 2 Uždėkite jungtį ir atitinkamai pritvirtinkite profilius.
- 3 Spauskite profilį, kol jis užsifiksuos prie jungties.
- 4 Vietas, kur bus dedama keramika, užtepkite siūlę.
- 5 Uždėkite plyteles ant profilio, įsitikinkite, kad jų kraštai atitinka profilį ir yra vienodi.
- 6 Iškirpkite du profilius 45 laipsnių kampu kampinėms jungtims.
- 7 Sulygiuokite profilius vidiniuose kampuose ir įspauskite juos į jungtį. 10
- 8 Uždėkite plyteles ant profilio, įsitikinkite, kad jų kraštai atitinka profilį ir yra vienodi.

Puslapis 1/1


Originalūs brēžiniai ir informaciniai puslapiai

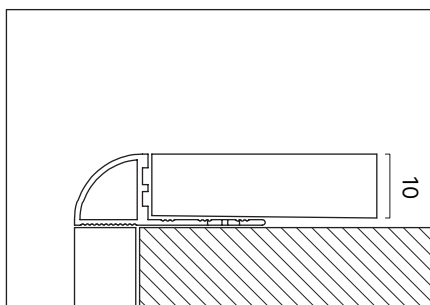


1 Pick the correct profile according to the tile thickness.




2 Apply joint and place the profiles anchor accordingly.

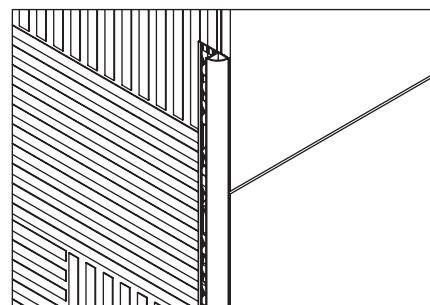


3 Press the profile until it is fixed to the joint.

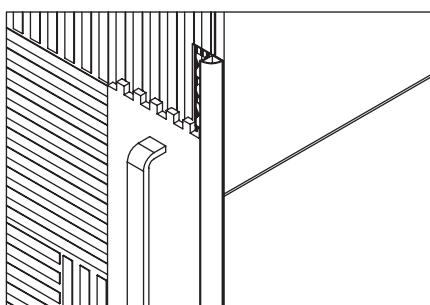


4 Apply joint to the places where the ceramics will be placed.

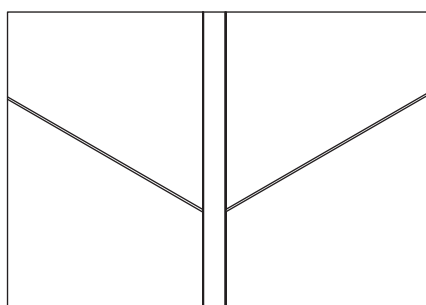


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

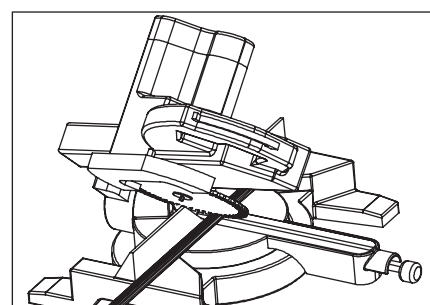

6 Cut two profiles at 45 degrees for corner joints.

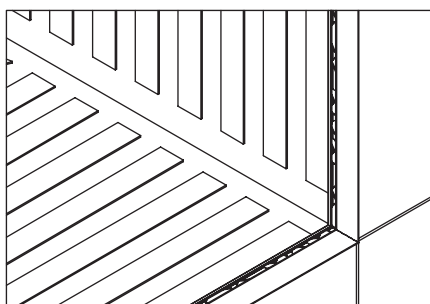

7 Align the profiles at the internal corners and press them into the joint.

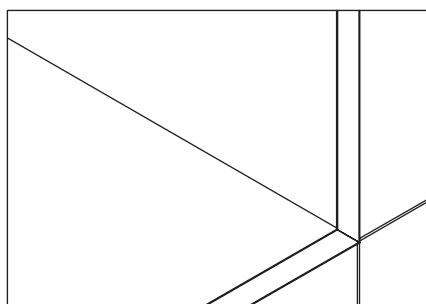

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.