

MOX Systems - techninė dokumentacija

assembly-manual-velo-en.pdf

Techninis vertimas: matmenis rasite originaliuose brėžiniuose ir nuorodų puslapiuose.


Šaltinio puslapis 1

Velo MONTAVIMO VADOVAS


- 1 Dviejų linijų būdu išspauskite silicį prie galinės profilio pusės.
- 2 Priklijuokite profilį, kuriuo išspaudėte silicį, prie sienos ir paspauskite.
- 3 Priklijuokite profilį prie sienos 50 cm intervalais.
- 4 Kitą dieną atsargiai nuimkite profilio juostas.
- 5 Įsitikinkite, kad profilis tvirtai prilipo prie sienos.
- 6 Iškirpkite profilius 45 laipsnių kampų išoriniams kampams.
- 7 Priklijuokite 45 laipsnių kampų nupjautus profilius prie sienos taip, kad jie būtų vienas prie kito.
- 8 Įsitikinkite, kad 45 laipsnių kampų nupjauti profiliai yra visiškai pritvirtinti vienas prie kito išoriniuose kampuose.
- 9 Iškirpkite profilius 45 laipsnių kampų vidiniams kampams.
- 10 Priklijuokite 45 laipsnių kampų nupjautus profilius prie sienos taip, kad jie būtų vienas prie kito.
- 11 Įsitikinkite, kad 45 laipsnių kampų nupjauti profiliai yra visiškai pritvirtinti vienas prie kito vidiniuose kampuose.

Puslapis 1/1


Originalūs brēžiniai ir informaciniai puslapiai

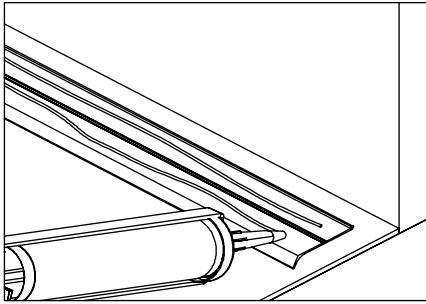


1 Squeeze the silicon in the manner of two lines to the back side of the profile.

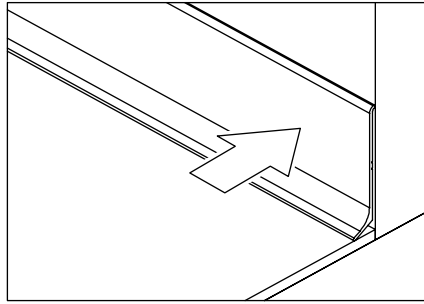


2 Paste the profile that you squeezed the silicon to the wall and press.

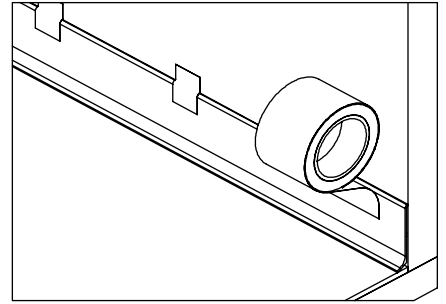


3 Tape the profile that you pasted to the wall at 50cm intervals.

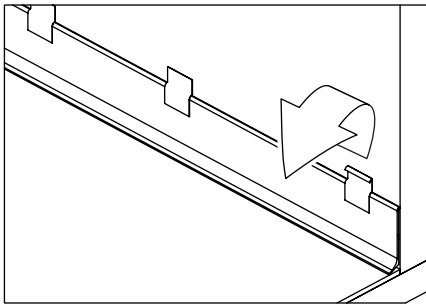


4 Remove the bands that on the profile heedfully the day after.

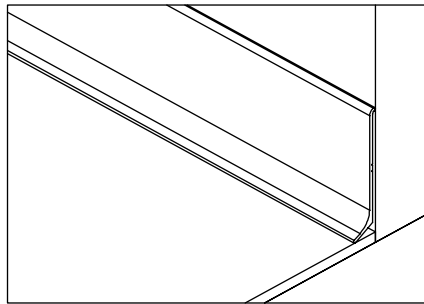


5 Make sure that the profile is stuck to the wall firmly.

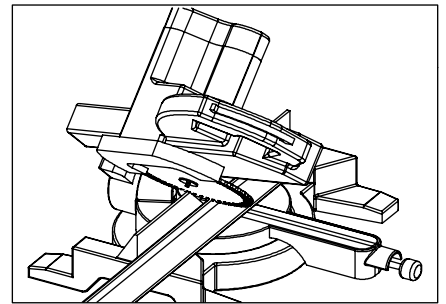


6 Cut profiles 45 degrees for external corners.

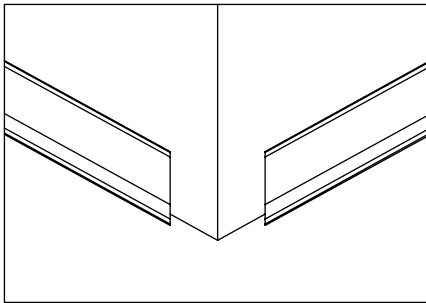


7 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

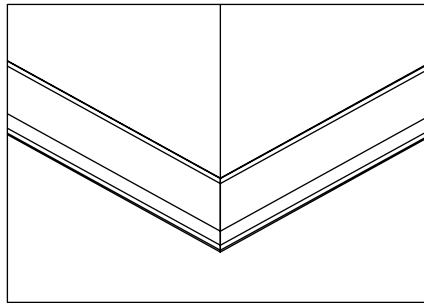


8 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

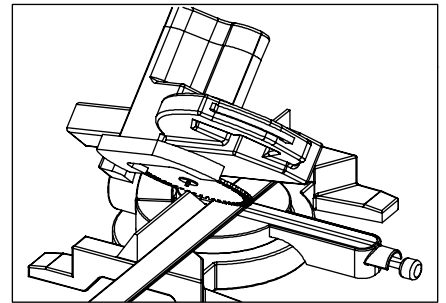

9 Cut profiles 45 degrees for internal corners.

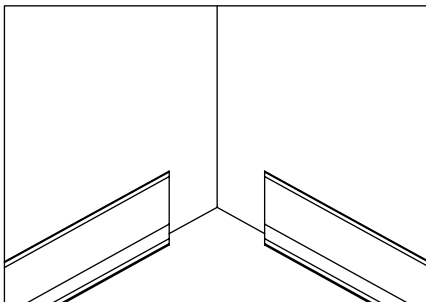

10 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

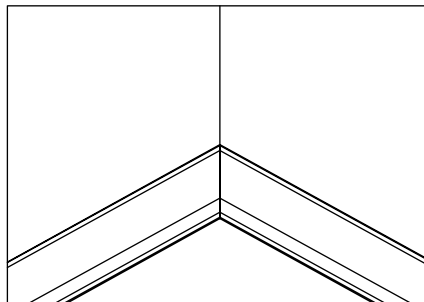

11 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.