

MOX Systems - techninė dokumentacija

assembly-manual-visio-en.pdf

Techninis vertimas: matmenis rasite originaliuose brėžiniuose ir nuorodų puslapiuose.


Šaltinio puslapis 1

Visio MONTAVIMO VADOVAS


- 1 Pasirinkite tinkamą profilį pagal grindų storį.
- 2 Uždėkite jungtį ir atitinkamai pritvirtinkite profilius.
- 3 Spauskite profilį, kol jis užsifiksuos prie jungties.
- 4 Padėkite kilimą prie profilio.
- 5 Iškirpkite profilius 45 laipsnių kampu išoriniams kampams.
- 6 Išlygiuokite profilius prie išorinių kampų ir įdėkite juos į jungtį.
- 7 Padėkite kilimą prie profilio.
- 8 Iškirpkite profilius 45 laipsnių kampu vidiniams kampams.
- 9 Sulygiuokite profilius vidiniuose kampuose ir įdėkite juos į jungtį.
- 10 Padėkite kilimą prie profilio. 6 8

Puslapis 1/1


Originalūs brēžiniai ir informaciniai puslapiai

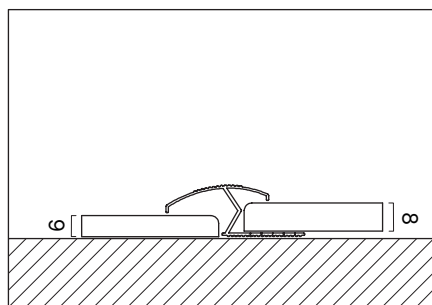


1 Pick the correct profile according to the flooring thickness.

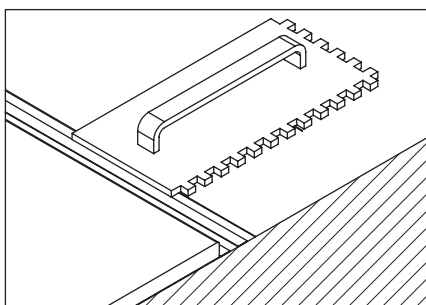


2 Apply joint and place the profiles anchor accordingly.

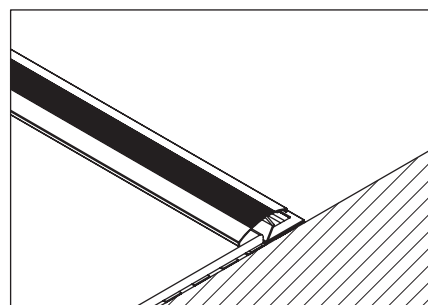


3 Press the profile until it is fixed to the joint.

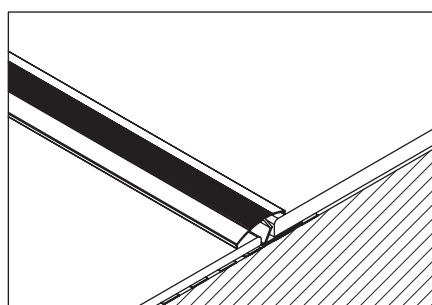


4 Place the carpet to the profile.

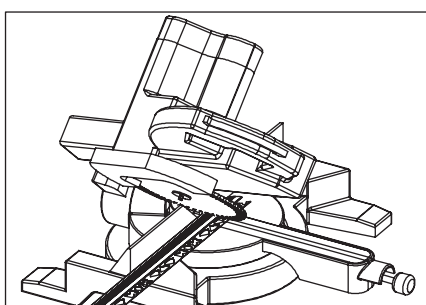


5 Cut profiles 45 degrees for external corners.

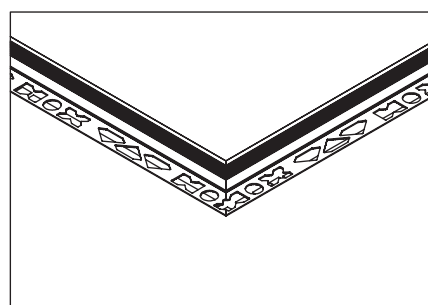


6 Align the profiles at the external corners and place them into the joint.

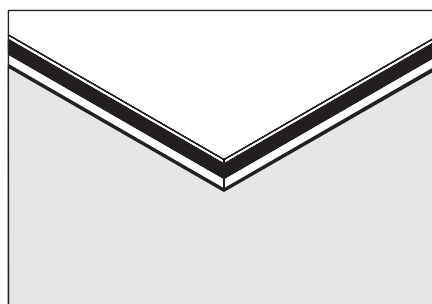


7 Place the carpet to the profile.

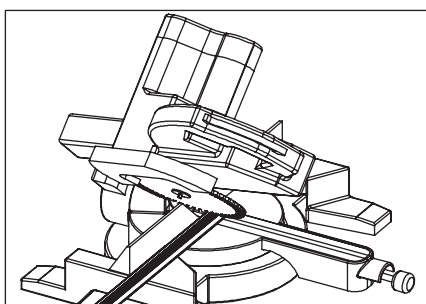

8 Cut profiles 45 degrees for internal corners.

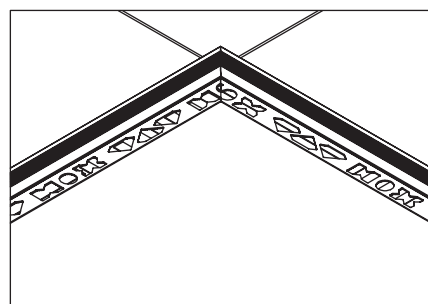

9 Align the profiles at the internal corners and place them into the joint.

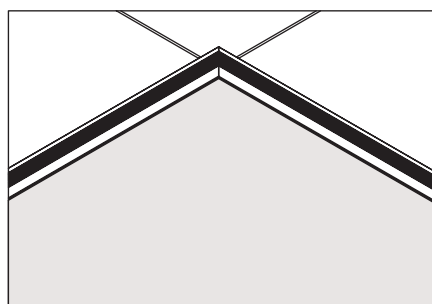

10 Place the carpet to the profile.