

MOX Systems - tehniskā dokumentācija

assembly-manual-mps-s-en.pdf

Tehniskais tulkojums: izmērus skatiet oriģinālajos rasējumos un atsaucēs lapās.

Avota lapa 1

Mps-S MONTĀŽAS ROKASGRĀMATA

Izvēlieties pareizo profilu atbilstoši flīžu biezumam.

2 Uzklājiet savienojumu un attiecīgi nostipriniet profilus.

3 Spiediet profilu, līdz tas nofiksējas pie savienojuma.

Uzklājiet šuvi vietās, kur tiks likta keramika.

5 Novietojiet keramiku un izlīdziniet to ar profilu.

6 Izgrieziet profilus par 45 grādiem ārējiem stūriem.

Izlīdziniet profilus ārējos stūros un piespiediet tos savienojumā.

8 Novietojiet un izlīdziniet keramiku profilā.


9 Izgrieziet profilus par 45 grādiem iekšējiem stūriem.

10 Izlīdziniet profilus iekšējos stūros un iespiediet tos savienojumā.


11 Novietojiet keramiku un izlīdziniet to ar profilu.

Lapa 1/1


Originālie rasējumi un atsauces lapas

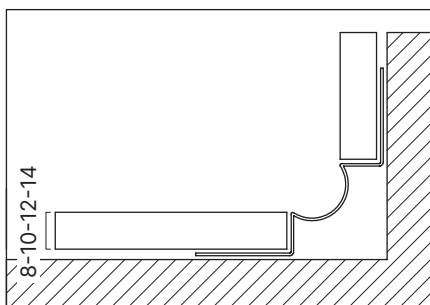


1 Pick the correct profile according to the tile thickness.

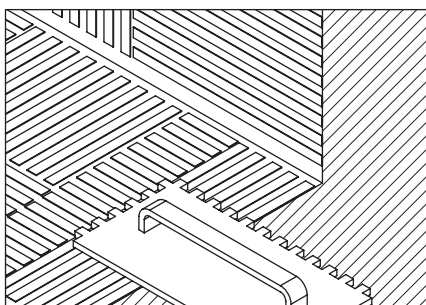


2 Apply joint and place the profiles anchor accordingly.

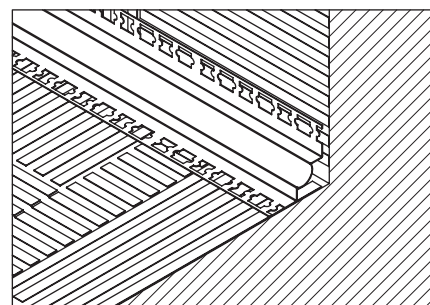


3 Press the profile until it is fixed to the joint.

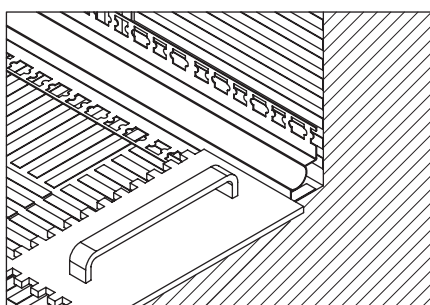


4 Apply joint to the places where the ceramics will be placed.

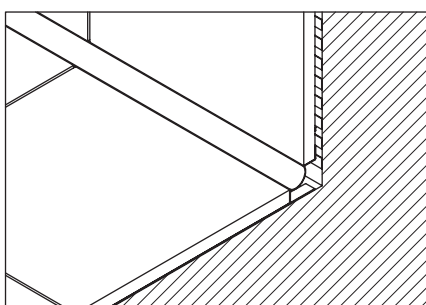


5 Place and align the ceramics to the profile.

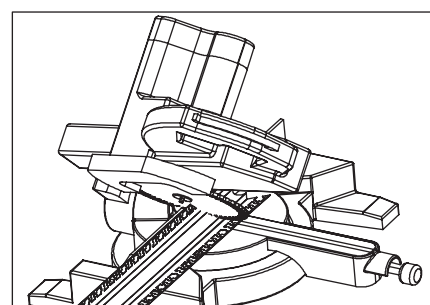


6 Cut profiles 45 degrees for external corners.

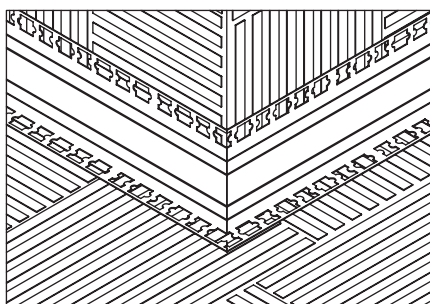


7 Align the profiles at the external corners and press them into the joint.

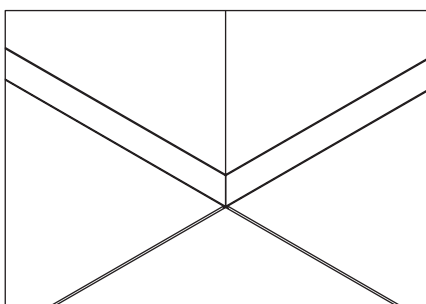


8 Place and align the ceramics to the profile.

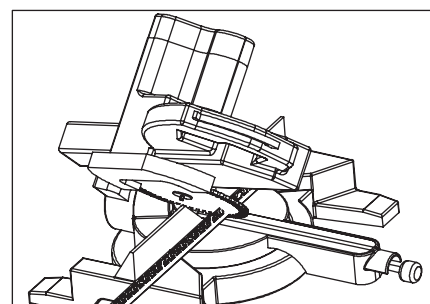

9 Cut profiles 45 degrees for internal corners.

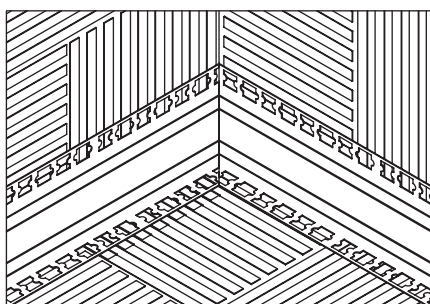

10 Align the profiles at the internal corners and press them into the joint.

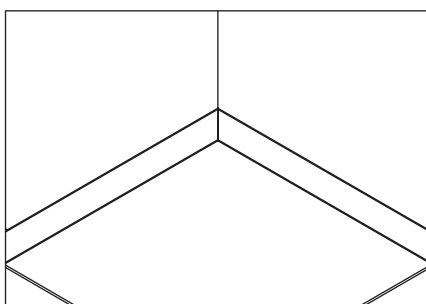

11 Place and align the ceramics to the profile.