

MOX Systems - tehniskā dokumentācija

assembly-manual-mps-yd-en.pdf

Tehniskais tulkojums: izmērus skatiet oriģinālajos rasējumos un atsauces lapās.

Avota lapa 1

Mps-Yd MONTĀŽAS ROKASGRĀMATA

Izvēlieties pareizo profilu atbilstoši grīdas seguma biezumam.

2 Uzklājiet savienojumu un attiecīgi nostipriniet profilus.

3 Spiediet profilu, līdz tas nofiksējas pie savienojuma.

4 Uzklājiet savienojumu vietās, kur tiks uzlikts grīdas segums.

5 Novietojiet grīdas segumu un izlīdziniet to ar profilu.


6 Izgrieziet profilus 45 grādu leņķī stūriem.

7 Izlīdziniet profilus stūros un iespiediet tos savienojumā. 41-21-01-8


8 Novietojiet grīdas segumu un izlīdziniet to ar profilu.

Lapa 1/1


Originālie rasējumi un atsauces lapas

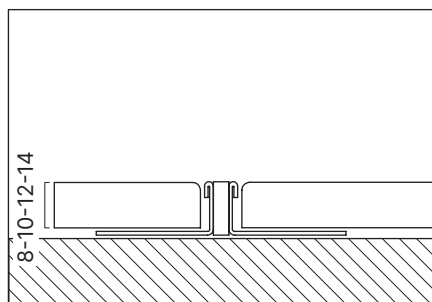


1 Pick the correct profile according to the flooring thickness.

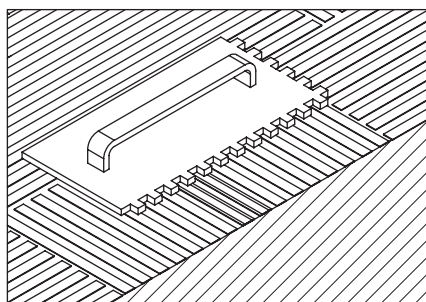


2 Apply joint and place the profiles anchor accordingly.

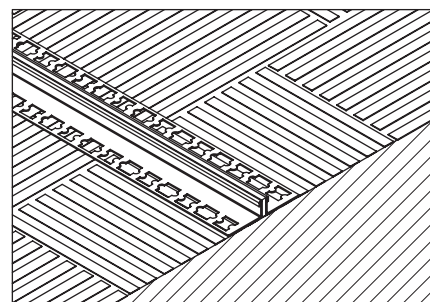


3 Press the profile until it is fixed to the joint.

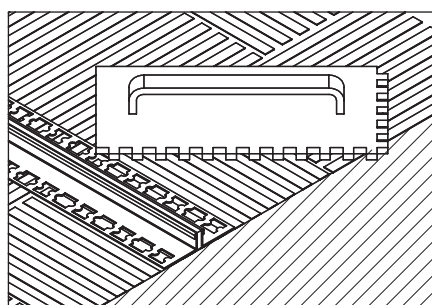


4 Apply joint to the places where the flooring will be placed.

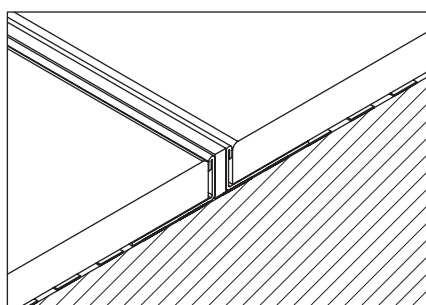


5 Place and align the flooring to the profile.

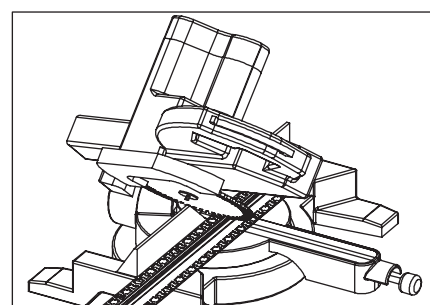

6 Cut profiles 45 degrees for corners.

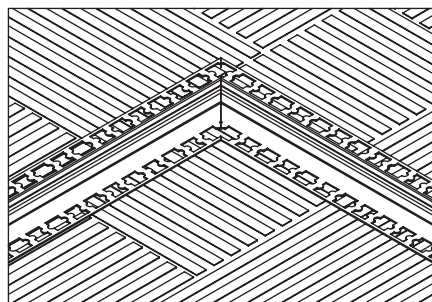

7 Align the profiles at the corners and press them into the joint.

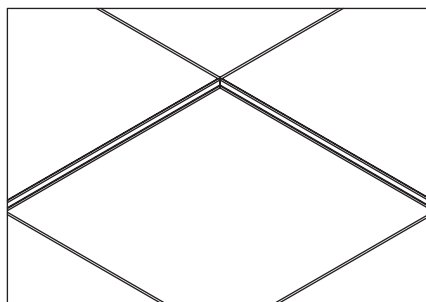

8 Place and align the flooring to the profile.