

MOX Systems - tehniskā dokumentācija

assembly-manual-revio-en.pdf

Tehniskais tulkojums: izmērus skatiet oriģinālajos rasējumos un atsauces lapās.

Avota lapa 1

Revio MONTĀŽAS ROKASGRĀMATA

Uzklāšana ar līmi

- 1 Uzklājiet profilu ar silikonu vai savienojumu.
- 2 Piestipriniet profilu pie grīdas un nospiediet to.
- 3 Novietojiet paklāju pie profila.

Uzklāšana ar skrūvi


- 11 Piestipriniet profilu ar skrūvēm.
- 2 Novietojiet paklāju pie profila.

Kōše Birleřimleri


- 1 Izgrieziet profilus 45 grādu leņķī iekšējiem stūriem.
- 2 Izlīdziniet profilus iekšējos stūros un ievietojiet tos savienojumā.
- 3 Novietojiet paklāju pie profila.
- 4 Izgrieziet profilus 45 grādu leņķī ārējiem stūriem.
- 5 Izlīdziniet profilus ārējos stūros un ievietojiet tos savienojumā.
- 6 Novietojiet paklāju pie profila.

Originālie rasējumi un atsauces lapas


Application with Adhesive

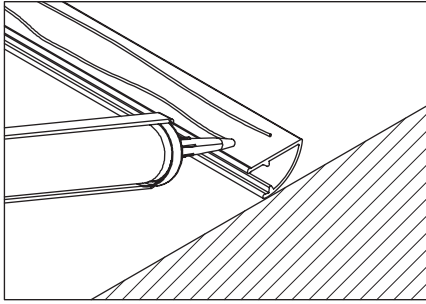

1 Apply silicone or joint to the profile.

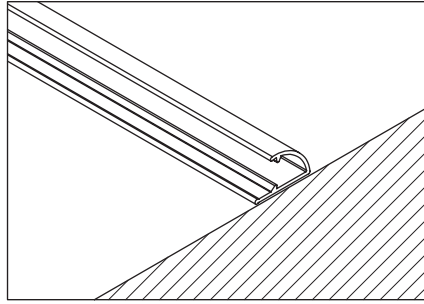


2 Fix the profile to the floor and press it.

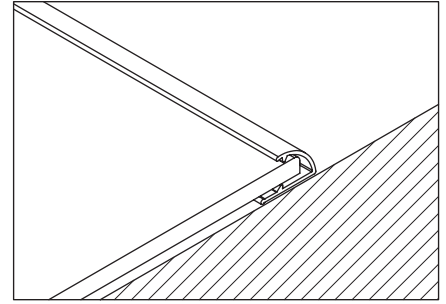


3 Place the carpet to the profile.

Application with Screw

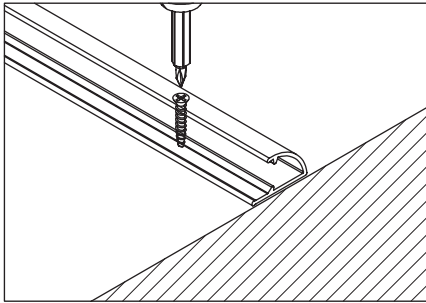


1 Fix the profile with screws.

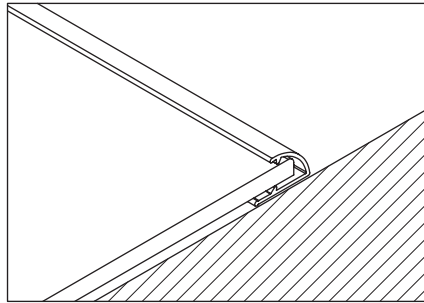


2 Place the carpet to the profile.


Köşe Birleşimleri

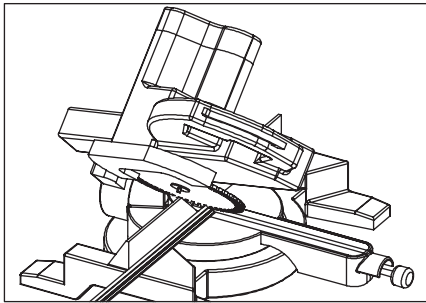


1 Cut profiles 45 degrees for internal corners.

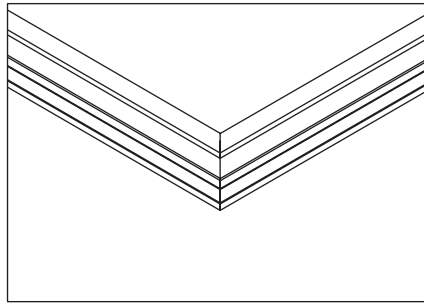


2 Align the profiles at the internal corners and place them into the joint.

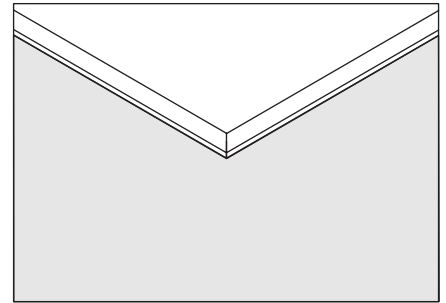


3 Place the carpet to the profile.

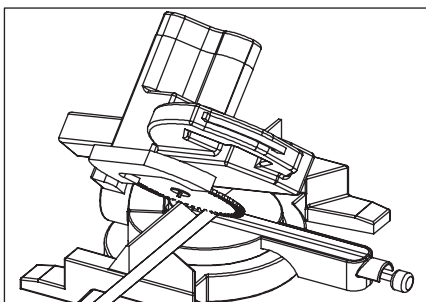

4 Cut profiles 45 degrees for external corners.

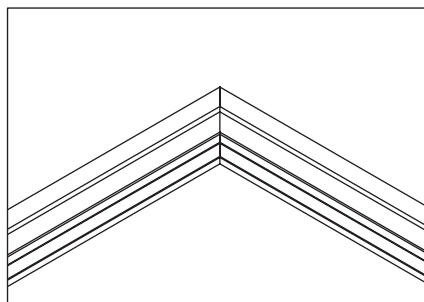

5 Align the profiles at the external corners and place them into the joint.

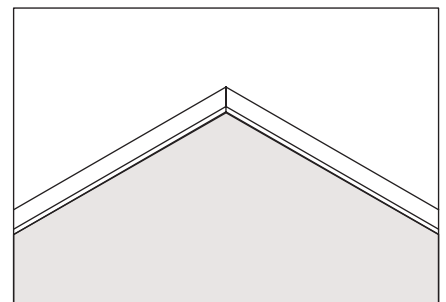

6 Place the carpet to the profile.