

# MOX Systems - tehniskā dokumentācija

assembly-manual-velo-en.pdf

Tehniskais tulkojums: izmērus skatiet oriģinālajos rasējumos un atsaucēs lapās.


## Avota lapa 1

### Velo MONTĀŽAS CEĻVEDIS


- 1 Divu līniju veidā saspiediet silīciju profila aizmugurē.
- 2 Ielīmējiet profilu, ar kuru saspiedāt silīciju, pie sienas un nospiediet.
- 3 Pielīmējiet profilu, ko pielīmējāt pie sienas, ar 50 cm intervālu.
- 4 Nākamajā dienā uzmanīgi noņemiet profila joslas.
- 5 Pārliedziniet, vai profils ir stingri pielipis pie sienas.
- 6 Izgrieziet profilus par 45 grādiem ārējiem stūriem.
7. Pielīmējiet 45 grādu leņķī nogrieztos profilus pie sienas tā, lai tie būtu cieši noslēgti viens pret otru.
- 8 Pārliedziniet, vai profili, kas ir nogriezti par 45 grādiem, ir pilnībā piestiprināti viens pie otra ārējos stūros.
- 9 Izgrieziet profilus par 45 grādiem iekšējiem stūriem.
10. Pielīmējiet 45 grādu leņķī nogrieztos profilus pie sienas tā, lai tie būtu cieši noslēgti viens pret otru.
- 11 Pārliedziniet, vai profili, kas ir nogriezti par 45 grādiem, ir pilnībā piestiprināti viens pie otra iekšējos stūros.

Lapa 1/1


## Originālie rasējumi un atsauces lapas

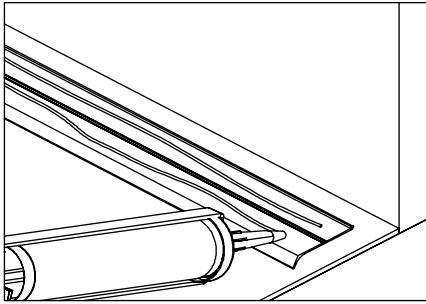


**1** Squeeze the silicon in the manner of two lines to the back side of the profile.

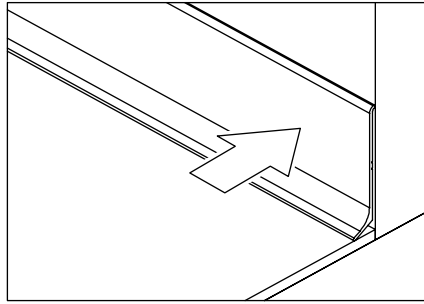


**2** Paste the profile that you squeezed the silicon to the wall and press.

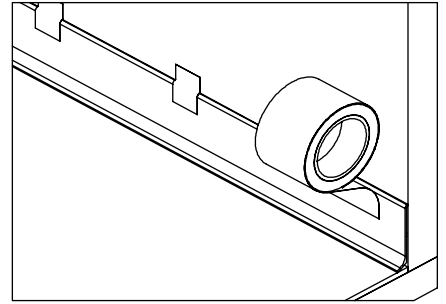


**3** Tape the profile that you pasted to the wall at 50cm intervals.

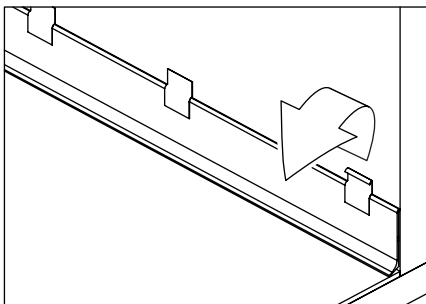


**4** Remove the bands that on the profile heedfully the day after.

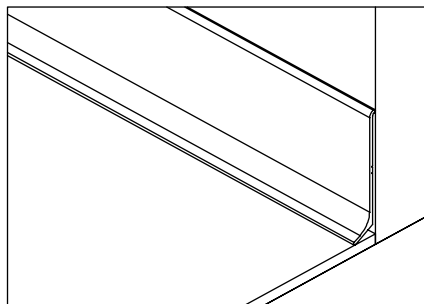


**5** Make sure that the profile is stuck to the wall firmly.

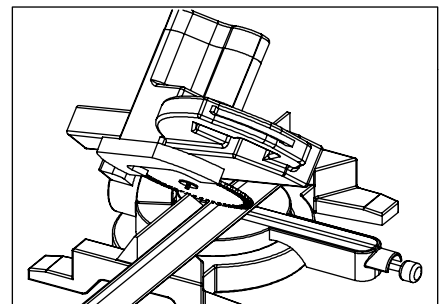


**6** Cut profiles 45 degrees for external corners.

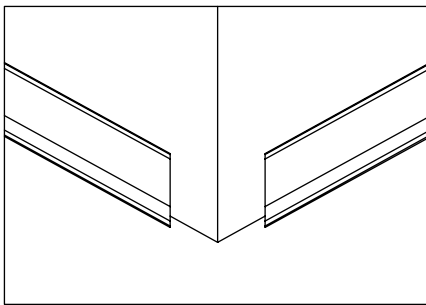


**7** Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

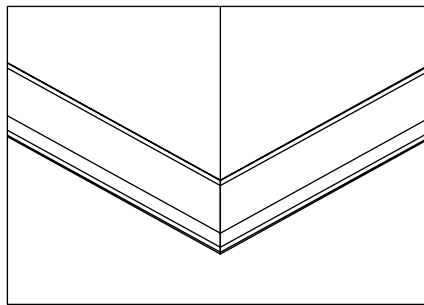


**8** Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

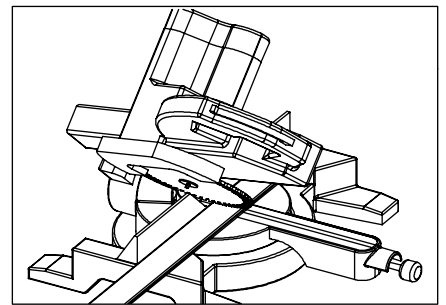

**9** Cut profiles 45 degrees for internal corners.

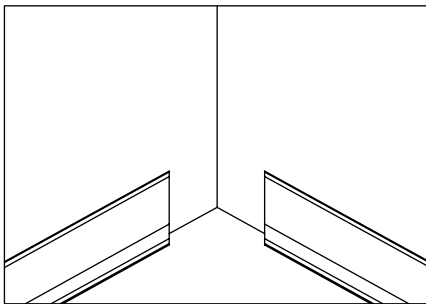

**10** Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

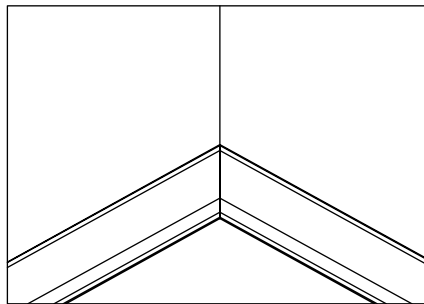

**11** Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.