

MOX Systems - tehniskā dokumentācija

assembly-manual-visio-en.pdf

Tehniskais tulkojums: izmērus skatiet oriģinālajos rasējumos un atsauces lapās.


Avota lapa 1

Visio MONTĀŽAS ROKASGRĀMATA


- 1 Izvēlieties pareizo profilu atbilstoši grīdas seguma biezumam.
- 2 Uzklājiet savienojumu un attiecīgi nostipriniet profilus.
- 3 Spiediet profilu, līdz tas nofiksējas pie savienojuma.
- 4 Novietojiet paklāju pie profila.
- 5 Izgrieziet profilus 45 grādu leņķī ārējiem stūriem.
- 6 Izlīdziniet profilus ārējos stūros un ievietojiet tos savienojumā.
- 7 Novietojiet paklāju pie profila.
- 8 Izgrieziet profilus par 45 grādiem iekšējiem stūriem.
- 9 Izlīdziniet profilus iekšējos stūros un ievietojiet tos savienojumā.
- 10 Novietojiet paklāju pie profila. 6 8

Lapa 1/1


Originālie rasējumi un atsaucēs lapas

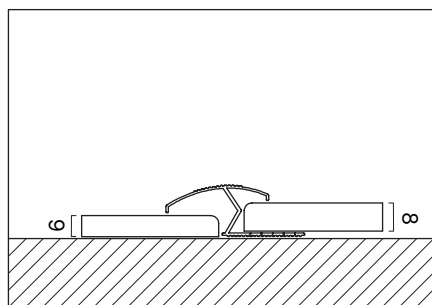


1 Pick the correct profile according to the flooring thickness.

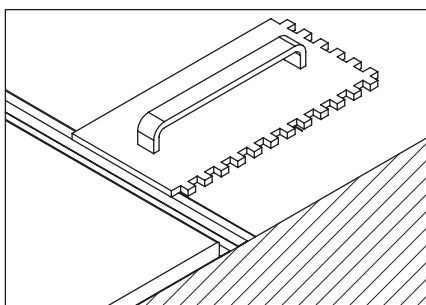


2 Apply joint and place the profiles anchor accordingly.

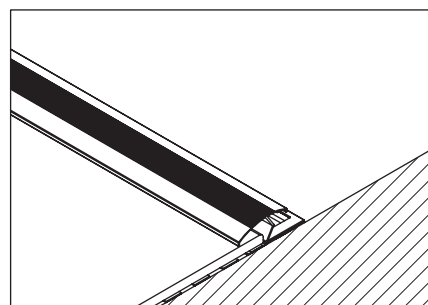


3 Press the profile until it is fixed to the joint.

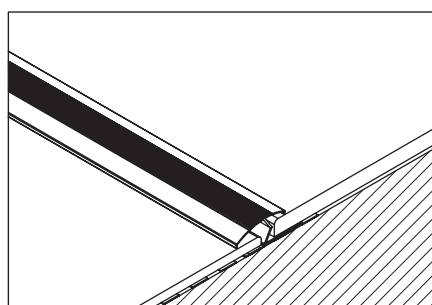


4 Place the carpet to the profile.

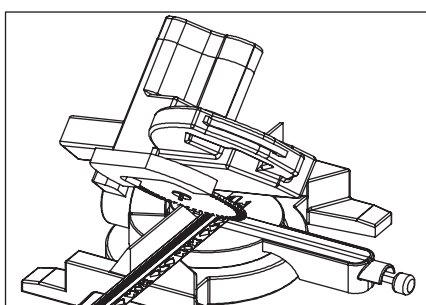


5 Cut profiles 45 degrees for external corners.

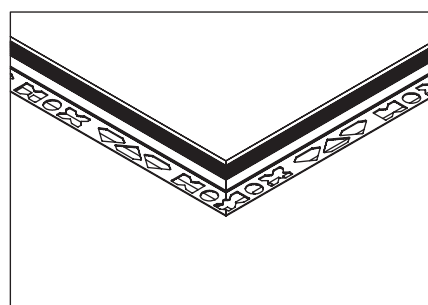


6 Align the profiles at the external corners and place them into the joint.

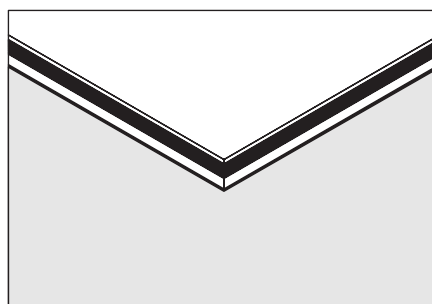


7 Place the carpet to the profile.

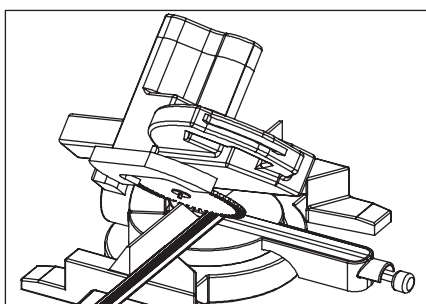

8 Cut profiles 45 degrees for internal corners.

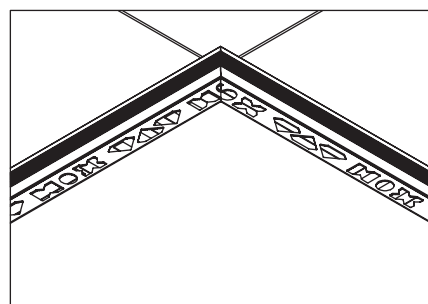

9 Align the profiles at the internal corners and place them into the joint.

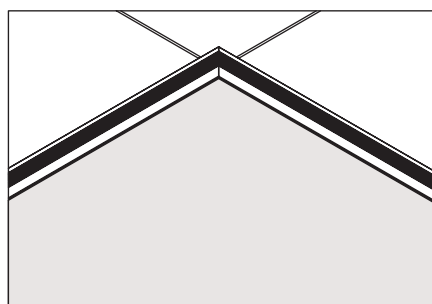

10 Place the carpet to the profile.