

MOX Systems - техничка документација

assembly-manual-revio-en.pdf

Технички превод: консултирајте ги оригиналните цртежи и референтните страници за димензии.

Изворна страница 1

ВОДИЧ ЗА СОБРАНИЕ Revio

Нанесување со лепило

- 1 Нанесете силикон или спој на профилот.
- 2 Прицврстете го профилот на подот и притиснете го.
- 3 Поставете го тепихот на профилот.

Апликација со завртка


- 11 Прицврстете го профилот со завртки.
- 2 Поставете го тепихот на профилот.

Коше Бирлешимлери


- 1 Исечете ги профилите за 45 степени за внатрешните агли.
- 2 Порамнете ги профилите на внатрешните агли и ставете ги во спојката.
- 3 Поставете го тепихот на профилот.
- 4 Исечете ги профилите за 45 степени за надворешни агли.
- 5 Порамнете ги профилите на надворешните агли и ставете ги во спојката.
- 6 Поставете го тепихот на профилот.

Оригинални цртежи и референтни страници


Application with Adhesive

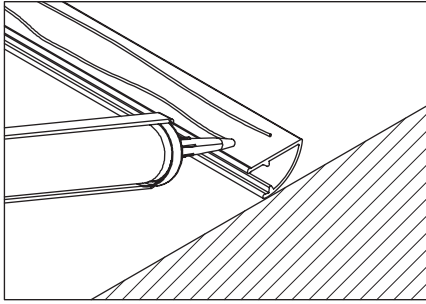

1 Apply silicone or joint to the profile.

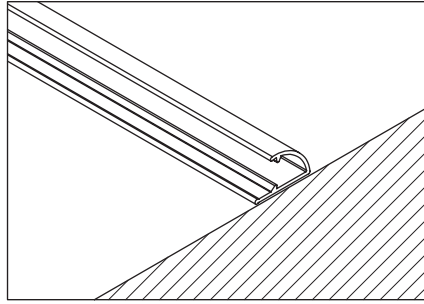


2 Fix the profile to the floor and press it.

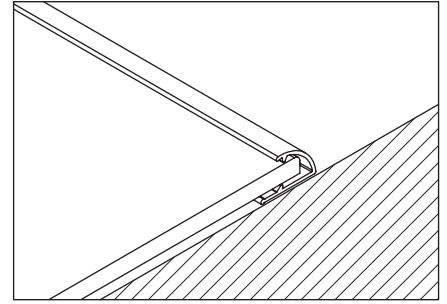


3 Place the carpet to the profile.

Application with Screw

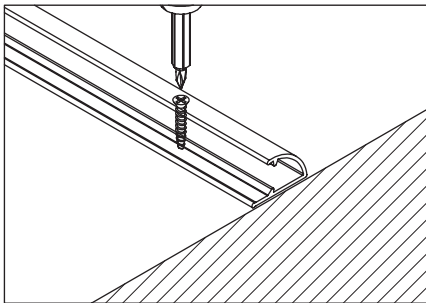


1 Fix the profile with screws.

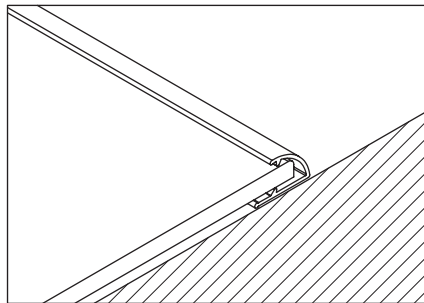


2 Place the carpet to the profile.


Köşe Birleşimleri

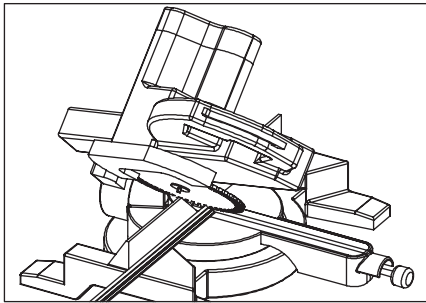


1 Cut profiles 45 degrees for internal corners.

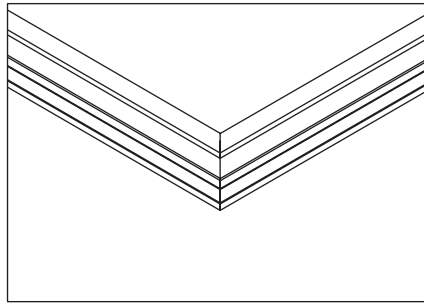


2 Align the profiles at the internal corners and place them into the joint.

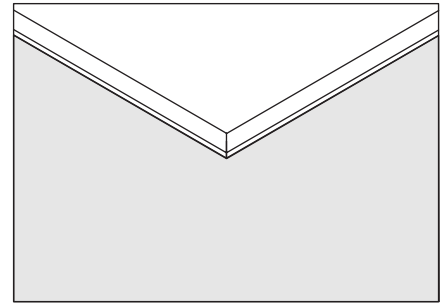


3 Place the carpet to the profile.

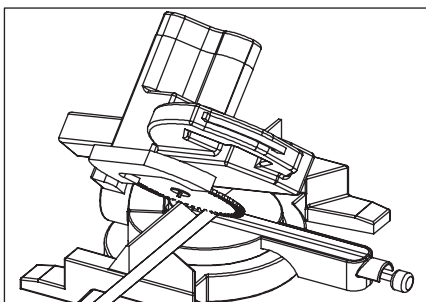

4 Cut profiles 45 degrees for external corners.

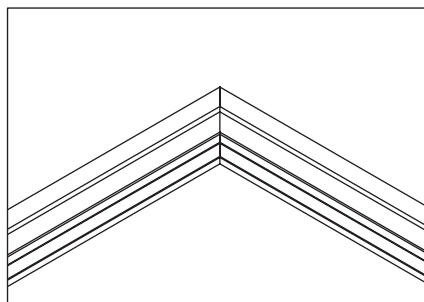

5 Align the profiles at the external corners and place them into the joint.

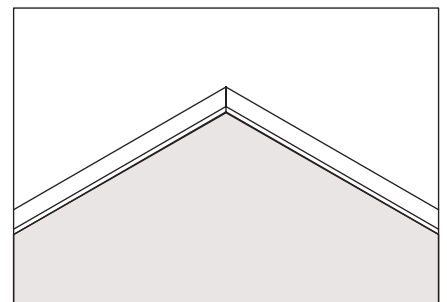

6 Place the carpet to the profile.