

MOX Systems - техничка документација

assembly-manual-round-fix-en.pdf

Технички превод: консултирајте ги оригиналните цртежи и референтните страници за димензии.


Изворна страница 1

ВОДИЧ ЗА СТАПУВАЊЕ Round-Fix

- 1 Изберете го точниот профил според дебелината на плочката.
- 2 Нанесете спој и соодветно поставете ги котвите на профилите.
- 3 Притиснете го профилот додека не се прицврсти на спојницата.
- 4 Нанесете спој на местата каде што ќе се постави керамиката.
- 5 Поставете ги плочките на профилот, внимавајќи нивните рабови да одговараат на профилот и да се рамни.
- 6 Исечете два профила на 45 степени за аголни споеви.
- 7 Порамнете ги профилите на внатрешните агли и притиснете ги во спојката. 10
- 8 Поставете ги плочките на профилот, внимавајќи нивните рабови да одговараат на профилот и да се рамни.

Страница 1/1


Оригинални цртежи и референтни страници

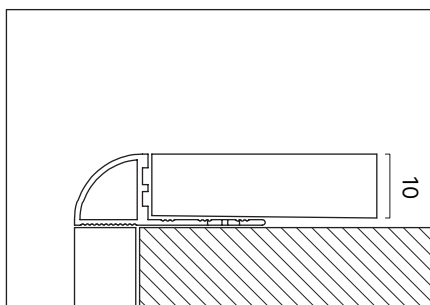


1 Pick the correct profile according to the tile thickness.




2 Apply joint and place the profiles anchor accordingly.

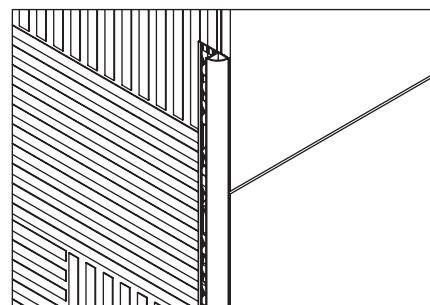


3 Press the profile until it is fixed to the joint.

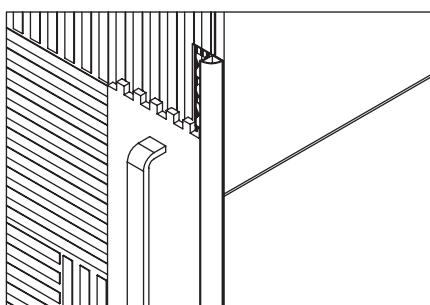


4 Apply joint to the places where the ceramics will be placed.

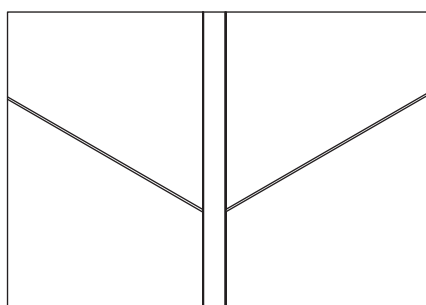


5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

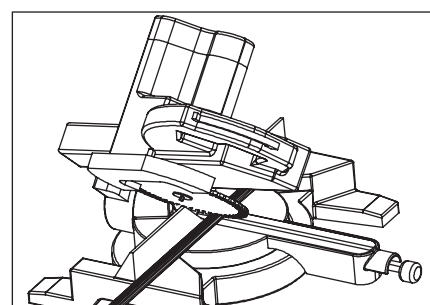

6 Cut two profiles at 45 degrees for corner joints.

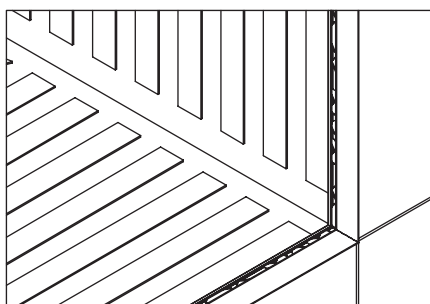

7 Align the profiles at the internal corners and press them into the joint.

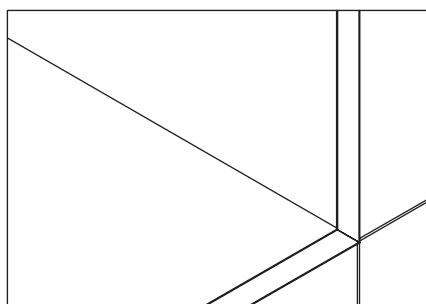

8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.