

MOX Systems - техничка документација

assembly-manual-velo-en.pdf

Технички превод: консултирајте ги оригиналните цртежи и референтните страници за димензии.


Изворна страница 1

ВОДИЧ ЗА СОБРАНИЕ Velo


- 1 Стиснете го силиконот на начин на две линии до задната страна на профилот.
- 2 Залепете го на сидот профилот што сте го исцедили со силикон и притиснете.
- 3 Залепете го профилот што сте го залепиле на сидот во интервали од 50 см.
- 4 Отстранете ги лентите кои се на профилот внимателно следниот ден.
- 5 Проверете дали профилот е цврсто залепен на сидот.
- 6 Исечете ги профилите за 45 степени за надворешни агли.
- 7 Залепете ги профилите што ги пресековте за 45 степени на сидот на начин што ќе бидат затворени еден за друг.
- 8 Проверете дали профилите што се исечени за 45 степени се целосно фиксирани еден до друг на надворешните агли.
- 9 Исечете ги профилите за 45 степени за внатрешните агли.
- 10 Залепете ги профилите што ги пресековте за 45 степени на сидот на начин што ќе се затворат еден за друг.
- 11 Проверете дали профилите што се исечени за 45 степени се целосно фиксирани еден до друг на внатрешните агли.

Страница 1/1


Оригинални цртежи и референтни страници

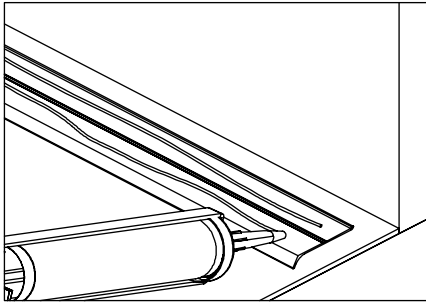


1 Squeeze the silicon in the manner of two lines to the back side of the profile.

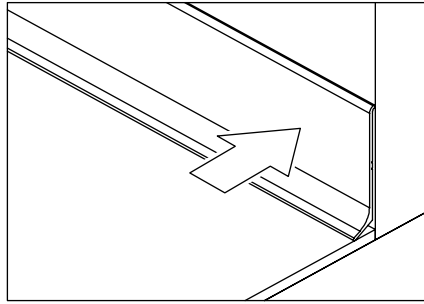


2 Paste the profile that you squeezed the silicon to the wall and press.

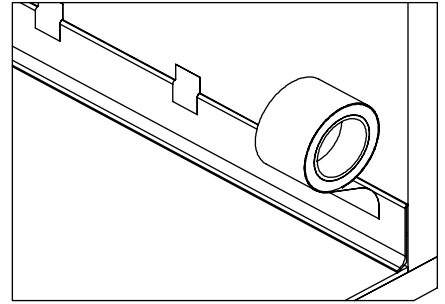


3 Tape the profile that you pasted to the wall at 50cm intervals.

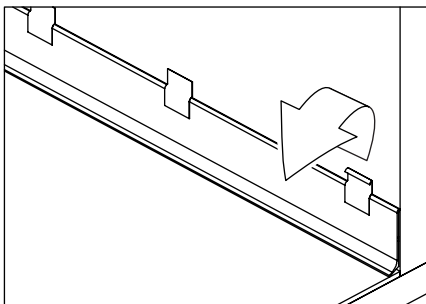


4 Remove the bands that on the profile heedfully the day after.

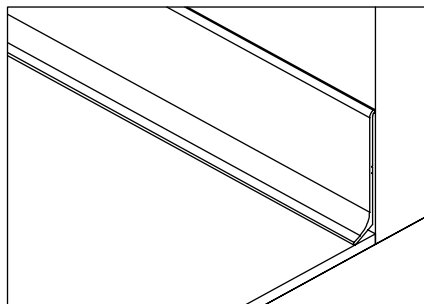


5 Make sure that the profile is stuck to the wall firmly.

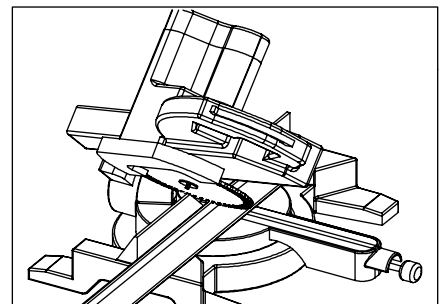


6 Cut profiles 45 degrees for external corners.

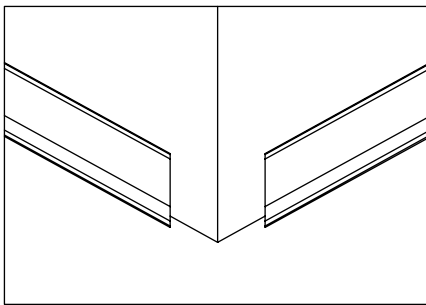


7 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

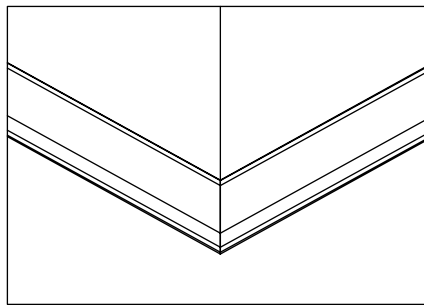


8 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

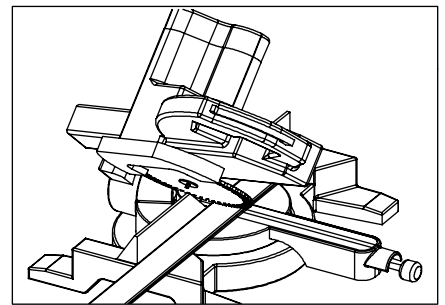

9 Cut profiles 45 degrees for internal corners.

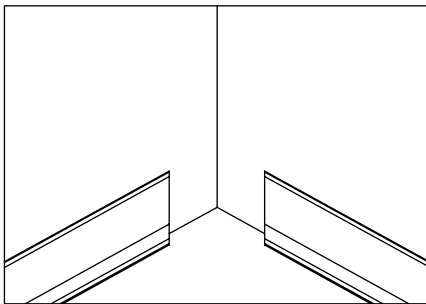

10 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

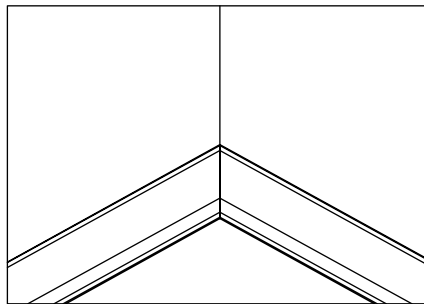

11 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.