

MOX Systems - техничка документација

assembly-manual-visio-en.pdf

Технички превод: консултирајте ги оригиналните цртежи и референтните страници за димензии.


Изворна страница 1

ВОДИЧ ЗА СОБРАНИЕ Visio


- 1 Изберете го точниот профил според дебелината на подот.
- 2 Нанесете спој и соодветно поставете ги котвите на профилите.
- 3 Притиснете го профилот додека не се прицврсти на спојницата.
- 4 Поставете го тепихот на профилот.
- 5 Исечете ги профилите за 45 степени за надворешни агли.
- 6 Порамнете ги профилите на надворешните агли и ставете ги во спојката.
- 7 Поставете го тепихот на профилот.
- 8 Исечете ги профилите за 45 степени за внатрешните агли.
- 9 Порамнете ги профилите на внатрешните агли и ставете ги во спојката.
- 10 Поставете го тепихот на профилот. 6 8

Страница 1/1


Оригинални цртежи и референтни страници

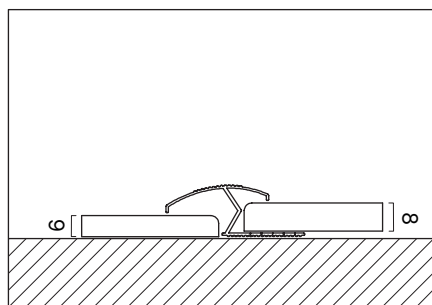


1 Pick the correct profile according to the flooring thickness.

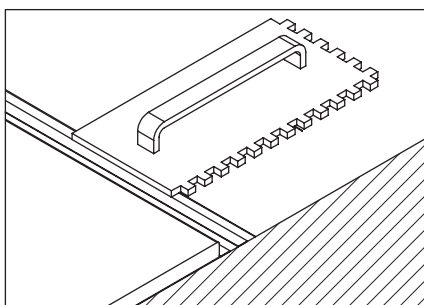


2 Apply joint and place the profiles anchor accordingly.

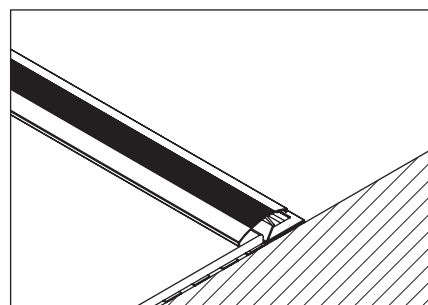


3 Press the profile until it is fixed to the joint.

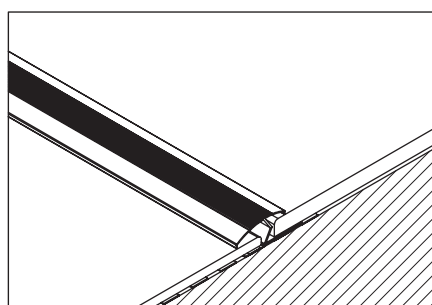


4 Place the carpet to the profile.

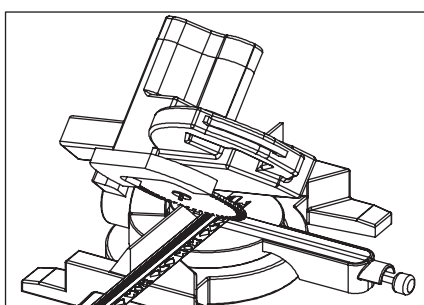


5 Cut profiles 45 degrees for external corners.

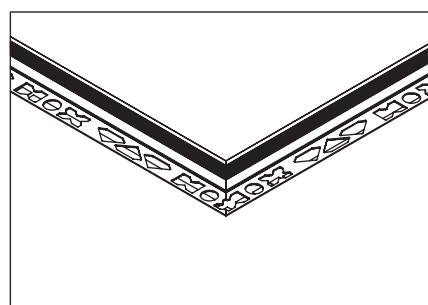


6 Align the profiles at the external corners and place them into the joint.

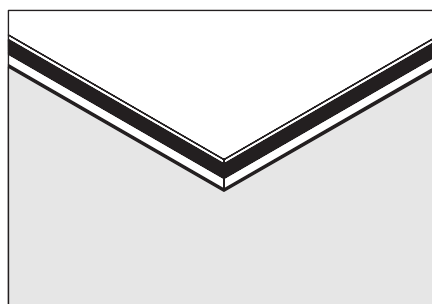


7 Place the carpet to the profile.

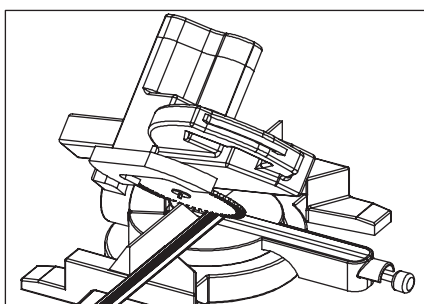

8 Cut profiles 45 degrees for internal corners.

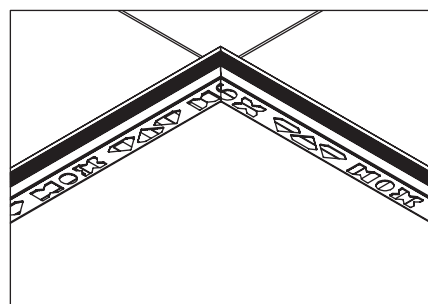

9 Align the profiles at the internal corners and place them into the joint.

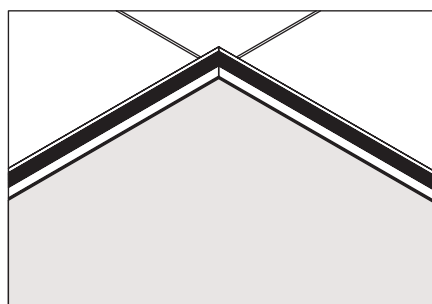

10 Place the carpet to the profile.