

Sistemi MOX - dokumentazzjoni teknika

assembly-manual-gravity-en.pdf

Traduzzjoni teknika: ikkonsulta t-tpingijiet originali u l-paġni ta' referenza għad-dimensjonijiet.


Paġna tas-sors 1

GWIDA GĦALL-ASSEMBLJA TAL-GRAVITÀ MOX


- 1 Aghżel il-profil korrett skont il-ħxuna tal-madum.
- 2 Applika kongunta u poġġi l-ankra tal-profil kif xieraq.
- 3 Aghfas il-profil sakemm ikun imwaħħal mal-ġonta.
- 4 Applika kongunti għall-postijiet fejn se titqiegħed iċ-ċeramika.
- 5 Poġġi l-madum fuq il-profil, kun żgur li t-truf tagħhom jaqblu mal-profil u huma flush.
- 6 Aqta 'profili 45 grad għall-kantunieri esterni.
- 7 Allinja l-profil fil-kantunieri esterni u aghfashom fil-ġonta.
- 8 Poġġi l-madum fuq il-profil, kun żgur li t-truf tagħhom jaqblu mal-profil u huma flush.
- 9 Aqta 'profili 45 grad għall-kantunieri interni.
- 10 Allinja l-profil fil-kantunieri interni u aghfashom fil-ġonta.
- 11 Poġġi l-madum fuq il-profil, kun żgur li t-truf tagħhom jaqblu mal-profil u huma flush.

Paġna 1/1


Tpingijiet originali u pagni ta' referenza

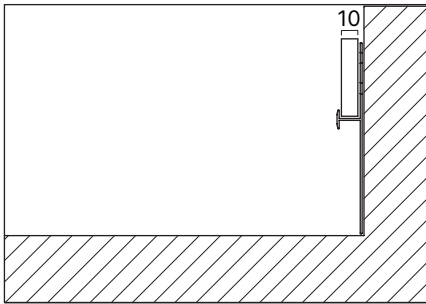


- 1 Pick the correct profile according to the tile thickness.

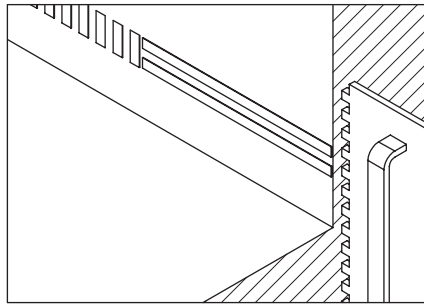


- 2 Apply joint and place the profiles anchor accordingly.

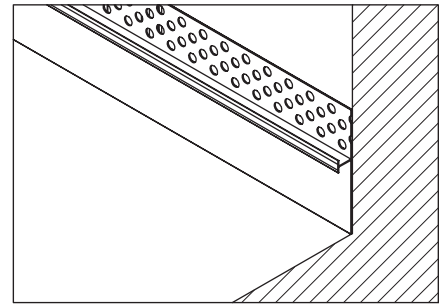


- 3 Press the profile until it is fixed to the joint.

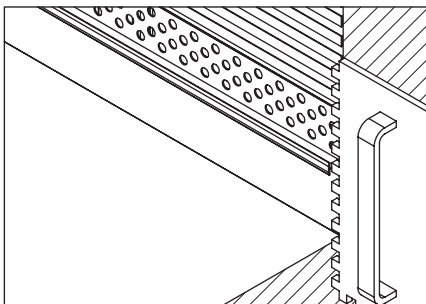


- 4 Apply joint to the places where the ceramics will be placed.

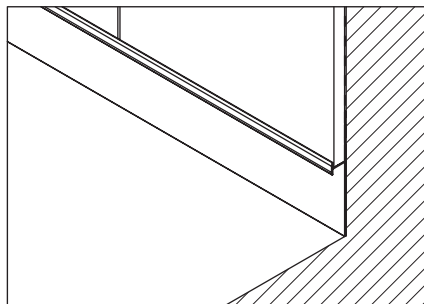


- 5 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

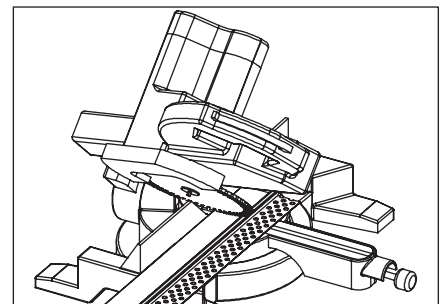


- 6 Cut profiles 45 degrees for external corners.

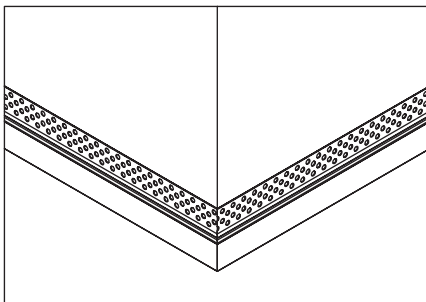


- 7 Align the profiles at the external corners and press them into the joint.

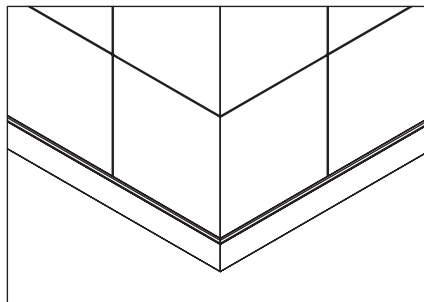


- 8 Place the tiles on the profile, making sure that their edges fit the profile and are flush.

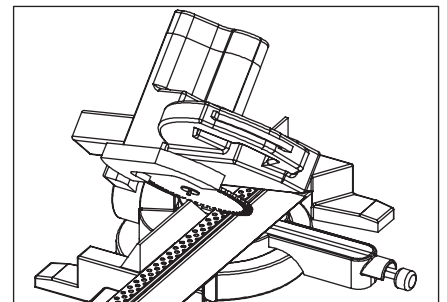

- 9 Cut profiles 45 degrees for external corners.

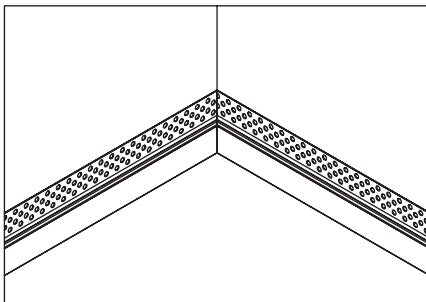

- 10 Align the profiles at the internal corners and press them into the joint.

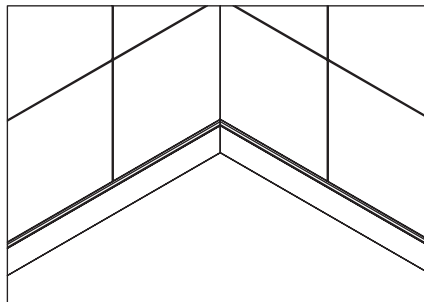

- 11 Place the tiles on the profile, making sure that their edges fit the profile and are flush.