

Sistemi MOX - dokumentazzjoni teknika

assembly-manual-mps-tb-en.pdf

Traduzzjoni teknika: ikkonsulta t-tpingijiet originali u l-paġni ta' referenza għad-dimensjonijiet.

Paġna tas-sors 1

Mps-Tb GWIDA GĦALL-ASSEMBLJA

Agħżel il-profil korrett skont il-ħxuna tal-art.

2 Applika kongunta u poġġi l-ankra tal-profil kif xieraq.

3 Agħfas il-profil sakemm ikun imwaħħal mal-ġonta.

4 Applika kongunti għall-postijiet fejn se titqiegħed l-art.

5 Poġġi u allinja l-art mal-profil.

6 Aqta 'profili 45 grad għall-kantunieri esterni.

Allinja l-profil fil-kantunieri esterni u agħfashom fil-ġonta.

8 Poġġi u allinja l-art mal-profil.


9 Aqta 'profili 45 grad għall-kantunieri interni.

10 Allinja l-profil fil-kantunieri interni u agħfashom fil-ġonta.


11 Poġġi u allinja l-art mal-profil.

Paġna 1/1


Tpingijiet originali u pagni ta' referenza

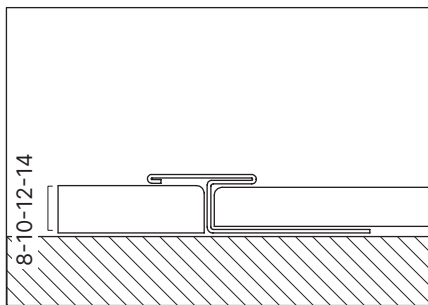


1 Pick the correct profile according to the flooring thickness.

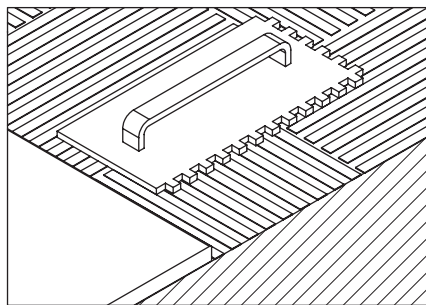


2 Apply joint and place the profiles anchor accordingly.

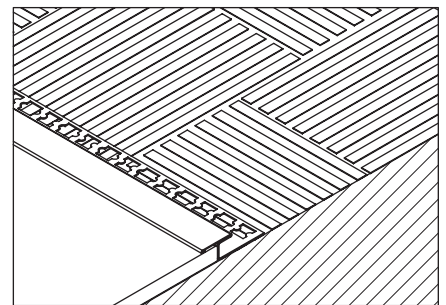


3 Press the profile until it is fixed to the joint.

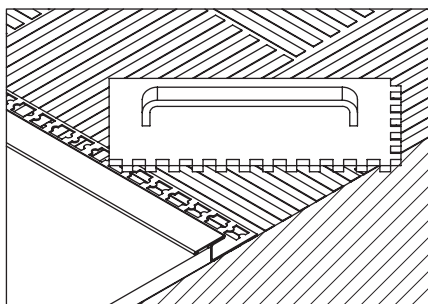


4 Apply joint to the places where the flooring will be placed.

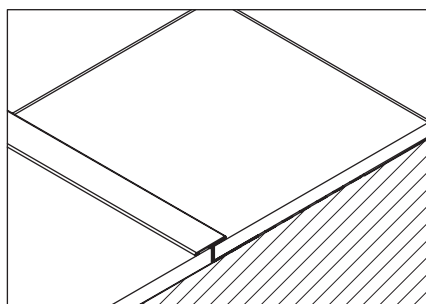


5 Place and align the flooring to the profile.

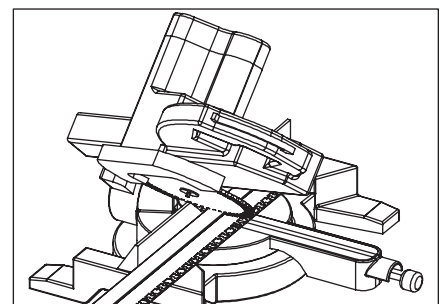


6 Cut profiles 45 degrees for external corners.

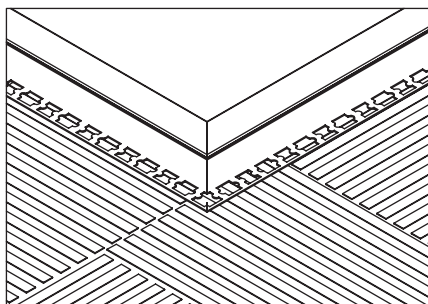


7 Align the profiles at the external corners and press them into the joint.

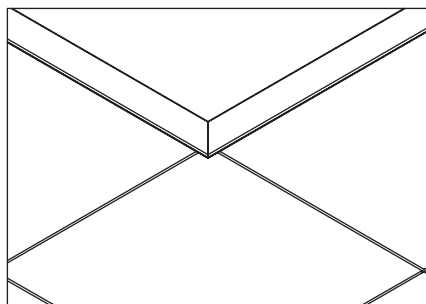


8 Place and align the flooring to the profile.

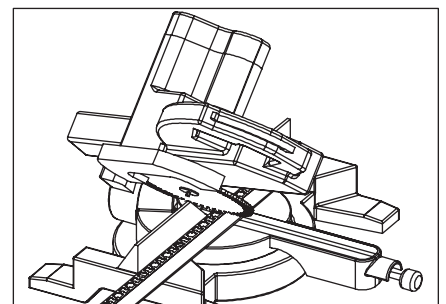

9 Cut profiles 45 degrees for internal corners.

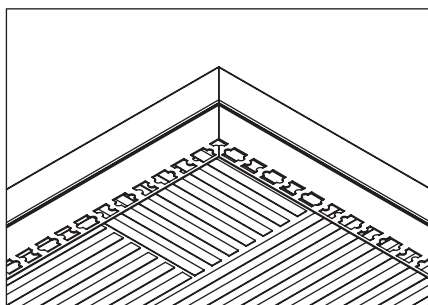

10 Align the profiles at the internal corners and press them into the joint.

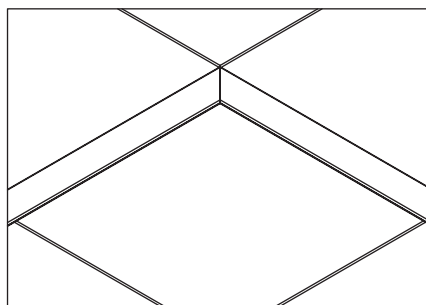

11 Place and align the flooring to the profile.