

Sistemi MOX - dokumentazzjoni teknika

assembly-manual-revio-en.pdf

Traduzzjoni teknika: ikkonsulta t-tpingijiet originali u l-paġni ta' referenza għad-dimensjonijiet.

Paġna tas-sors 1

GWIDA GĦALL-ASSEMBLJA Revio

Applikazzjoni bil-Kolla

1 Applika silikon jew ġonta mal-profil.

2 Waħḥal il-profil mal-art u agħfasha.

3 Poġġi t-tapit mal-profil.

Applikazzjoni bil-Invita

11 Waħḥal il-profil bil-viti.

2 Poġġi t-tapit mal-profil.

Koşe Birleşimleri

1 Aqta 'profili 45 grad għall-kantunieri interni.

2 Allinja l-profili fil-kantunieri interni u poġġihom fil-ġonta.

3 Poġġi t-tapit mal-profil.


4 Aqta 'profili 45 grad għall-kantunieri esterni.

5 Allinja l-profili fil-kantunieri esterni u poġġihom fil-ġonta.


6 Poġġi t-tapit mal-profil.

Tpingijiet originali u pagħni ta' referenza


Application with Adhesive

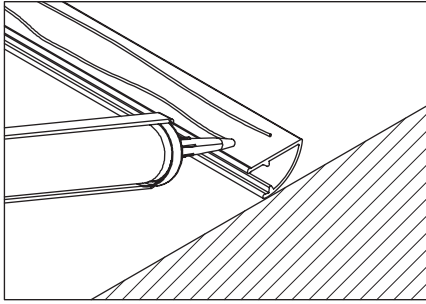

1 Apply silicone or joint to the profile.

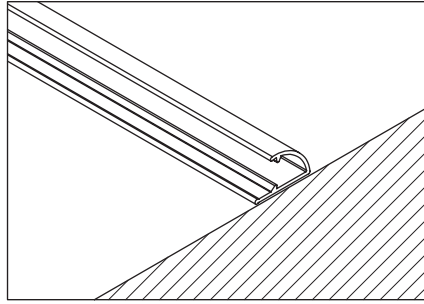


2 Fix the profile to the floor and press it.

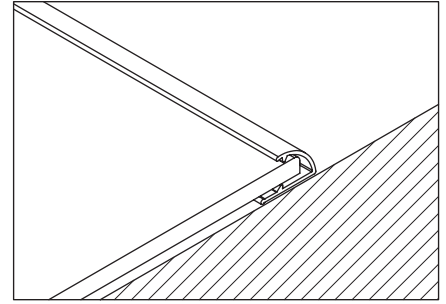


3 Place the carpet to the profile.

Application with Screw

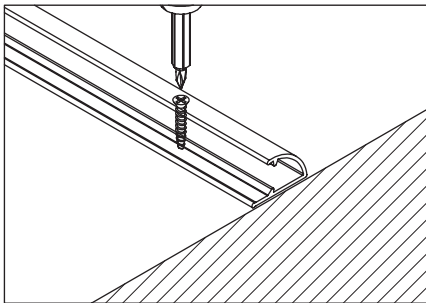


1 Fix the profile with screws.

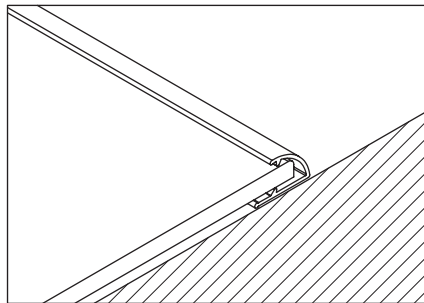


2 Place the carpet to the profile.


Köşe Birleşimleri

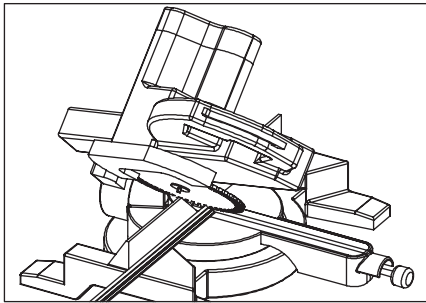


1 Cut profiles 45 degrees for internal corners.

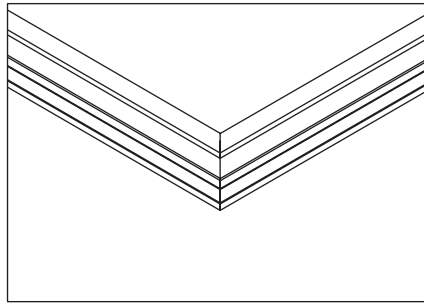


2 Align the profiles at the internal corners and place them into the joint.

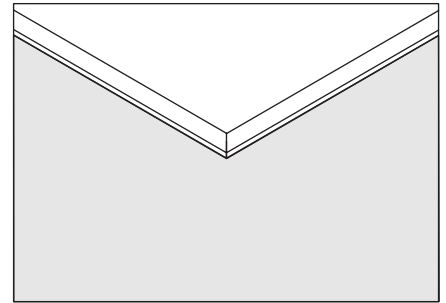


3 Place the carpet to the profile.

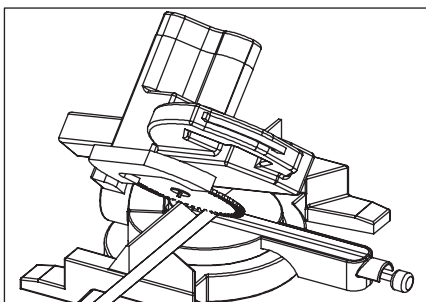

4 Cut profiles 45 degrees for external corners.

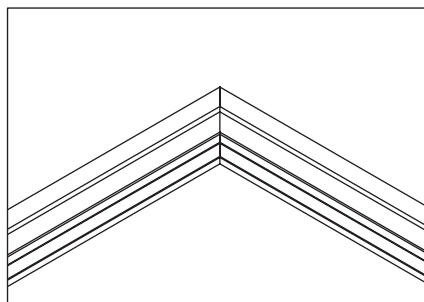

5 Align the profiles at the external corners and place them into the joint.

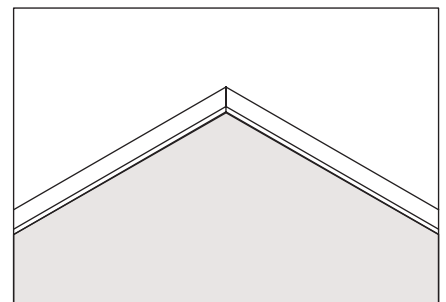

6 Place the carpet to the profile.