

# Sistemi MOX - dokumentazzjoni teknika

assembly-manual-sentio-en.pdf

Traduzzjoni teknika: ikkonsulta t-tpingijiet originali u l-paġni ta' referenza għad-dimensjonijiet.


## Paġna tas-sors 1

GWIDA GĦALL-ASSEMBLJA Sentio


- 1 Poġġi l-għodda tal-iffissar tal-ħajt f'intervalli ta '50 cm u mmarka l-ħajt mit-toqob tal-kamin.
- 2 Drill il-punti li diġà mmarkajt.
- 3 Poġġi l-kavilji korretti skont il-materjal tal-ħajt fit-toqob imtaqqbin.
- 4 Invita l-għodda tal-iffissar tal-ħajt f'postijiet li huma mtaqqbin f'intervalli ta '50 cm.
- 5 Arma l-profil fuq l-għodda tal-iffissar tal-ħajt b'hal fl-istampa.
- 6 Kun żgur li d-dwiefer tal-profil u d-dwiefer tal-għodda tal-iffissar huma kompletament konnessi ma 'xulxin u kun żgur li l-lingwata tal-profil hija mwaħħla mal-art.
- 7 Aqta 'profili 45 grad għall-kantunieri esterni.
- 8 Waħħal l-għodda tal-iffissar tal-ħajt bil-mod li se jingħalqu mal-kantunieri u immunta l-profili li taqtgħu 45 grad fuqha.
- 9 Kun żgur li l-profili li huma maqtugħa 45 grad huma mwaħħla ma 'xulxin kompletament fil-kantunieri esterni.
- 10 Aqta profili 45 grad għall-kantunieri interni.
- 11 Waħħal l-għodda tal-iffissar tal-ħajt bil-manjiera li tkun magħluqa mal-kantunieri u arma l-profili li inti maqtugħa 45 grad fuqha.
- 12 Kun żgur li l-profili li huma maqtugħa 45 grad huma mwaħħla ma 'xulxin kompletament fil-kantunieri interni.

Paġna 1/1


Tpingijiet originali u pagni ta' referenza

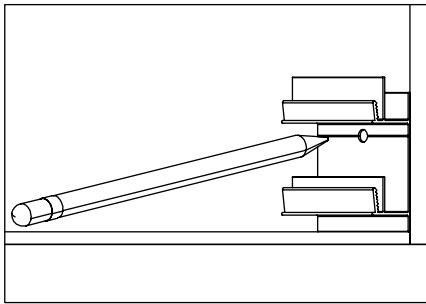


**1** Place the wall fixation tools at 50cm intervals and mark the wall from the screw holes.

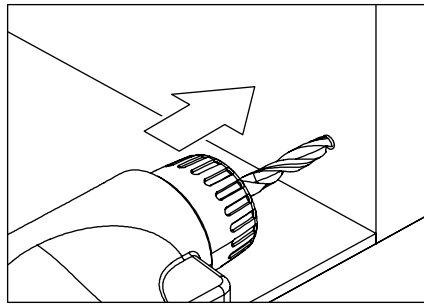


**2** Drill the points that you have already marked.

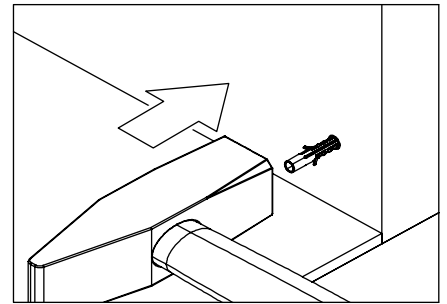


**3** Place the correct dowels according to the wall material into the drilled holes.

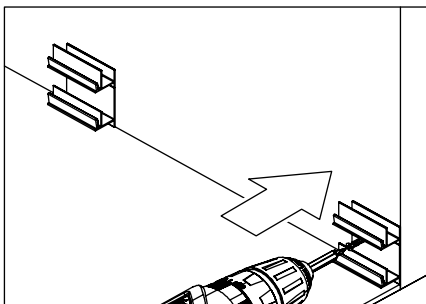


**4** Screw the wall fixation tools to places that are drilled at 50cm intervals.

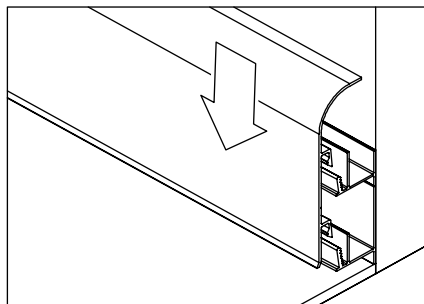


**5** Assemble the profile on the wall fixation tools just like in the picture.

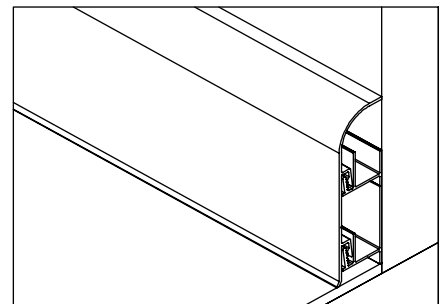


**6** Make sure that the profile nails and the fixation tool's nails are completely connected to each other and be sure that the profile sole is fixed to the floor.

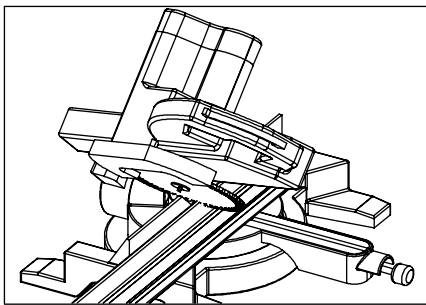


**7** Cut profiles 45 degrees for external corners.

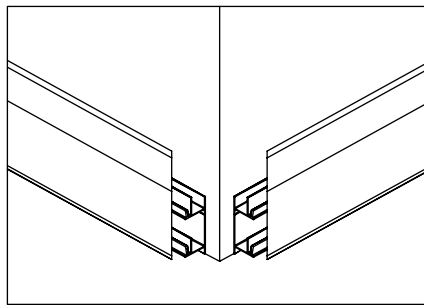


**8** Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

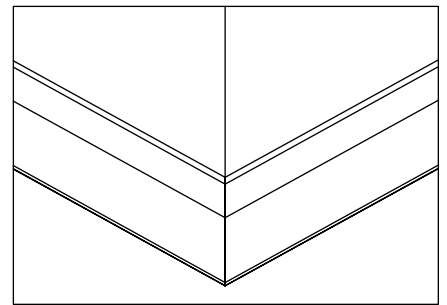


**9** Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

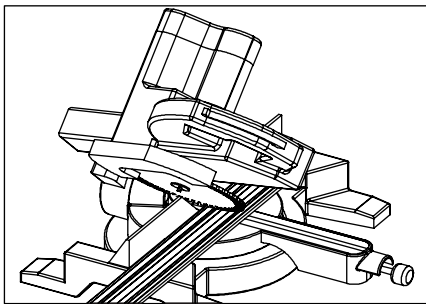

**10** Cut profiles 45 degrees for internal corners.

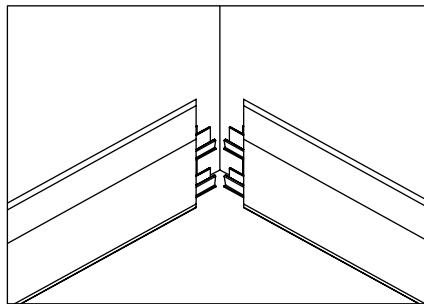

**11** Affix the wall fixation tools in the manner that will be closed to the corners and assemble the profiles that you cut 45 degrees on it.

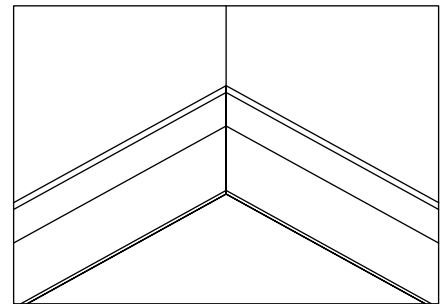

**12** Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.