

Sistemi MOX - dokumentazzjoni teknika

assembly-manual-visio-en.pdf

Traduzzjoni teknika: ikkonsulta t-tpinjijiet originali u l-paġni ta' referenza għad-dimensjonijiet.


Paġna tas-sors 1

GWIDA GĦALL-ASSEMBLJA Visio


- 1 Aghżel il-profil korrett skont il-ħxuna tal-art.
- 2 Applika kongunta u poġġi l-ankra tal-profil kif xieraq.
- 3 Aghfas il-profil sakemm ikun imwaħħal mal-ġonta.
- 4 Poġġi t-tapit mal-profil.
- 5 Aqta 'profili 45 grad għall-kantunieri esterni.
- 6 Allinja l-profil fil-kantunieri esterni u poġġihom fil-ġonta.
7. Poġġi t-tapit mal-profil.
- 8 Aqta 'profili 45 grad għall-kantunieri interni.
- 9 Allinja l-profil fil-kantunieri interni u poġġihom fil-ġonta.
- 10 Poġġi t-tapit mal-profil. 6 8

Paġna 1/1


Tpingijiet originali u pagni ta' referenza

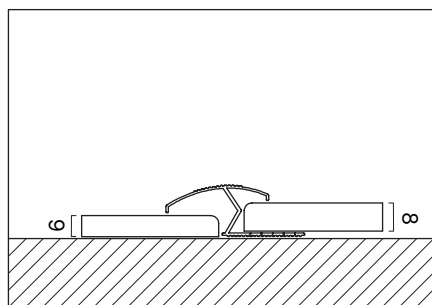


1 Pick the correct profile according to the flooring thickness.

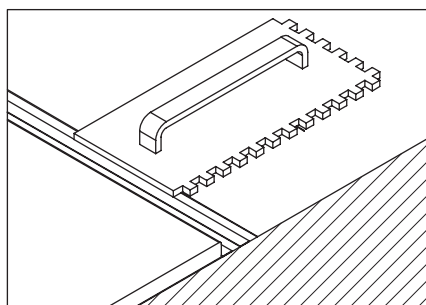


2 Apply joint and place the profiles anchor accordingly.

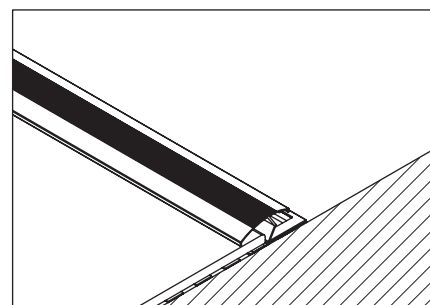


3 Press the profile until it is fixed to the joint.

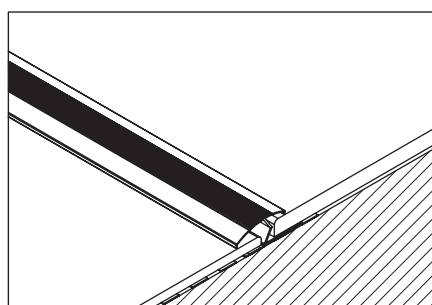


4 Place the carpet to the profile.

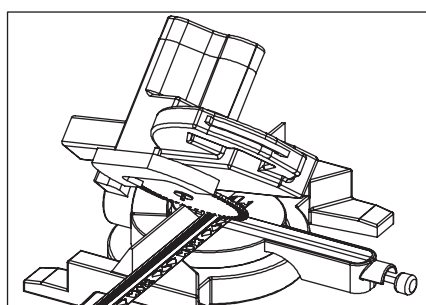


5 Cut profiles 45 degrees for external corners.

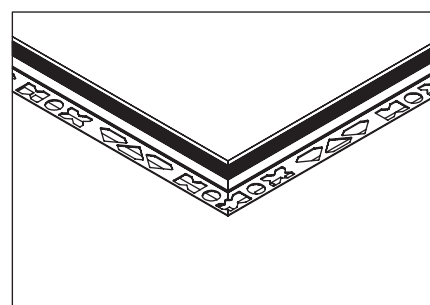


6 Align the profiles at the external corners and place them into the joint.

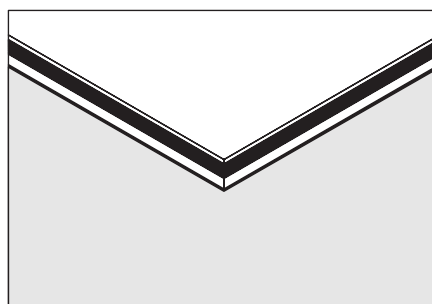


7 Place the carpet to the profile.

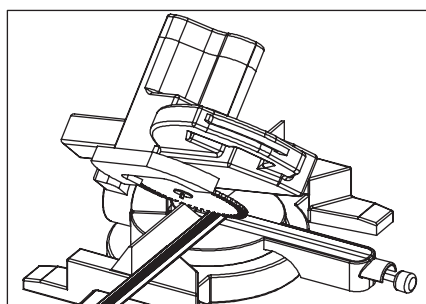

8 Cut profiles 45 degrees for internal corners.

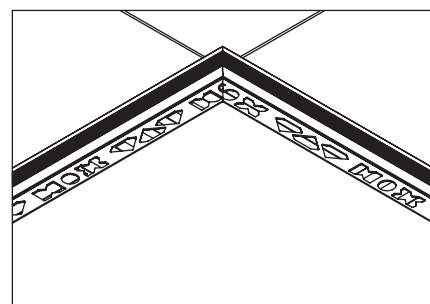

9 Align the profiles at the internal corners and place them into the joint.

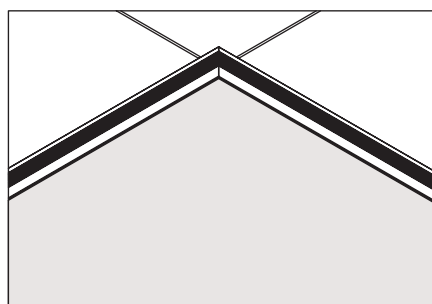

10 Place the carpet to the profile.