

MOX Systems - teknisk dokumentasjon

assembly-manual-mps-e-en.pdf

Teknisk oversettelse: se originaltegningene og referansesidene for dimensjoner.


Kildeside 1

Mps-E MONTERINGSVEILEDNING


- 1 Velg riktig profil i henhold til gulvtykkelsen.
- 2 Påfør skjøt og plasser profilene anker tilsvarende.
- 3 Trykk på profilen til den er festet til skjøten.
- 4 Påfør fuge på stedene der gulvet skal legges.
- 5 Plasser og juster gulvet etter profilen.
- 6 Kutt profiler 45 grader for utvendige hjørner.
Juster profilene i de ytre hjørnene og trykk dem inn i skjøten.
- 8 Plasser og juster gulvet etter profilen.
- 9 Kutt profiler 45 grader for innvendige hjørner.
Juster profilene ved de innvendige hjørnene og press dem inn i skjøten.
- 11 Plasser og juster gulvet etter profilen.

Side 1/1


Originaltegninger og referansesider

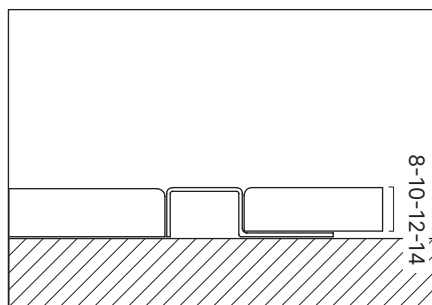


- 1** Pick the correct profile according to the flooring thickness.

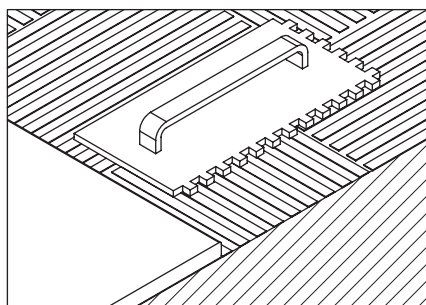


- 2** Apply joint and place the profiles accordingly.

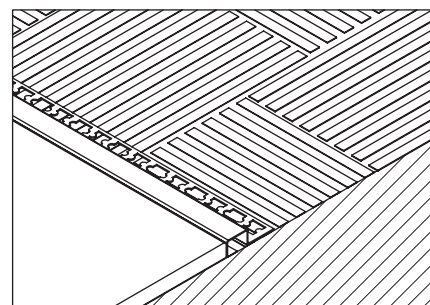


- 3** Press the profile until it is fixed to the joint.

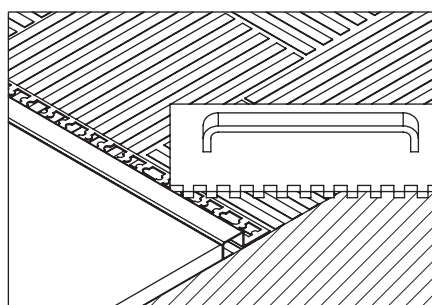


- 4** Apply joint to the places where the flooring will be placed.

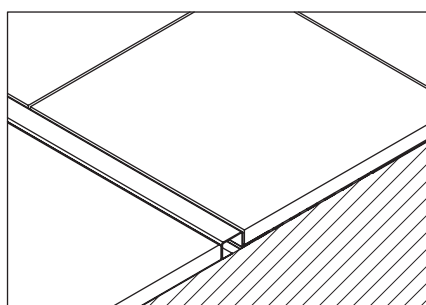


- 5** Place and align the flooring to the profile.

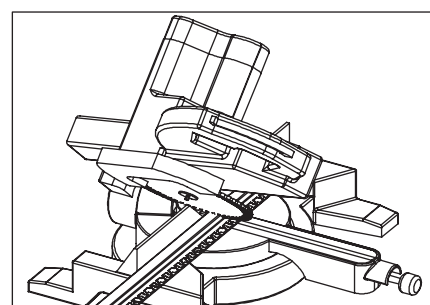


- 6** Cut profiles 45 degrees for external corners.

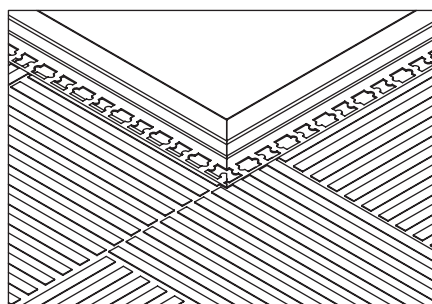


- 7** Align the profiles at the external corners and press them into the joint.

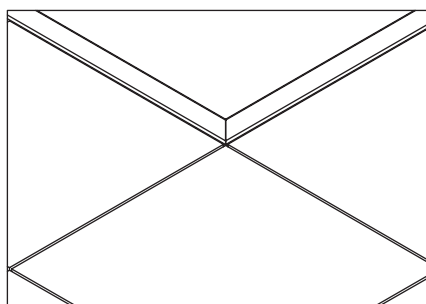


- 8** Place and align the flooring to the profile.

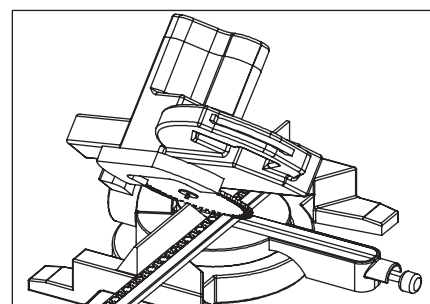

- 9** Cut profiles 45 degrees for internal corners.

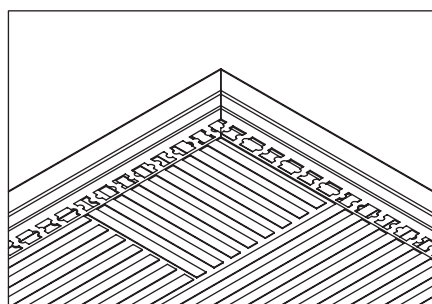

- 10** Align the profiles at the internal corners and press them into the joint.

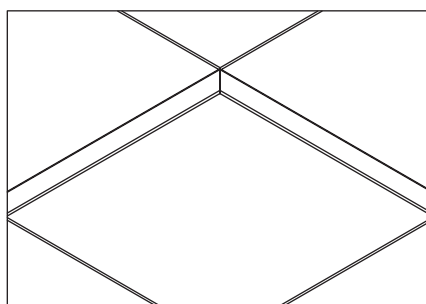

- 11** Place and align the flooring to the profile.