

MOX Systems - teknisk dokumentasjon

assembly-manual-mps-n-en.pdf

Teknisk oversettelse: se originaltegningene og referansesidene for dimensjoner.

Kildeside 1

Mps-N MONTERINGSVEILEDNING

Velg riktig profil i henhold til gulvtykkelsen.

2 Påfør skjøt og plasser profilene anker tilsvarende.

3 Trykk på profilen til den er festet til skjøten.

4 Påfør fuge på stedene der gulvet skal legges.

5 Plasser og juster gulvet etter profilen.

6 Kutt profiler 45 grader for utvendige hjørner.

Juster profilene i de ytre hjørnene og trykk dem inn i skjøten.

8 Plasser og juster gulvet etter profilen.


9 Kutt profiler 45 grader for innvendige hjørner.

10 Juster profilene ved de innvendige hjørnene og press dem inn i skjøten.


11 Plasser og juster gulvet etter profilen.

Side 1/1


Originaltegninger og referansesider

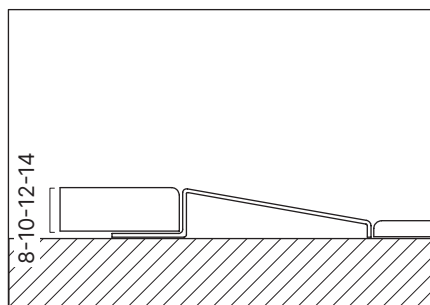


- 1 Pick the correct profile according to the flooring thickness.

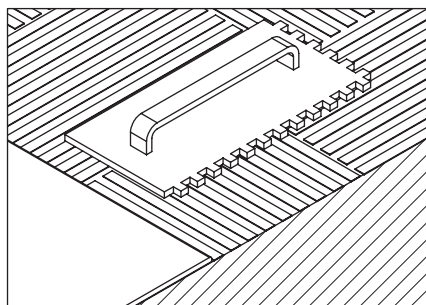


- 2 Apply joint and place the profiles anchor accordingly.

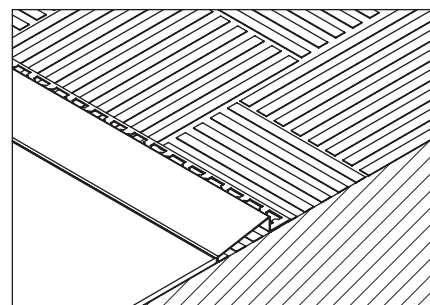


- 3 Press the profile until it is fixed to the joint.

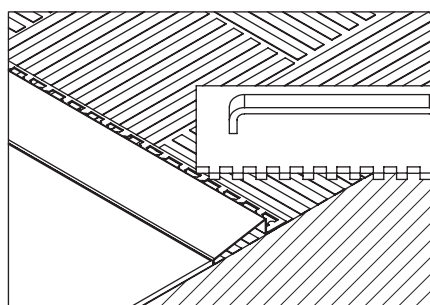


- 4 Apply joint to the places where the flooring will be placed.

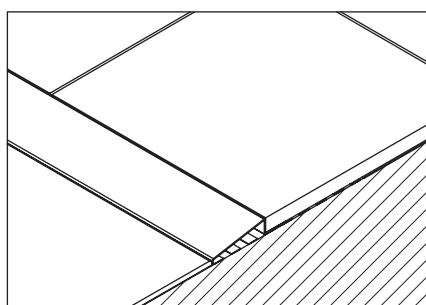


- 5 Place and align the flooring to the profile.

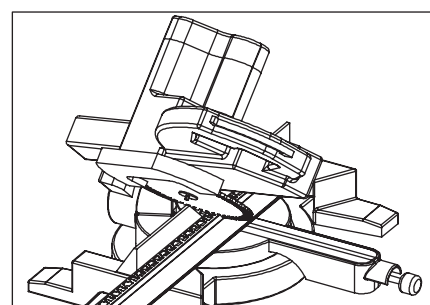


- 6 Cut profiles 45 degrees for external corners.

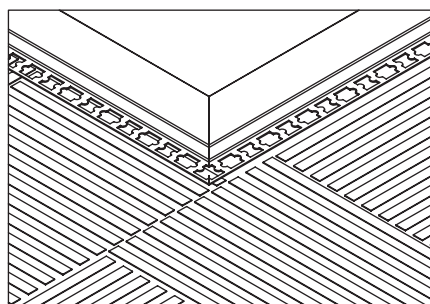


- 7 Align the profiles at the external corners and press them into the joint.

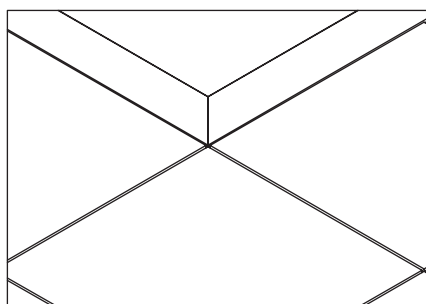


- 8 Place and align the flooring to the profile.

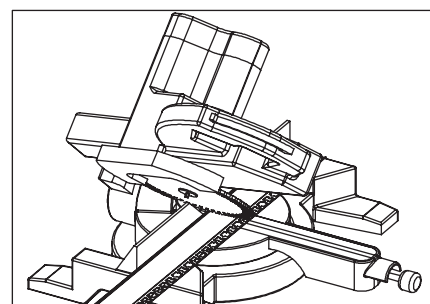

- 9 Cut profiles 45 degrees for internal corners.

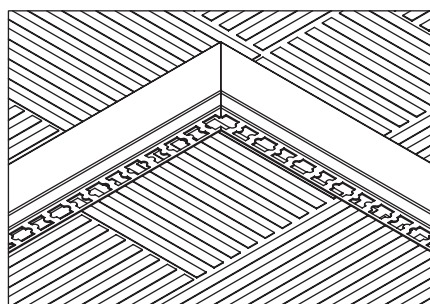

- 10 Align the profiles at the internal corners and press them into the joint.

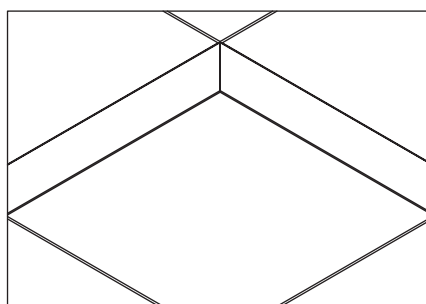

- 11 Place and align the flooring to the profile.