

MOX Systems - teknisk dokumentasjon

assembly-manual-revio-en.pdf

Teknisk oversettelse: se originaltegningene og referansesidene for dimensjoner.

Kildeside 1

Revio MONTERINGSVEILEDNING

Påføring med lim

- 1 Påfør silikon eller fuge på profilen.
- 2 Fest profilen til gulvet og trykk den.
- 3 Plasser teppet til profilen.

Påføring med skrue


- 11 Fest profilen med skruer.
- 2 Plasser teppet til profilen.

Köşe Birleşimleri


- 1 Klipp profiler 45 grader for innvendige hjørner.
- 2 Juster profilene ved de innvendige hjørnene og plasser dem i skjøten.
- 3 Plasser teppet til profilen.
- 4 Kutt profiler 45 grader for utvendige hjørner.
- 5 Juster profilene ved de ytre hjørnene og plasser dem i skjøten.
- 6 Plasser teppet til profilen.

Originaltegninger og referansesider


Application with Adhesive

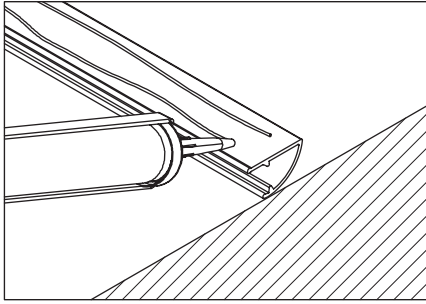

1 Apply silicone or joint to the profile.

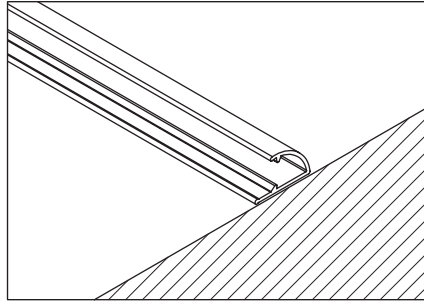


2 Fix the profile to the floor and press it.

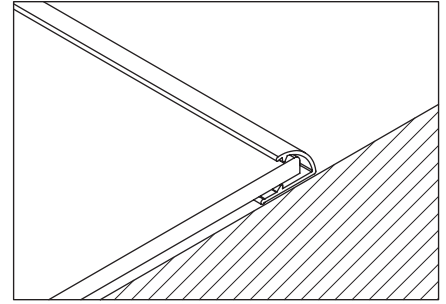


3 Place the carpet to the profile.

Application with Screw

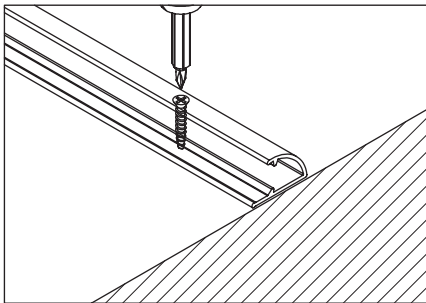


1 Fix the profile with screws.

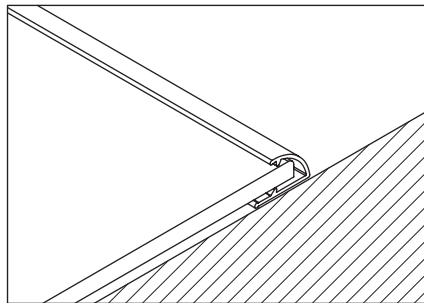


2 Place the carpet to the profile.


Köşe Birleşimleri

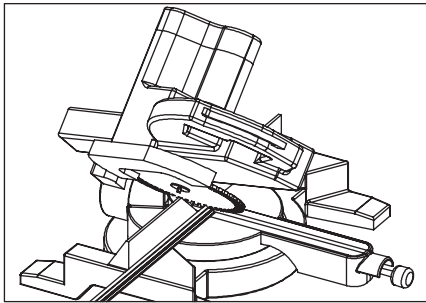


1 Cut profiles 45 degrees for internal corners.

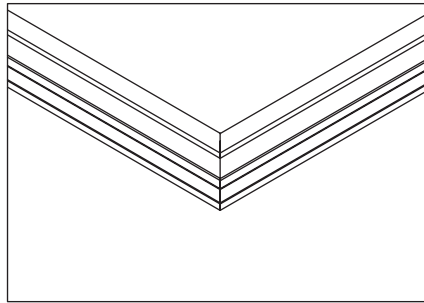


2 Align the profiles at the internal corners and place them into the joint.

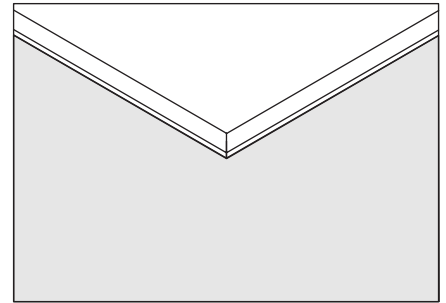


3 Place the carpet to the profile.

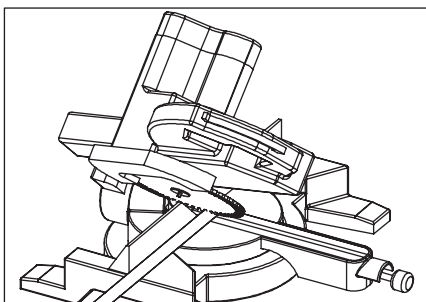

4 Cut profiles 45 degrees for external corners.

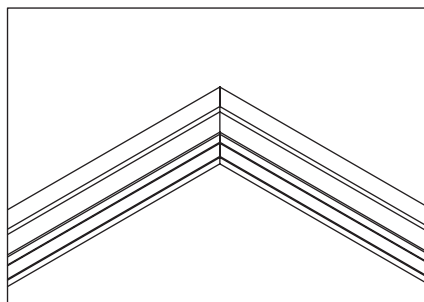

5 Align the profiles at the external corners and place them into the joint.

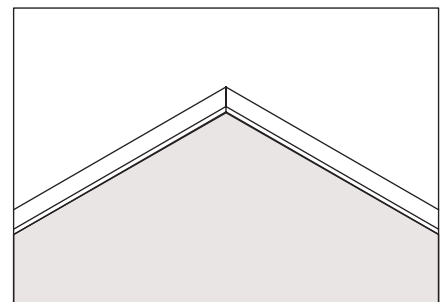

6 Place the carpet to the profile.