

# MOX Systems - teknisk dokumentasjon

assembly-manual-round-fix-en.pdf

Teknisk oversettelse: se originaltegningene og referansesidene for dimensjoner.


## Kildeside 1

### Round-Fix MONTERINGSVEILEDNING

- 1 Velg riktig profil i henhold til flistykkelsen.
- 2 Påfør skjøt og plasser profilene anker tilsvarende.
- 3 Trykk på profilen til den er festet til skjøten.
- 4 Påfør fuge på stedene hvor keramikken skal plasseres.
- 5 Plasser flisene på profilen, pass på at kantene passer til profilen og er i flukt.
- 6 Klipp to profiler i 45 grader for hjørneskjøter.
- 7 Juster profilene ved de innvendige hjørnene og press dem inn i skjøten. 10
- 8 Plasser flisene på profilen, pass på at kantene passer til profilen og er i flukt.

Side 1/1


# Originaltegninger og referansesider

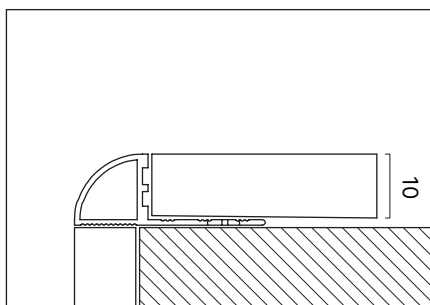


**1** Pick the correct profile according to the tile thickness.




**2** Apply joint and place the profiles anchor accordingly.

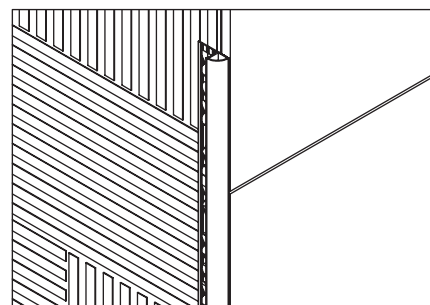


**3** Press the profile until it is fixed to the joint.

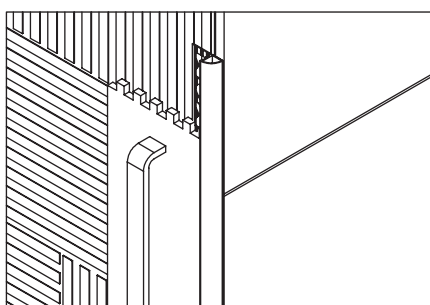


**4** Apply joint to the places where the ceramics will be placed.

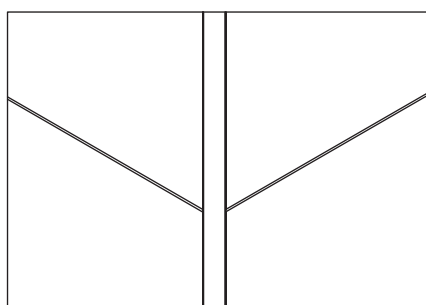


**5** Place the tiles on the profile, making sure that their edges fit the profile and are flush.

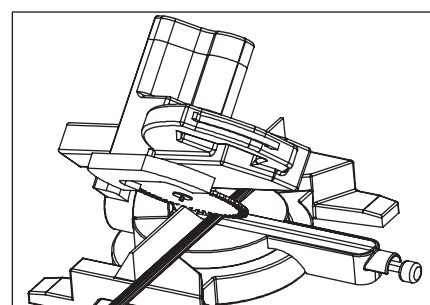

**6** Cut two profiles at 45 degrees for corner joints.

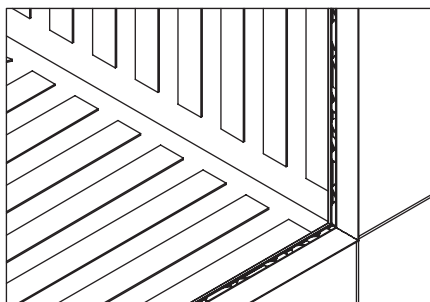

**7** Align the profiles at the internal corners and press them into the joint.

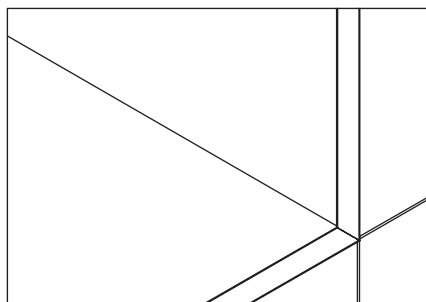

**8** Place the tiles on the profile, making sure that their edges fit the profile and are flush.