

MOX Systems - teknisk dokumentasjon

assembly-manual-visio-en.pdf

Teknisk oversettelse: se originaltegningene og referansesidene for dimensjoner.


Kildeside 1

Visio MONTERINGSVEILEDNING


- 1 Velg riktig profil i henhold til gulvtykkelsen.
- 2 Påfør skjot og plasser profilene anker tilsvarende.
- 3 Trykk på profilen til den er festet til skjøten.
- 4 Plasser teppet til profilen.
- 5 Kutt profiler 45 grader for utvendige hjørner.
- 6 Juster profilene ved de ytre hjørnene og plasser dem i skjøten.
- 7 Plasser teppet til profilen.
- 8 Kutt profiler 45 grader for innvendige hjørner.
- 9 Juster profilene ved de innvendige hjørnene og plasser dem i skjøten.
- 10 Plasser teppet til profilen. 6 8

Side 1/1


Originaltegninger og referansesider

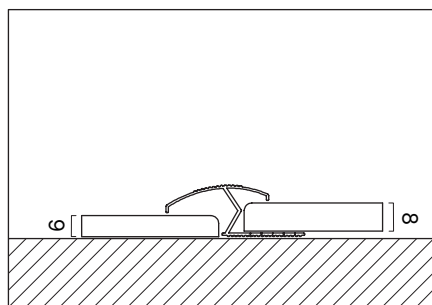


1 Pick the correct profile according to the flooring thickness.

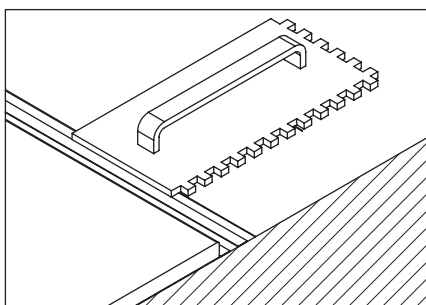


2 Apply joint and place the profiles anchor accordingly.

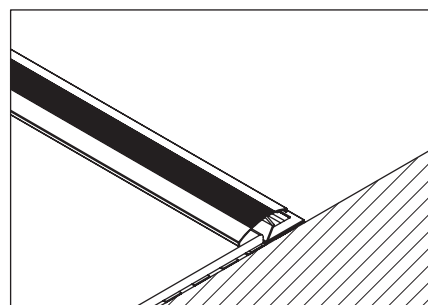


3 Press the profile until it is fixed to the joint.

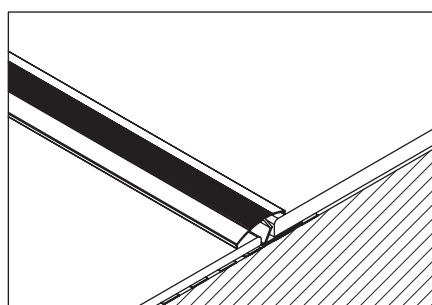


4 Place the carpet to the profile.

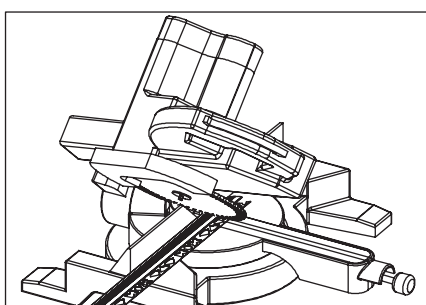


5 Cut profiles 45 degrees for external corners.

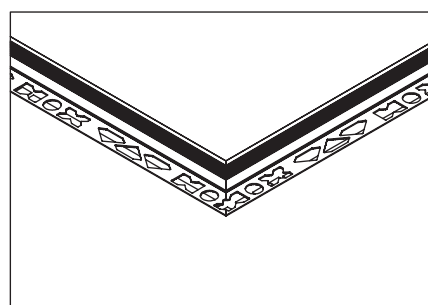


6 Align the profiles at the external corners and place them into the joint.

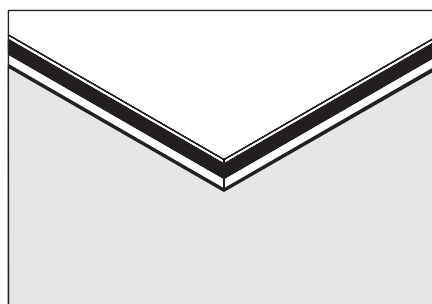


7 Place the carpet to the profile.

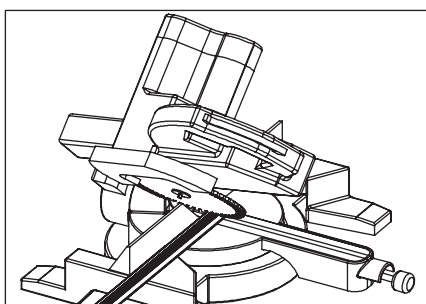

8 Cut profiles 45 degrees for internal corners.

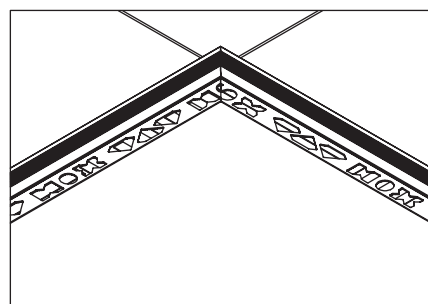

9 Align the profiles at the internal corners and place them into the joint.

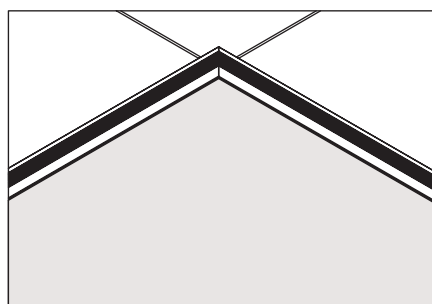

10 Place the carpet to the profile.