

MOX Systems - technische documentatie

assembly-manual-mps-tb-en.pdf

Technische vertaling: raadpleeg de originele tekeningen en referentiepagina's voor afmetingen.

Bronpagina 1

Mps-Tb MONTAGEGIDS

Kies het juiste profiel op basis van de vloerdikte.

2 Voeg voeg toe en plaats de profielen overeenkomstig.

3 Druk het profiel aan totdat het vastzit aan de voeg.

4 Breng een voeg aan op de plaatsen waar de vloer komt te liggen.

5 Plaats de vloer en lijn deze uit ten opzichte van het profiel.

6 Snijprofielen 45 graden voor buitenhoeken.

Lijn de profielen uit op de buitenhoeken en druk ze in de voeg.

8 Plaats de vloer en lijn deze uit met het profiel.


9 Snijprofielen 45 graden voor binnenhoeken.

10 Lijn de profielen uit op de binnenhoeken en druk ze in de voeg.


11 Plaats de vloer en lijn deze uit op het profiel.

Pagina 1/1


Originele tekeningen en referentiepagina's

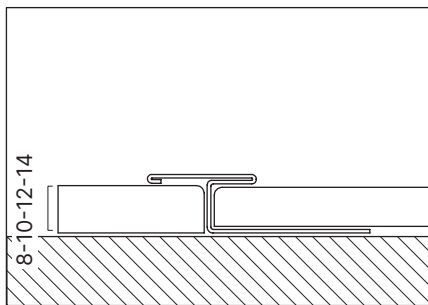


1 Pick the correct profile according to the flooring thickness.

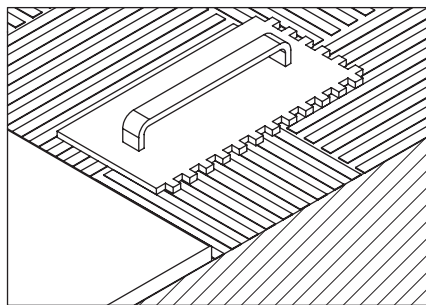


2 Apply joint and place the profiles anchor accordingly.

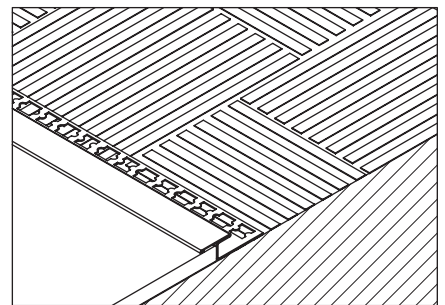


3 Press the profile until it is fixed to the joint.

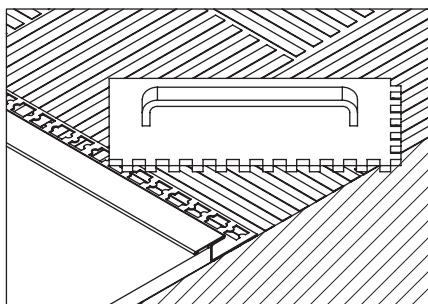


4 Apply joint to the places where the flooring will be placed.

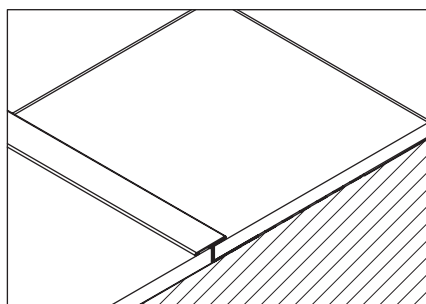


5 Place and align the flooring to the profile.

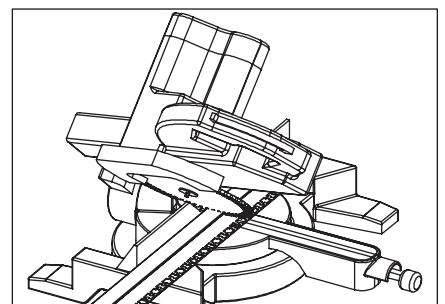


6 Cut profiles 45 degrees for external corners.

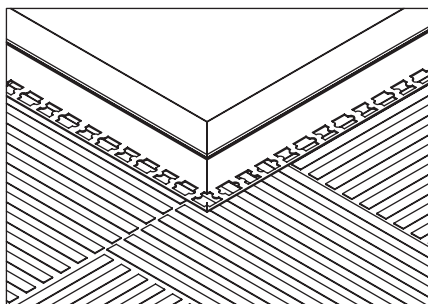


7 Align the profiles at the external corners and press them into the joint.

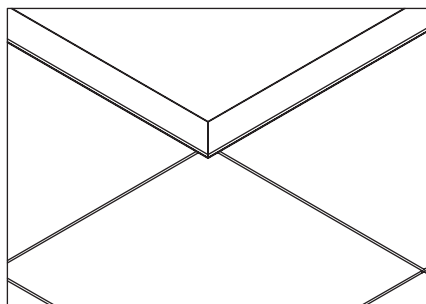


8 Place and align the flooring to the profile.

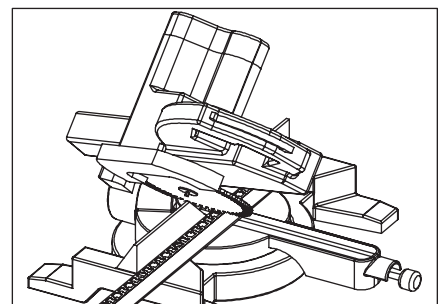

9 Cut profiles 45 degrees for internal corners.

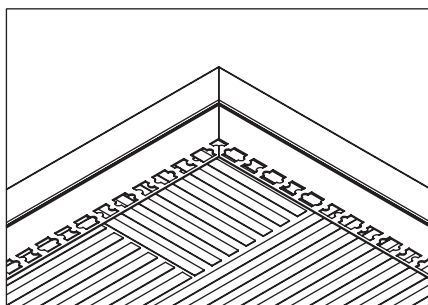

10 Align the profiles at the internal corners and press them into the joint.

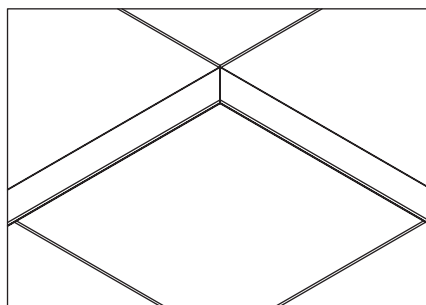

11 Place and align the flooring to the profile.