

MOX Systems - technische documentatie

assembly-manual-mps-yd-en.pdf

Technische vertaling: raadpleeg de originele tekeningen en referentiepagina's voor afmetingen.

Bronpagina 1

Mps-Yd MONTAGEGIDS

Kies het juiste profiel op basis van de vloerdikte.

2 Voeg voeg toe en plaats de profielen overeenkomstig.

3 Druk het profiel aan totdat het vastzit aan de voeg.

4 Breng een voeg aan op de plaatsen waar de vloer komt te liggen.

5 Plaats de vloer en lijn deze uit ten opzichte van het profiel.


6 Snijprofielen 45 graden voor hoeken.

7 Lijn de profielen op de hoeken uit en druk ze in de voeg. 41-21-01-8


8 Plaats de vloer en lijn deze uit met het profiel.

Pagina 1/1


Originele tekeningen en referentiepagina's

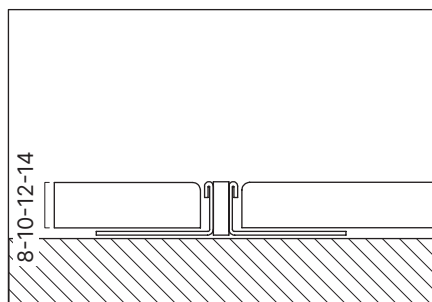


1 Pick the correct profile according to the flooring thickness.

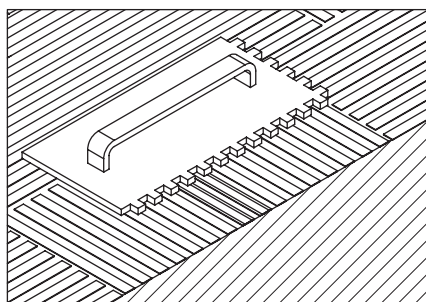


2 Apply joint and place the profiles anchor accordingly.

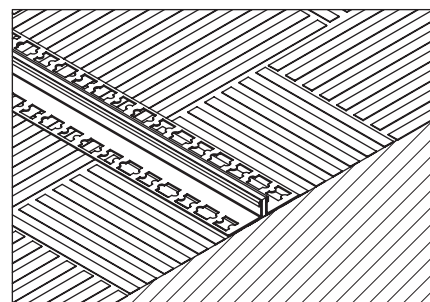


3 Press the profile until it is fixed to the joint.

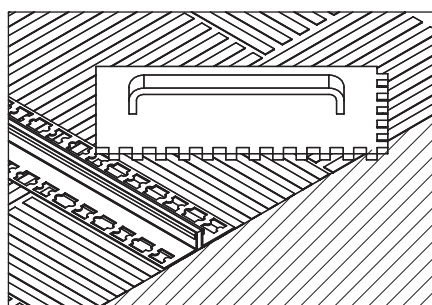


4 Apply joint to the places where the flooring will be placed.

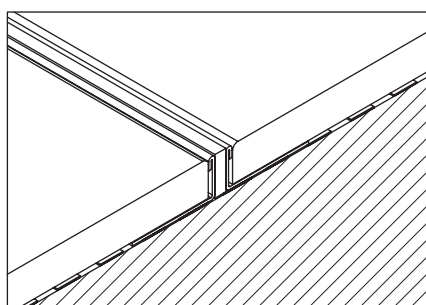


5 Place and align the flooring to the profile.

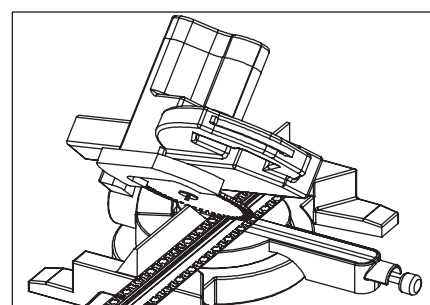

6 Cut profiles 45 degrees for corners.

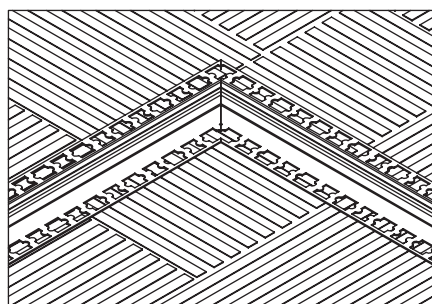

7 Align the profiles at the corners and press them into the joint.

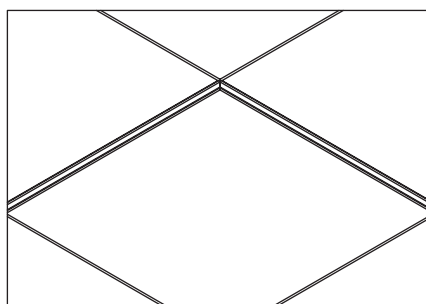

8 Place and align the flooring to the profile.