

MOX Systems - technische documentatie

assembly-manual-revio-en.pdf

Technische vertaling: raadpleeg de originele tekeningen en referentiepagina's voor afmetingen.

Bronpagina 1

Revio MONTAGEGIDS

Aanbrengen met lijm

- 1 Breng siliconen of voeg aan op het profiel.
- 2 Bevestig het profiel aan de vloer en druk het aan.
- 3 Plaats het tapijt op het profiel.

Toepassing met schroef


- 11 Bevestig het profiel met schroeven.
- 2 Plaats het tapijt op het profiel.

Köşe Birleşimleri


- 1 Snijprofielen 45 graden voor binnenhoeken.
- 2 Lijn de profielen uit op de binnenhoeken en plaats ze in de voeg.
- 3 Plaats het tapijt op het profiel.
- 4 Snijprofielen 45 graden voor buitenhoeken.
- 5 Lijn de profielen uit op de buitenhoeken en plaats ze in de voeg.
- 6 Plaats het tapijt op het profiel.

Originele tekeningen en referentiepagina's


Application with Adhesive

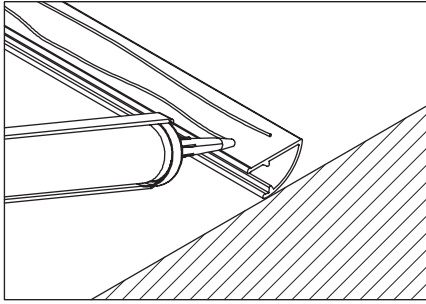

1 Apply silicone or joint to the profile.

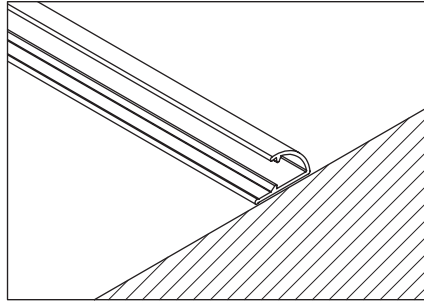


2 Fix the profile to the floor and press it.

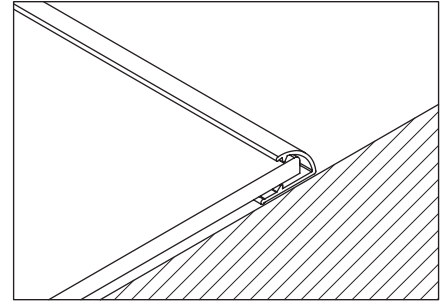


3 Place the carpet to the profile.

Application with Screw

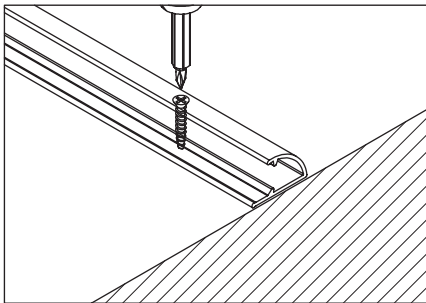


1 Fix the profile with screws.

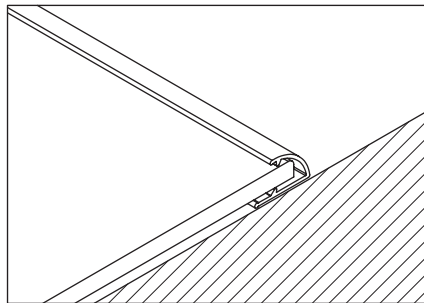


2 Place the carpet to the profile.


Köşe Birleşimleri

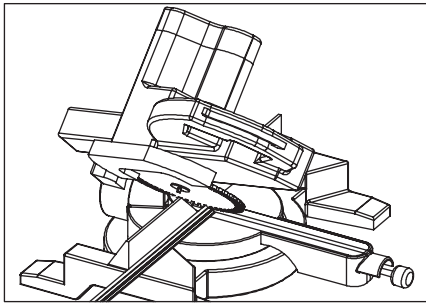


1 Cut profiles 45 degrees for internal corners.

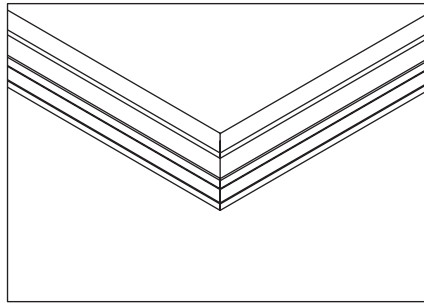


2 Align the profiles at the internal corners and place them into the joint.

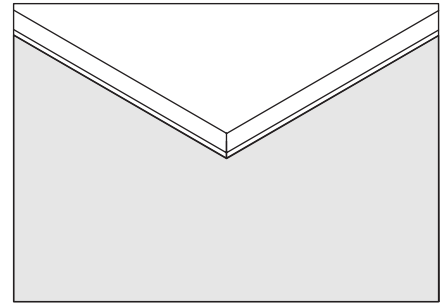


3 Place the carpet to the profile.

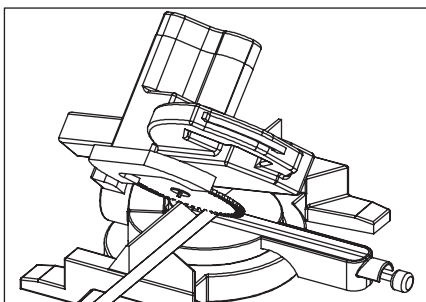

4 Cut profiles 45 degrees for external corners.

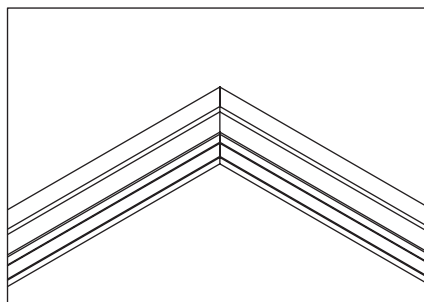

5 Align the profiles at the external corners and place them into the joint.

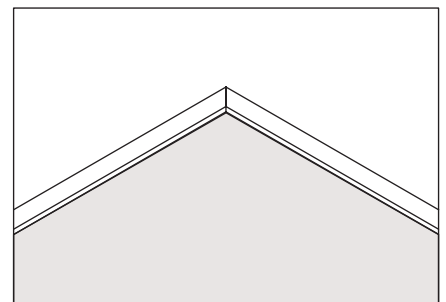

6 Place the carpet to the profile.