

MOX Systems - technische documentatie

assembly-manual-velo-en.pdf

Technische vertaling: raadpleeg de originele tekeningen en referentiepagina's voor afmetingen.


Bronpagina 1

Velo MONTAGEGIDS


- 1 Knijp het silicium in de vorm van twee lijnen naar de achterkant van het profiel.
- 2 Plak het profiel waarmee je de siliconen hebt geperst tegen de muur en druk aan.
- 3 Plak het profiel dat u op de muur hebt geplakt met intervallen van 50 cm vast.
- 4 Verwijder de banden die op het profiel zitten de dag erna voorzichtig.
- 5 Zorg ervoor dat het profiel stevig aan de muur vastzit.
- 6 Snijprofielen 45 graden voor buitenhoeken.
- 7 Plak de profielen die je in een hoek van 45 graden tegen de muur zaagt zo dicht tegen elkaar aan.
- 8 Zorg ervoor dat de profielen die in een hoek van 45 graden zijn gezaagd, aan de buitenhoeken volledig aan elkaar worden bevestigd.
- 9 Snijprofielen 45 graden voor binnenhoeken.
- 10 Plak de profielen die je in een hoek van 45 graden tegen de muur zaagt zo dicht tegen elkaar aan.
- 11 Zorg ervoor dat de profielen die in een hoek van 45 graden zijn gezaagd, op de binnenhoeken volledig aan elkaar worden bevestigd.

Pagina 1/1


Originele tekeningen en referentiepagina's

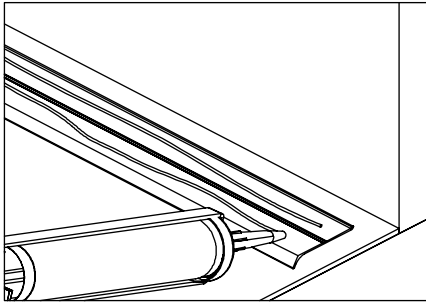


1 Squeeze the silicon in the manner of two lines to the back side of the profile.

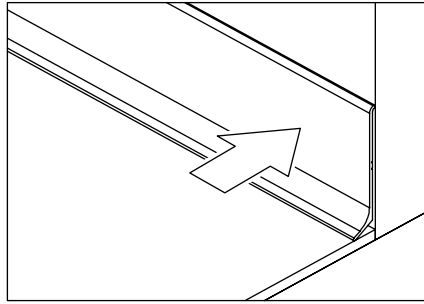


2 Paste the profile that you squeezed the silicon to the wall and press.

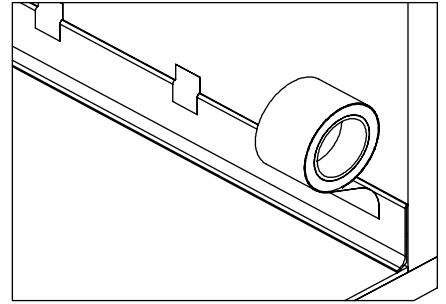


3 Tape the profile that you pasted to the wall at 50cm intervals.

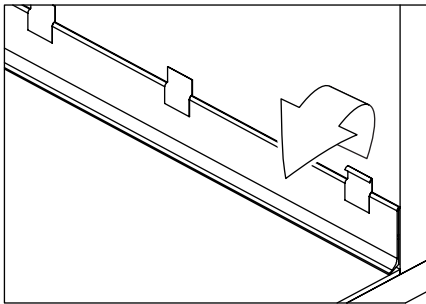


4 Remove the bands that on the profile heedfully the day after.

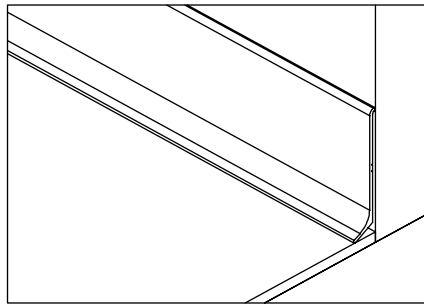


5 Make sure that the profile is stuck to the wall firmly.

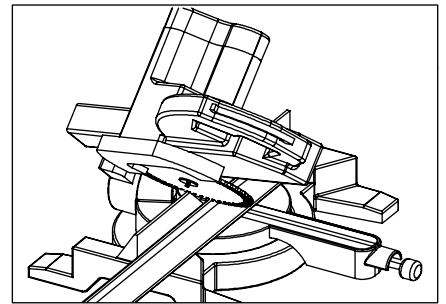


6 Cut profiles 45 degrees for external corners.

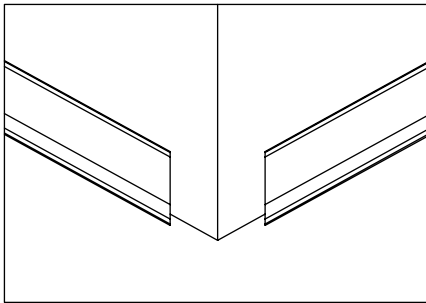


7 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

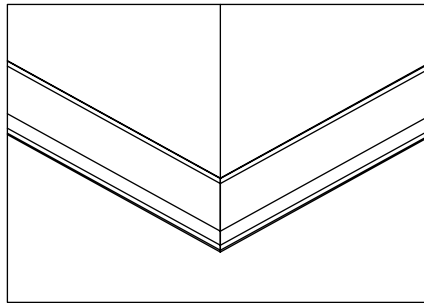


8 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

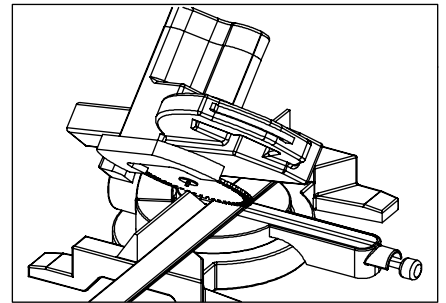

9 Cut profiles 45 degrees for internal corners.

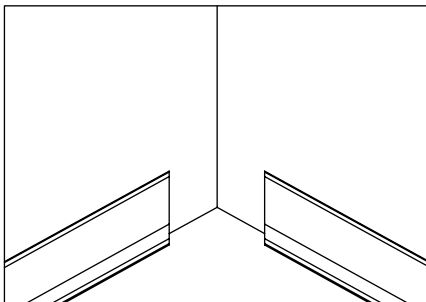

10 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

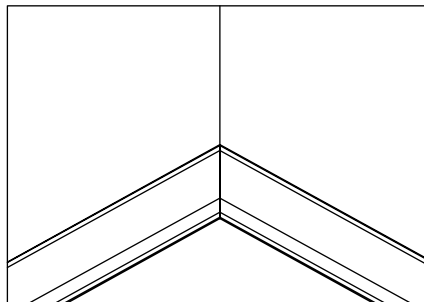

11 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.