

MOX Systems - technische documentatie

assembly-manual-visio-en.pdf

Technische vertaling: raadpleeg de originele tekeningen en referentiepagina's voor afmetingen.


Bronpagina 1

Visio MONTAGEGIDS


- 1 Kies het juiste profiel op basis van de vloerdikte.
- 2 Voeg voeg toe en plaats de profielen overeenkomstig.
- 3 Druk het profiel aan totdat het vastzit aan de voeg.
- 4 Plaats het tapijt op het profiel.
- 5 Snijprofielen 45 graden voor buitenhoeken.
- 6 Lijn de profielen uit op de buitenhoeken en plaats ze in de voeg.
- 7 Plaats het tapijt op het profiel.
- 8 Snijprofielen 45 graden voor binnenhoeken.
- 9 Lijn de profielen uit op de binnenhoeken en plaats ze in de voeg.
- 10 Plaats het tapijt op het profiel. 6 8

Pagina 1/1


Originele tekeningen en referentiepagina's

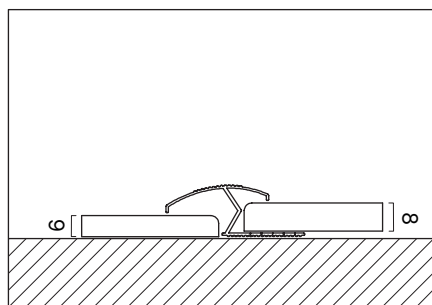


1 Pick the correct profile according to the flooring thickness.

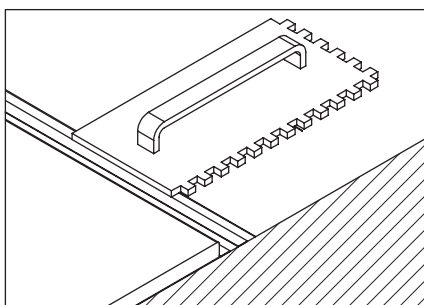


2 Apply joint and place the profiles anchor accordingly.

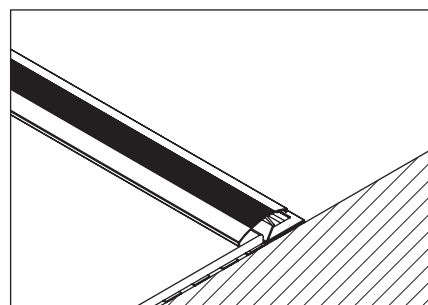


3 Press the profile until it is fixed to the joint.

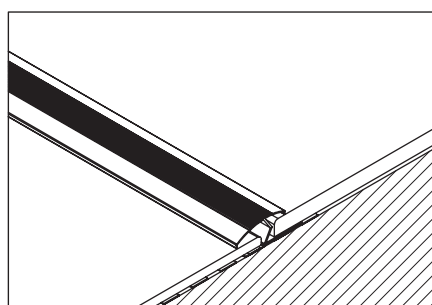


4 Place the carpet to the profile.

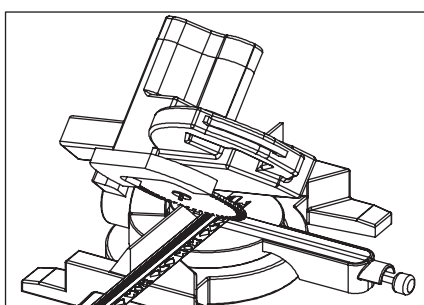


5 Cut profiles 45 degrees for external corners.

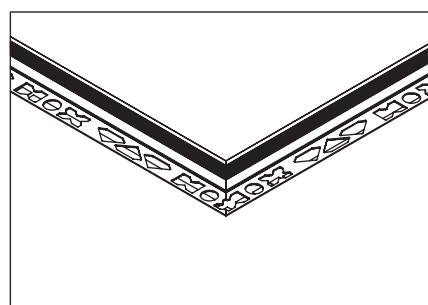


6 Align the profiles at the external corners and place them into the joint.

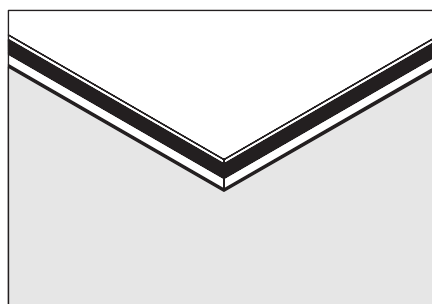


7 Place the carpet to the profile.

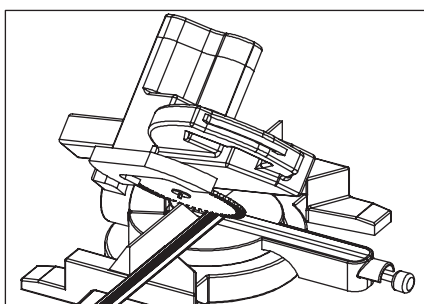

8 Cut profiles 45 degrees for internal corners.

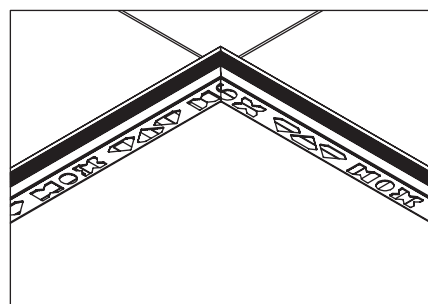

9 Align the profiles at the internal corners and place them into the joint.

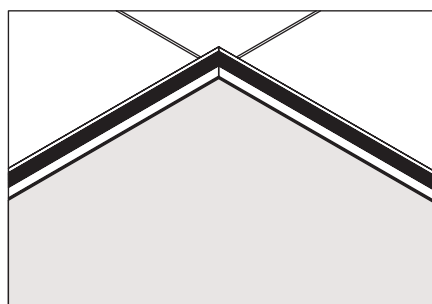

10 Place the carpet to the profile.