

Systemy MOX - dokumentacja techniczna

assembly-manual-revio-en.pdf

Tłumaczenie techniczne: wymiary można znaleźć na oryginalnych rysunkach i stronach referencyjnych.

Strona źródłowa 1

INSTRUKCJA MONTAŻU Revio

Aplikacja za pomocą kleju

- 1 Nałóż silikon lub fugę na profil.
- 2 Przymocuj profil do podłogi i dociśnij go.
- 3 Przyłóż wykładzinę do profilu.

Aplikacja za pomocą śruby


- 11 Przymocuj profil za pomocą śrub.
- 2 Przyłóż wykładzinę do profilu.

Köşe Birleşimleri


- 1 Przytnij profile pod kątem 45 stopni do narożników wewnętrznych.
- 2 Wyrównaj profile w narożnikach wewnętrznych i umieść je w złączu.
- 3 Przyłóż wykładzinę do profilu.
- 4 Przytnij profile pod kątem 45 stopni do narożników zewnętrznych.
- 5 Wyrównaj profile w narożnikach zewnętrznych i umieść je w złączu.
- 6 Przyłóż wykładzinę do profilu.

Oryginalne rysunki i strony referencyjne


Application with Adhesive

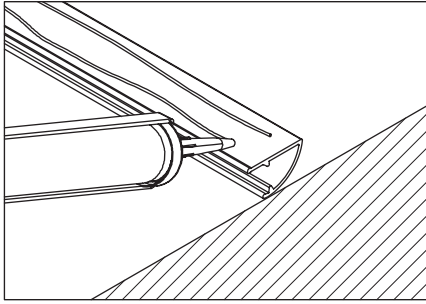

1 Apply silicone or joint to the profile.

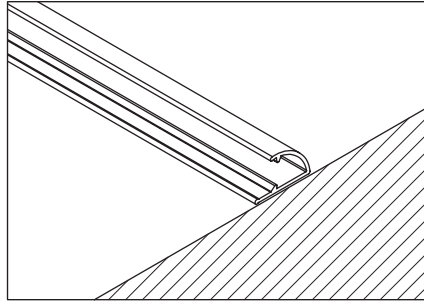


2 Fix the profile to the floor and press it.

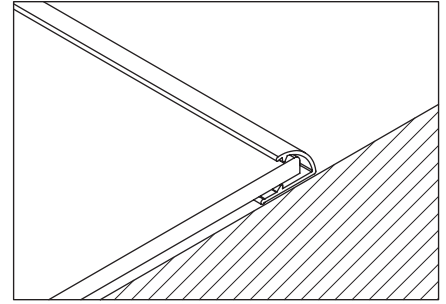


3 Place the carpet to the profile.

Application with Screw

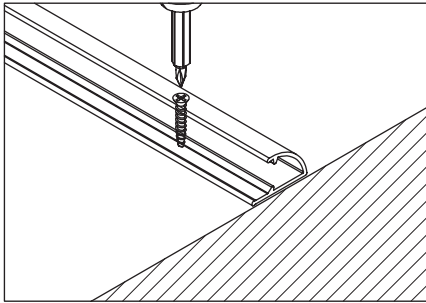


1 Fix the profile with screws.

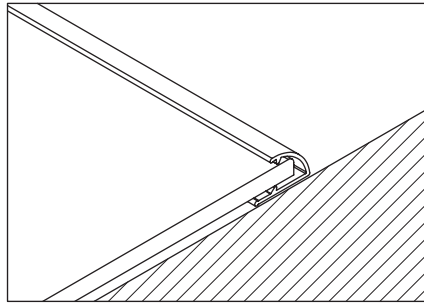


2 Place the carpet to the profile.


Köşe Birleşimleri

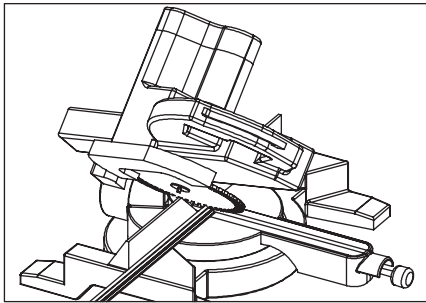


1 Cut profiles 45 degrees for internal corners.

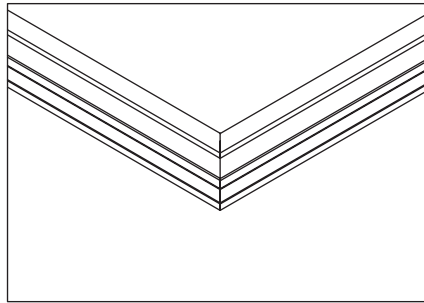


2 Align the profiles at the internal corners and place them into the joint.

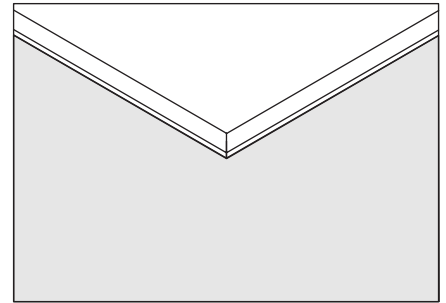


3 Place the carpet to the profile.

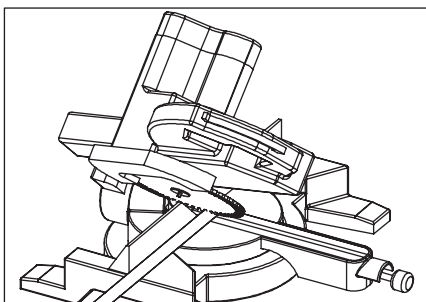

4 Cut profiles 45 degrees for external corners.

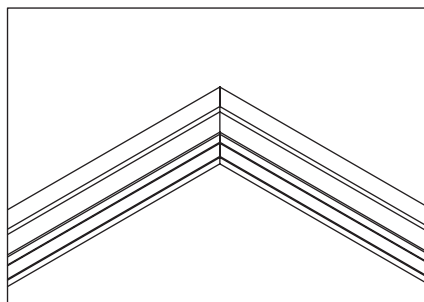

5 Align the profiles at the external corners and place them into the joint.

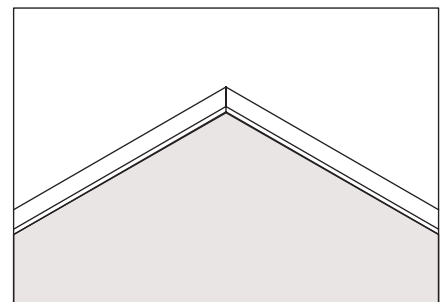

6 Place the carpet to the profile.