

Systemy MOX - dokumentacja techniczna

assembly-manual-velo-en.pdf

Tłumaczenie techniczne: wymiary można znaleźć na oryginalnych rysunkach i stronach referencyjnych.


Strona źródłowa 1

INSTRUKCJA MONTAŻU Velo


- 1 Dociśnij silikon dwoma liniami do tylnej strony profilu.
- 2 Przyklej profil, którym wcisnąłeś silikon do ściany i dociśnij.
- 3 Przyklej przyklejony profil do ściany taśmą w odstępach 50 cm.
- 4 Następnego dnia ostrożnie usuń paski z profilu.
- 5 Upewnij się, że profil mocno przylega do ściany.
- 6 Przytnij profile pod kątem 45 stopni do narożników zewnętrznych.
- 7 Przyklej do ściany przycięte pod kątem 45 stopni profile w taki sposób, aby się do siebie zbliżyły.
- 8 Upewnij się, że profile przycięte pod kątem 45 stopni są całkowicie połączone ze sobą w narożnikach zewnętrznych.
- 9 Przytnij profile pod kątem 45 stopni do narożników wewnętrznych.
- 10 Przyklej do ściany przycięte pod kątem 45 stopni profile w taki sposób, aby się do siebie zbliżyły.
- 11 Upewnij się, że profile przycięte pod kątem 45 stopni są całkowicie połączone ze sobą w narożnikach wewnętrznych.

Strona 1/1


Oryginalne rysunki i strony referencyjne

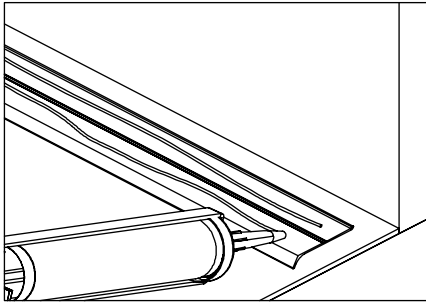


1 Squeeze the silicon in the manner of two lines to the back side of the profile.

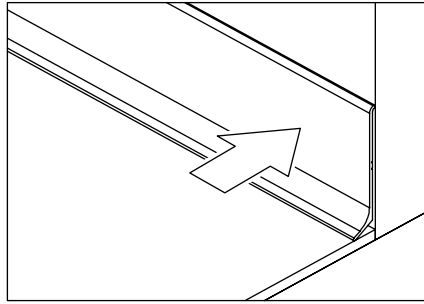


2 Paste the profile that you squeezed the silicon to the wall and press.

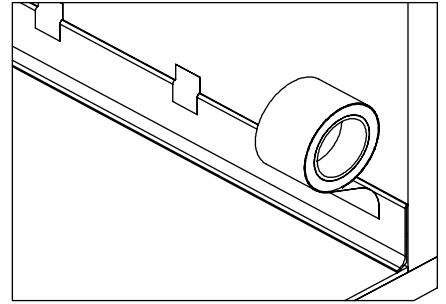


3 Tape the profile that you pasted to the wall at 50cm intervals.

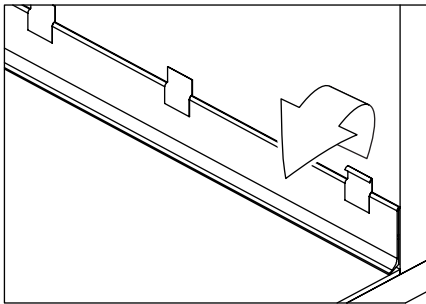


4 Remove the bands that on the profile heedfully the day after.

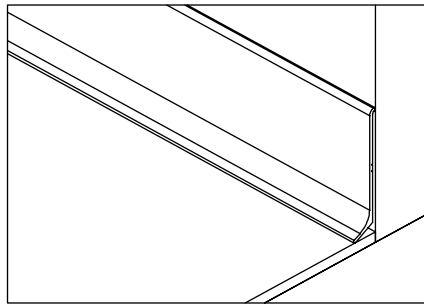


5 Make sure that the profile is stuck to the wall firmly.

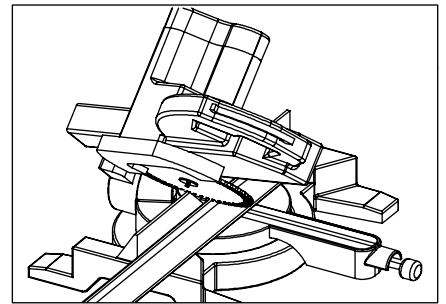


6 Cut profiles 45 degrees for external corners.

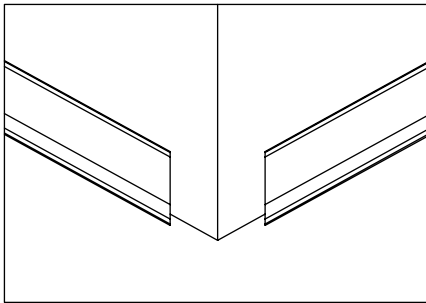


7 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

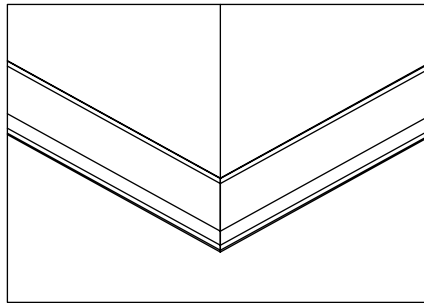


8 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

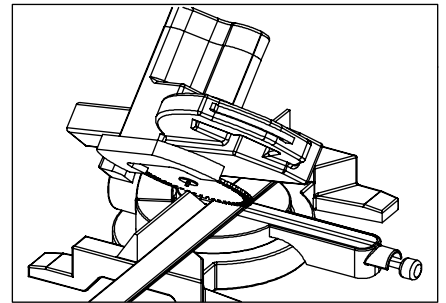

9 Cut profiles 45 degrees for internal corners.

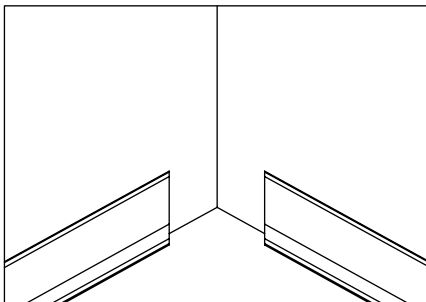

10 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

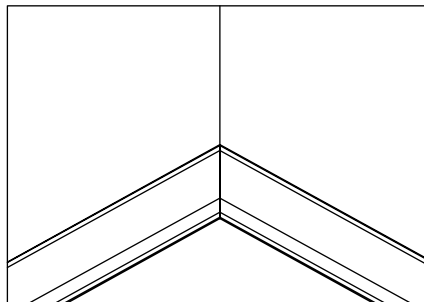

11 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.