

Sistemas MOX - documentação técnica

assembly-manual-revio-en.pdf

Tradução técnica: consulte os desenhos originais e as páginas de referência para as dimensões.

Página de origem 1

GUIA DE MONTAGEM Revio

Aplicação com Adesivo

- 1 Aplique silicone ou junta no perfil.
- 2 Fixe o perfil ao chão e pressione-o.
- 3 Coloque o tapete no perfil.

Aplicação com Parafuso


- 11 Fixe o perfil com parafusos.
- 2 Coloque o tapete no perfil.

Köşe Birleşimleri


- 1 Corte os perfis a 45 graus para cantos interiores.
- 2 Alinhe os perfis nos cantos interiores e coloque-os na junta.
- 3 Coloque o tapete no perfil.
- 4 Corte os perfis a 45 graus para cantos exteriores.
- 5 Alinhe os perfis nos cantos exteriores e coloque-os na junta.
- 6 Coloque o tapete no perfil.

Desenhos originais e páginas de referência


Application with Adhesive

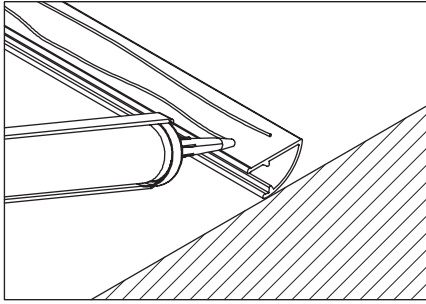

1 Apply silicone or joint to the profile.

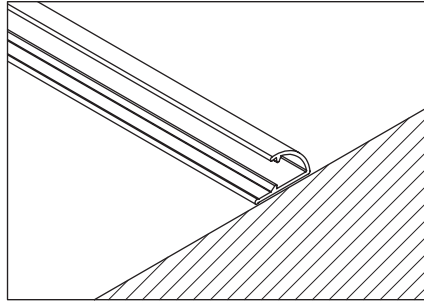


2 Fix the profile to the floor and press it.

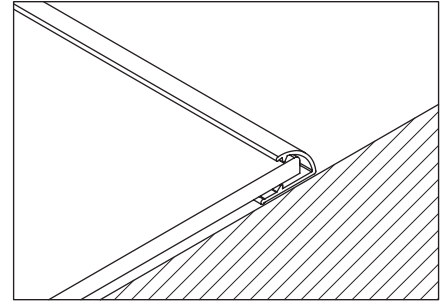


3 Place the carpet to the profile.

Application with Screw

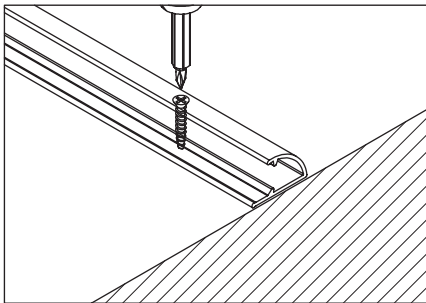


1 Fix the profile with screws.

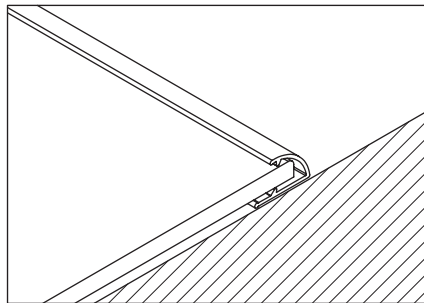


2 Place the carpet to the profile.


Köşe Birleşimleri

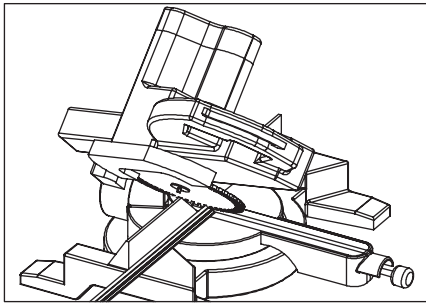


1 Cut profiles 45 degrees for internal corners.

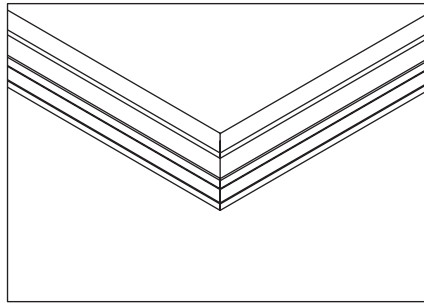


2 Align the profiles at the internal corners and place them into the joint.

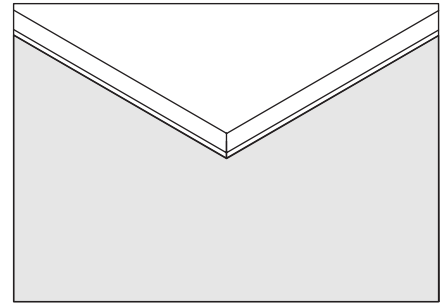


3 Place the carpet to the profile.

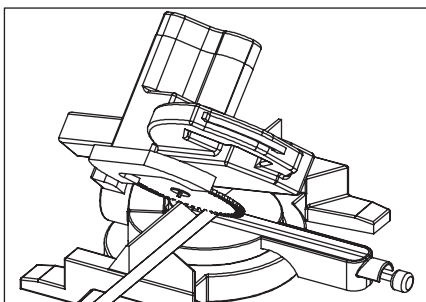

4 Cut profiles 45 degrees for external corners.

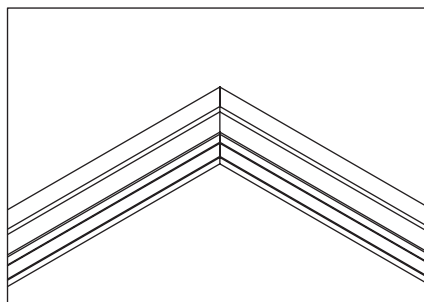

5 Align the profiles at the external corners and place them into the joint.

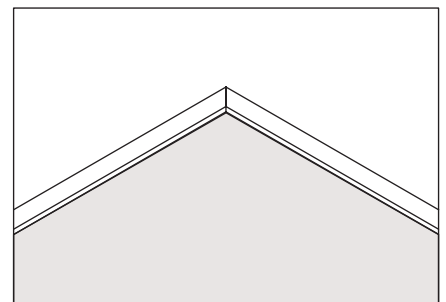

6 Place the carpet to the profile.