

MOX Systems - documentatie tehnica

assembly-manual-revio-en.pdf

Traducere tehnică: consultați desenele originale și paginile de referință pentru dimensiuni.

Pagina sursă 1

GHID DE MONTAJ Revio

Aplicare cu adeziv

1 Aplicați silicon sau îmbinare pe profil.

2 Fixați profilul pe podea și apăsați-l.

3 Așezați covorul pe profil.

Aplicare cu șurub

11 Fixați profilul cu șuruburi.

2 Așezați covorul pe profil.

Köşe Birleşimleri

1 Tăiați profile la 45 de grade pentru colțurile interne.

2 Aliniați profilele la colțurile interne și plasați-le în îmbinare.

3 Așezați covorul pe profil.


4 Tăiați profile la 45 de grade pentru colțurile exterioare.

5 Aliniați profilele la colțurile externe și plasați-le în îmbinare.


6 Așezați covorul pe profil.

Desene originale și pagini de referință


Application with Adhesive

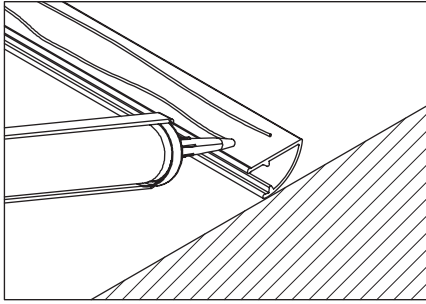

1 Apply silicone or joint to the profile.

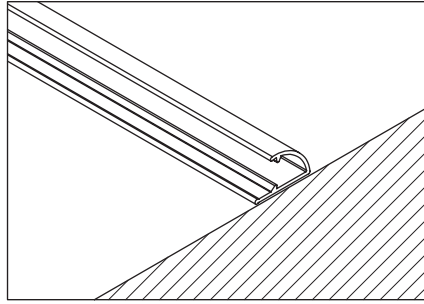


2 Fix the profile to the floor and press it.

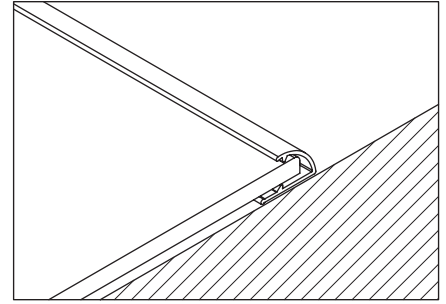


3 Place the carpet to the profile.

Application with Screw

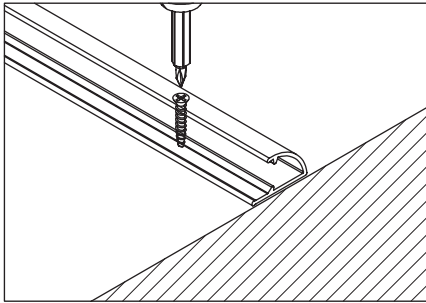


1 Fix the profile with screws.

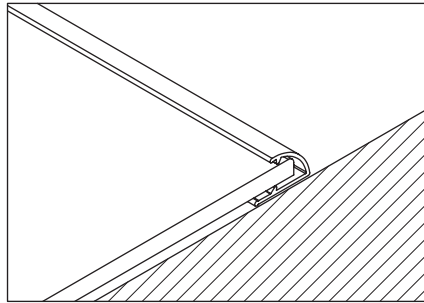


2 Place the carpet to the profile.


Köşe Birleşimleri

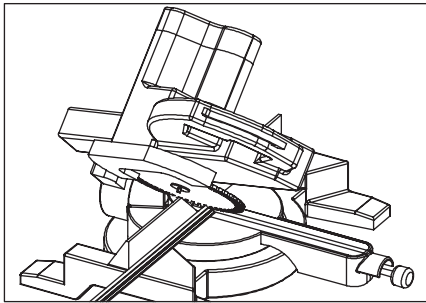


1 Cut profiles 45 degrees for internal corners.

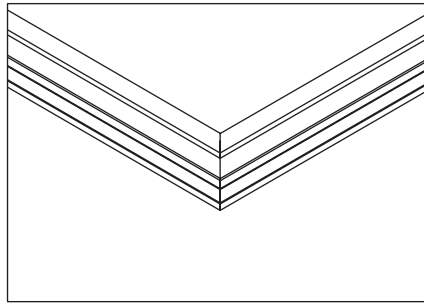


2 Align the profiles at the internal corners and place them into the joint.

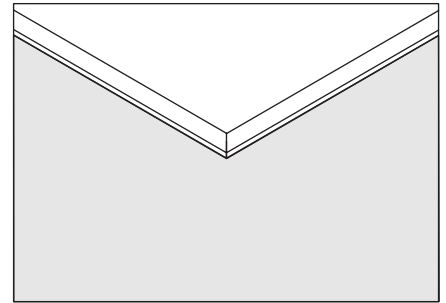


3 Place the carpet to the profile.

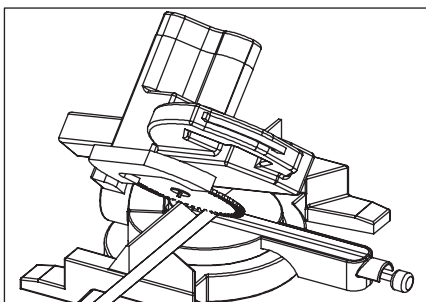

4 Cut profiles 45 degrees for external corners.

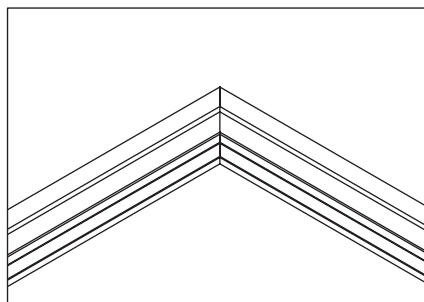

5 Align the profiles at the external corners and place them into the joint.

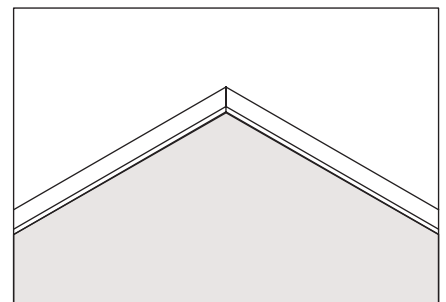

6 Place the carpet to the profile.