

MOX Systems - documentatie tehnica

assembly-manual-velo-en.pdf

Traducere tehnică: consultați desenele originale și paginile de referință pentru dimensiuni.


Pagina sursă 1

GHID DE MONTAJ Velo


- 1 Strângeți siliconul sub forma a două linii pe partea din spate a profilului.
- 2 Lipiți profilul pe care ați strâns siliconul pe perete și apăsați.
- 3 Lipiți profilul pe care l-ați lipit pe perete la intervale de 50 cm.
- 4 Scoateți cu atenție benzile de pe profil a doua zi.
- 5 Asigurați-vă că profilul este lipit ferm de perete.
- 6 Tăiați profile la 45 de grade pentru colțurile exterioare.
- 7 Lipiți profilele pe care le-ați tăiat la 45 de grade de perete într-un mod care va fi închis unul față de celălalt.
- 8 Asigurați-vă că profilele tăiate la 45 de grade sunt fixate complet între ele la colțurile exterioare.
- 9 Tăiați profile la 45 de grade pentru colțurile interne.
- 10 Lipiți profilele pe care le-ați tăiat la 45 de grade de perete într-un mod care va fi închis unul față de celălalt.
- 11 Asigurați-vă că profilele tăiate la 45 de grade sunt fixate complet între ele la colțurile interne.

Pagina 1/1


Desene originale și pagini de referință

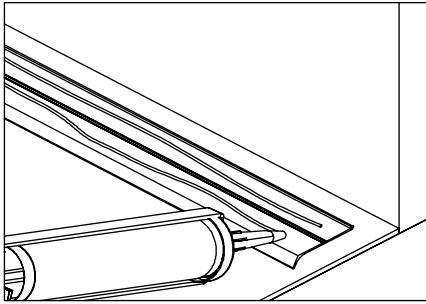


1 Squeeze the silicon in the manner of two lines to the back side of the profile.

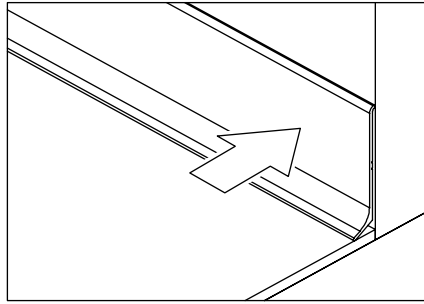


2 Paste the profile that you squeezed the silicon to the wall and press.

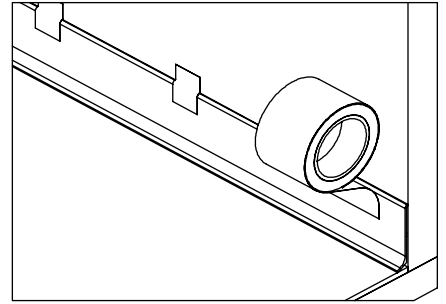


3 Tape the profile that you pasted to the wall at 50cm intervals.

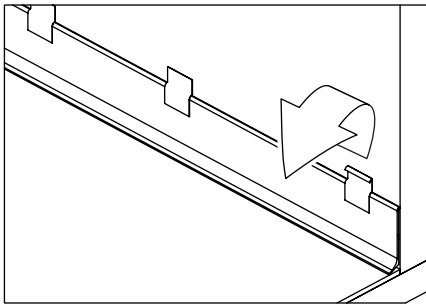


4 Remove the bands that on the profile heedfully the day after.

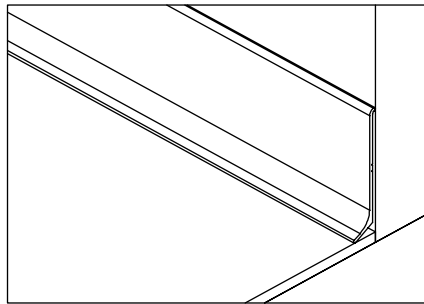


5 Make sure that the profile is stuck to the wall firmly.

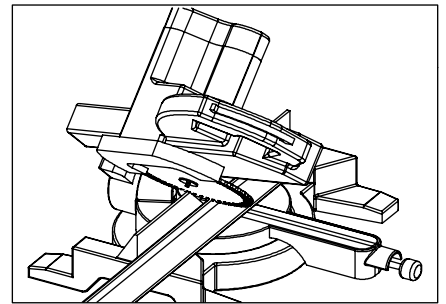


6 Cut profiles 45 degrees for external corners.

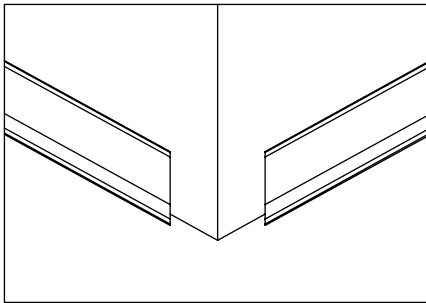


7 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

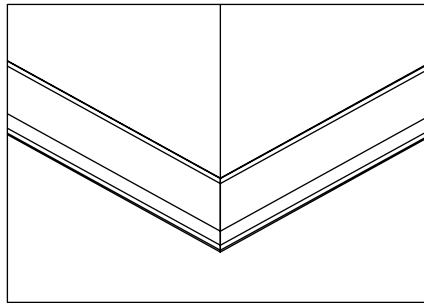


8 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the external corners.

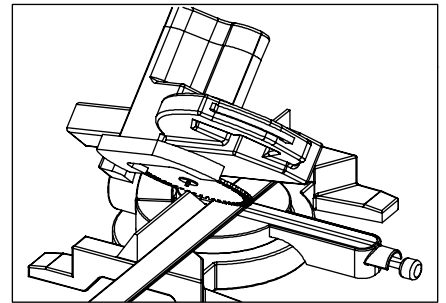

9 Cut profiles 45 degrees for internal corners.

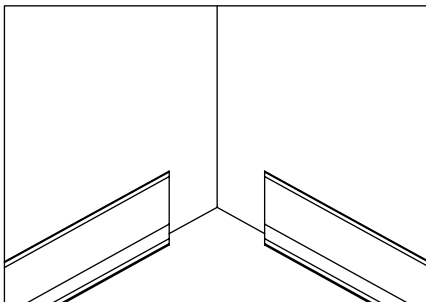

10 Paste the profiles that you cut 45 degrees to the wall in the manner that will be closed to each other.

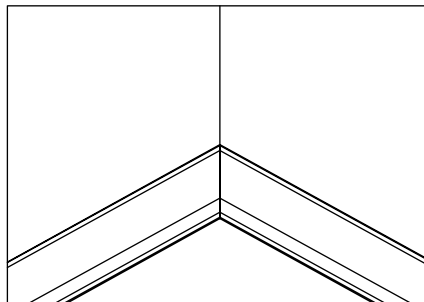

11 Make sure that the profiles that are cut 45 degrees are fixed to each other completely at the internal corners.