

MOX Systems - documentatie tehnica

assembly-manual-visio-en.pdf

Traducere tehnică: consultați desenele originale și paginile de referință pentru dimensiuni.


Pagina sursă 1

GHID DE MONTAJ Visio


- 1 Alegeți profilul corect în funcție de grosimea podelei.
- 2 Aplicați îmbinarea și așezați ancora profilelor în mod corespunzător.
- 3 Apăsați profilul până când acesta este fixat de îmbinare.
- 4 Așezați covorul pe profil.
- 5 Tăiați profile la 45 de grade pentru colțurile exterioare.
- 6 Aliniați profilele la colțurile externe și plasați-le în îmbinare.
- 7 Așezați covorul pe profil.
- 8 Tăiați profile la 45 de grade pentru colțurile interne.
- 9 Aliniați profilele la colțurile interne și plasați-le în îmbinare.
- 10 Așezați covorul pe profil. 6 8

Pagina 1/1


Desene originale și pagini de referință

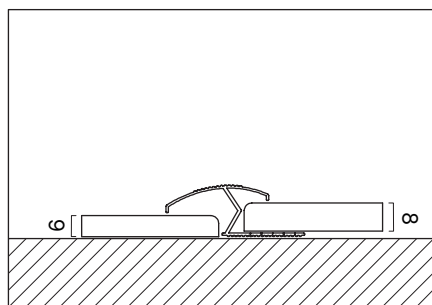


1 Pick the correct profile according to the flooring thickness.

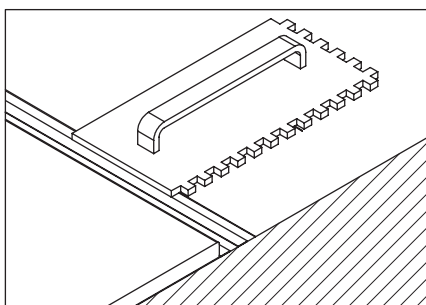


2 Apply joint and place the profiles anchor accordingly.

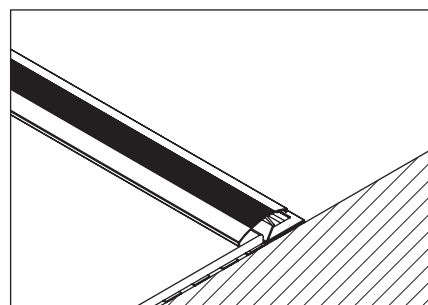


3 Press the profile until it is fixed to the joint.

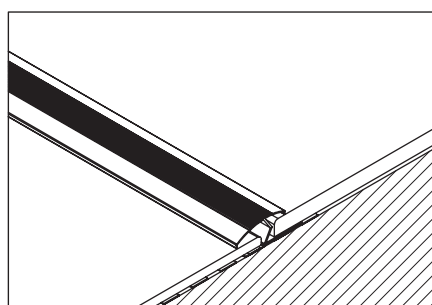


4 Place the carpet to the profile.

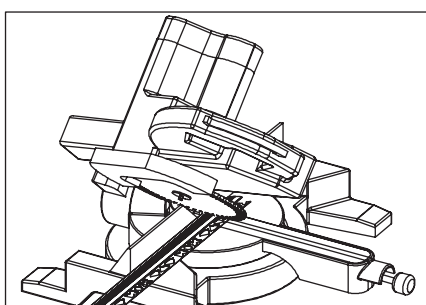


5 Cut profiles 45 degrees for external corners.

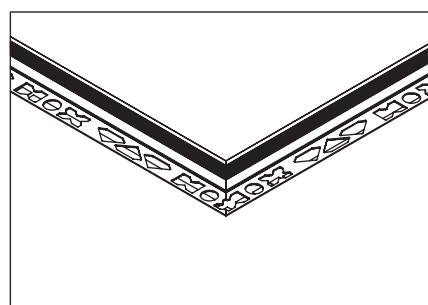


6 Align the profiles at the external corners and place them into the joint.

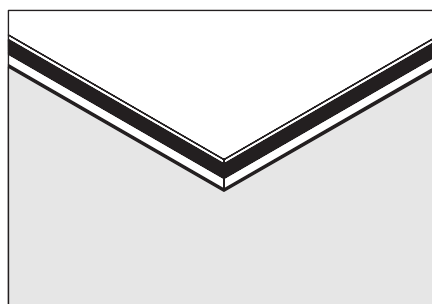


7 Place the carpet to the profile.

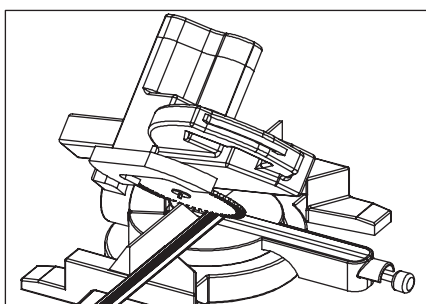

8 Cut profiles 45 degrees for internal corners.

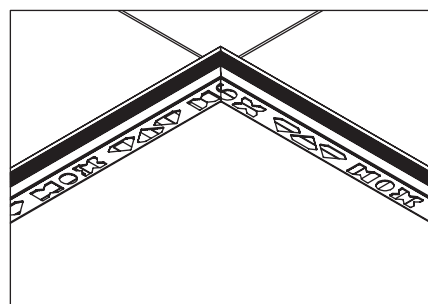

9 Align the profiles at the internal corners and place them into the joint.

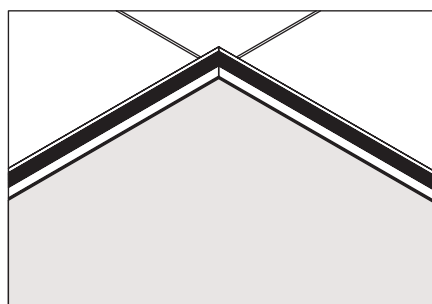

10 Place the carpet to the profile.