

МОХ-системы - техническая документация

assembly-manual-mps-tb-en.pdf

Технический перевод: размеры см. в оригинальных чертежах и на справочных страницах.

Исходная страница 1

РУКОВОДСТВО ПО СБОРКЕ Mps-Tb

Выберите правильный профиль в соответствии с толщиной пола.

2 Нанесите шов и соответствующим образом закрепите анкера профилей.

3 Прижимайте профиль до его фиксации в месте соединения.

4 Нанесите шов на места укладки напольного покрытия.

5 Уложите и выровняйте пол по профилю.

6 Обрежьте профили под углом 45 градусов для внешних углов.

Выровняйте профили по внешним углам и прижмите их к стыку.

8 Уложите и выровняйте пол по профилю.


9. Обрежьте профили под углом 45 градусов для внутренних углов.

10 Выровняйте профили по внутренним углам и вдавите их в стык.


11 Уложите и выровняйте пол по профилю.

Страница 1/1


Оригинальные чертежи и справочные страницы

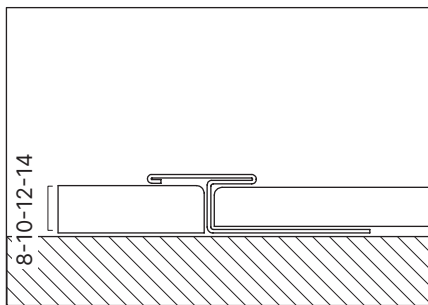


1 Pick the correct profile according to the flooring thickness.

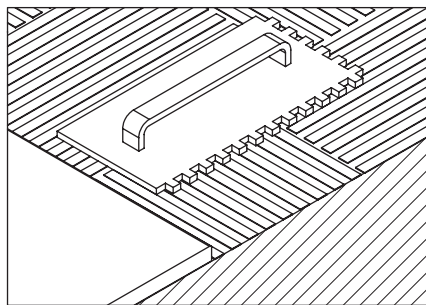


2 Apply joint and place the profiles anchor accordingly.

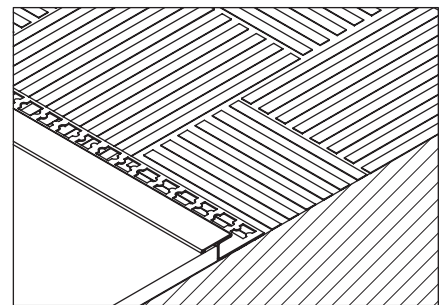


3 Press the profile until it is fixed to the joint.

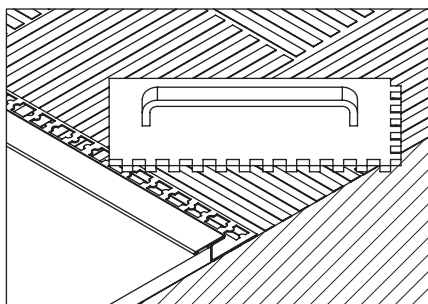


4 Apply joint to the places where the flooring will be placed.

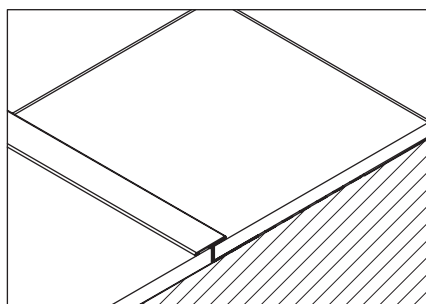


5 Place and align the flooring to the profile.

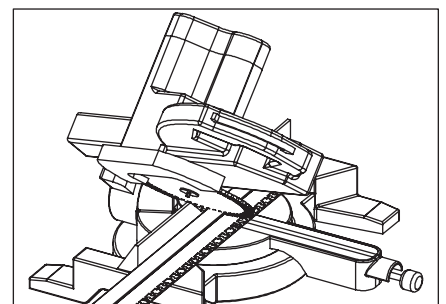


6 Cut profiles 45 degrees for external corners.

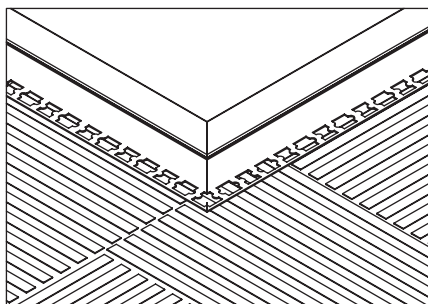


7 Align the profiles at the external corners and press them into the joint.

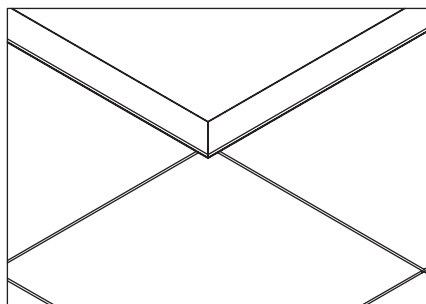


8 Place and align the flooring to the profile.

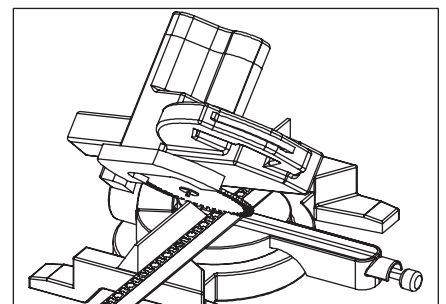

9 Cut profiles 45 degrees for internal corners.

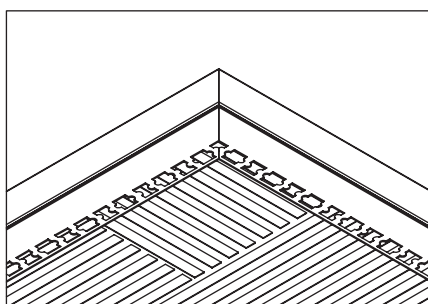

10 Align the profiles at the internal corners and press them into the joint.

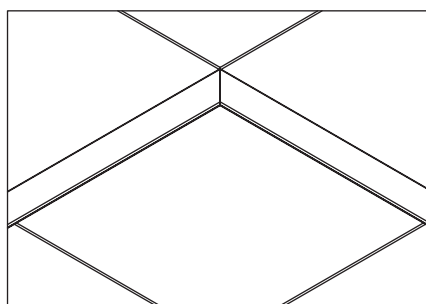

11 Place and align the flooring to the profile.