

МОХ-системы - техническая документация

assembly-manual-revio-en.pdf

Технический перевод: размеры см. в оригинальных чертежах и на справочных страницах.

Исходная страница 1

РУКОВОДСТВО ПО СБОРКЕ Revio

Нанесение клея

- 1 Нанесите на профиль силикон или шов.
- 2 Прикрепите профиль к полу и прижмите его.
- 3 Поместите ковер на профиль.

Применение с винтом


- 11 Закрепите профиль шурупами.
- 2 Поместите ковер на профиль.

Кёше Бирлешимлери


- 1 Обрежьте профили под углом 45 градусов для внутренних углов.
- 2 Выровняйте профили по внутренним углам и вставьте их в стык.
- 3 Поместите ковер на профиль.
4. Обрежьте профили под углом 45 градусов для внешних углов.
- 5 Выровняйте профили по внешним углам и вставьте их в стык.
- 6 Поместите ковер на профиль.

Оригинальные чертежи и справочные страницы


Application with Adhesive

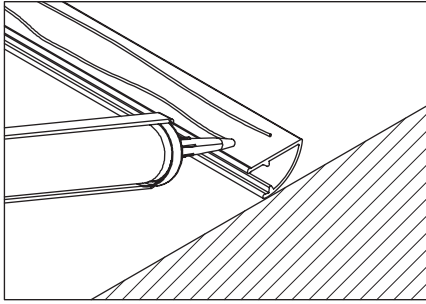

1 Apply silicone or joint to the profile.

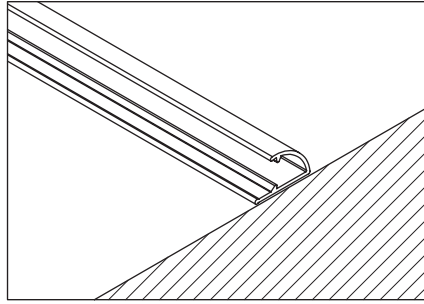


2 Fix the profile to the floor and press it.

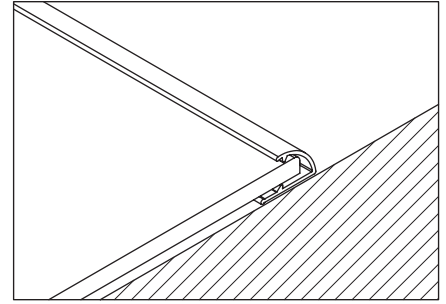


3 Place the carpet to the profile.

Application with Screw

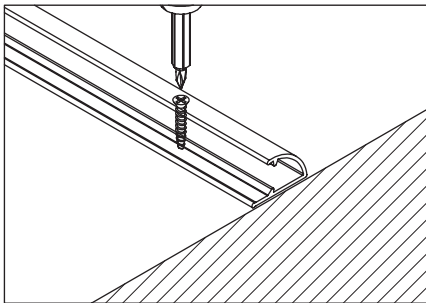


1 Fix the profile with screws.

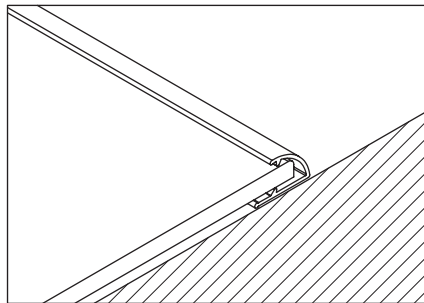


2 Place the carpet to the profile.


Köşe Birleşimleri

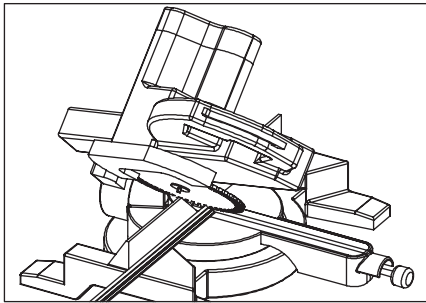


1 Cut profiles 45 degrees for internal corners.

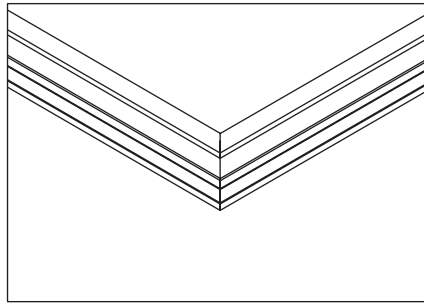


2 Align the profiles at the internal corners and place them into the joint.

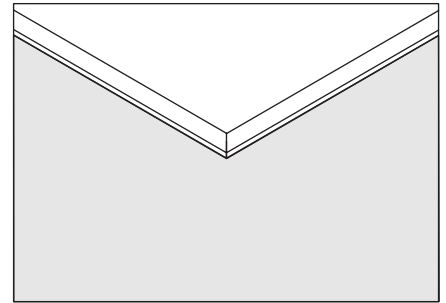


3 Place the carpet to the profile.

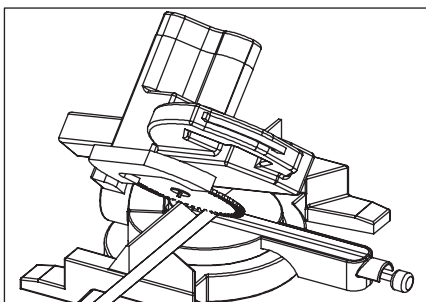

4 Cut profiles 45 degrees for external corners.

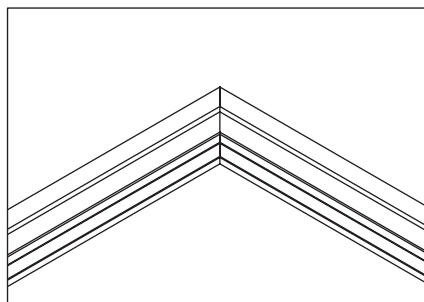

5 Align the profiles at the external corners and place them into the joint.

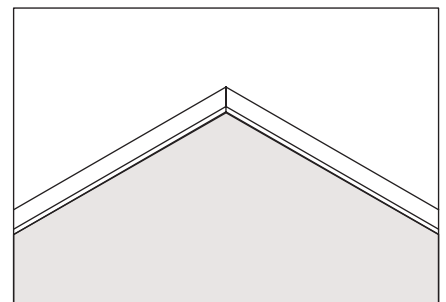

6 Place the carpet to the profile.